

A1	Instrument cluster	8M 12M 27M	N4/1	EA/CC/ISC control module	1M	X62/8	Rear axle multiple circuit junction connector	16I
			N7	Exterior lamp failure monitoring module	5M	X83/5	Instrument cluster connector (ASR MIL) (2-pole)	23F
			N16/1	Base module (BM)	9M	X83/7	ASR function indicator connector (1-pole)	15I
A1e7	Low brake fluid level/parking brake indicator lamp	8M	N30/1	ASR control module	15A	Z7	Circuit 30 connector sleeve	24F
A1e17	ABS MIL	28M	S1	Exterior lamp switch	14M	Z94	Brake lamp switch N.O. contact connector sleeve (feed from brake lamp switch - S9/1, n.o. contact)	2F
A1e21	ASR warning lamp	13M	S9/1	Stop lamp switch (4-pole)	3M	Z95	Brake lamp switch N.C. contact connector sleeve (feed from brake lamp switch (S9/1), N.C. contact)	2F
A1e22	ASR MIL	27M	S11	Brake fluid level switch	8M	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
A7/3	ASR/ETS/ESP hydraulic unit	22M	S12	Parking brake switch	6M			
A7/3k1	Solenoid valve relay	22L	S76	ASR snow chain switch (with indicator)	11M	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		
A7/3k2	High-pressure/return pump relay	20L	V5	Disconnect diode (parking brake/ASR/EA)	7M			
A7/3m1	High-pressure/return pump	19L	W1	Main ground (behind instrument cluster)				
A7/3s1	Pressure switch	24H	W14	Ground (ABS hydraulic unit bracket)				
A7/3y1	Left front axle solenoid valve	25H	W16	Ground (component compartment)				
A7/3y2	Right front axle solenoid valve	25I	W27	Ground (module box bracket)				
A7/3y3	Left rear axle solenoid valve	25K		Ground location without designation, component grounded directly on engine, chassis or body				
A7/3y4	Right rear axle solenoid valve	25K	X4/10	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	14F 21F			
A7/3y5	Switchover/solenoid valve	25L	X6/1	Terminal block (circuit 58d) (1- or 2-pole)	10H			
F1	Fuse and relay box		X11/4	Data link connector (DTC readout)	5H			
F1-5	Fuse 5, circuit 15	5L	X11/18	EA connector (chassis)	11F 26H			
F1-7	Fuse 7, circuit 15	10L 29L	X33/14	CC connector (cockpit/engine) (10-pole)	3H 27H			
L6/1	Left front axle VSS sensor	29M	X35/7	Cockpit/module box separation point (12-pole)	6H			
L6/1x1	Left front axle VSS sensor connector	29K	X35/8	Cockpit/module box separation point (EA/CC/ISC) (14-pole)	5F			
L6/2	Right front axle VSS sensor	30M	X62/3	Rear axle VSS sensor connector (ASR) (8-pole)	16F			
L6/2x1	Right front axle VSS sensor connector	30K						
L6/3	Left rear axle VSS sensor	17M						
L6/4	Right rear axle VSS sensor	16M						
M15	ASR/ESP charging pump	18M						



