

A1	Instrument cluster	9M
A1e17	ABS MIL	9M
A7	ABS hydraulic unit	14M
A7k1	Solenoid valve relay	14M
A7k2	Return/charging pump relay	12M
A7m1	Return/charging pump	11M
A7y1	Left front axle solenoid valve	16H
A7y2	Right front axle solenoid valve	16I
A7y3	Rear axle solenoid valve	16K
F1	Fuse and relay box	
F1-5	Fuse 5, circuit 15	6L
F1-7	Fuse 7, circuit 15	10L
L6/1	Left front axle VSS sensor	17M
L6/1x1	Left front axle VSS sensor connector	17K
L6/2	Right front axle VSS sensor	18M
L6/2x1	Right front axle VSS sensor connector	18K
L6/4	Right rear axle VSS sensor	2M
N4/3	CC/ISC control module	2M
N7	Exterior lamp failure monitoring module	7M
N16/1	Base module (BM)	7M
N30	ABS control module	10A
S9/1	Stop lamp switch (4-pole)	4M
W14	Ground (ABS hydraulic unit bracket)	
W16	Ground (component compartment)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X4/10	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	6F 13F

X11/4	Data link connector (DTC readout)	8H
X33/14	CC connector (cockpit/engine) (10-pole)	3H 9H
X35/7	Cockpit/module box separation point (12-pole)	5H
X35/8	Cockpit/module box separation point (EA/CC/ISC) (14-pole)	7F
X62/3	Rear axle VSS sensor connector (ASR) (8-pole)	1F
X62/8	Rear axle multiple circuit junction connector	1I
X83/5	Instrument cluster connector (ASR MIL) (2-pole)	9F
Z94	Brake lamp switch N.O. contact connector sleeve (feed from brake lamp switch - S9/1, n.o. contact)	4F
Z95	Brake lamp switch N.C. contact connector sleeve (feed from brake lamp switch (S9/1), N.C. contact)	4F
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		



