

F1	Fuse and relay box	
F1-A	Fuse A, circuit 15R/30	14L
F1-C	Fuse C, circuit 30	3E 5E
M14/1	Supply pump (CL)	6A 12A
M14/1x1	Supply pump voltage supply connector (CL)	6B 12B
M14/1x2	Supply pump control line connector (CL)	1B 11B
M14/2	Supply pump (CL/OSB)	6A 12A
M14/2x1	Supply pump voltage supply connector (CL/OSB)	6B 12B
M14/2x2	Supply pump control line connector (CL/OSB)	1B 11B
S8/2	Warning buzzer contact (exterior lamps/CL)	2M 6M
S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	2K 5K
S17/11	Left door switch (SBE, entrance/exit lamp)	3M
S47	Left front door actuator	8M
S48	Right front door actuator	1M
S49	Tailgate lock actuator	9M
S49	Trunk lid lock actuator	11M 12M 13M
U13	Valid for Coup	

U21	Valid for sedan	
U22	Valid for station wagon	
U23	Valid for cabriolet	
W1	Main ground (behind instrument cluster)	
W12	Ground (center console)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X30	Accessory equipment connector block	4C 4M 6C 7M 15A
X43	ATA connector (CL system) (3-pole)	1F 11F
X44/1	CL system connector (trunk lock)	9K
Z7	Circuit 30 connector sleeve	6E 12K
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

