

E10/3	Right air outlet illumination	21A
E15/4	Dome/reading lamp (with seat belt reminder lamp)	23A
F1	Fuse and relay box	
F1-A	Fuse A, circuit 15R/30	21L
F1-E	Fuse E, circuit 15R/30	16L
F1-F	Fuse F, circuit 15R/30	15L
F1-2	Fuse 2, circuit 15R	18L
F1-9	Fuse 9, circuit 30	18L
K24	CF relay module	19M
M12	Sliding/pop-up roof drive assembly	22M
M20	ESC motor	38M
M27	Left front ESA motor group (with memory)	5M
M27m1	Fore/aft motor	1M
M27m2	Rear raise/lower motor	3M
M27m3	Front raise/lower motor	5M
M27m4	Head restraint raise/lower motor	8M
M27m5	Backrest fore/aft motor	6M
M28	Right front ESA motor group (with memory)	28M
M28m1	Fore/aft motor	25M
M28m2	Rear raise/lower motor	26M
M28m3	Front raise/lower motor	28M
M28m4	Head restraint raise/lower motor	31M
M28m5	Backrest fore/aft motor	30M
N32/1	Left front ESA control module (with memory)	8A
N32/2	Right front ESA control module (with memory)	16A 30A
N32/9	EMSC control module (with memory)	38A

N57	CF control module (power windows, sliding/pop-up roof)	23M
S8/2	Warning buzzer contact (exterior lamps/CL)	20A
S13/2	Sliding/pop-up roof switch	21M
S17/3	Left front door switch	19A
S17/4	Right front door switch	22A
S22	Left front ESA switch	13M
S22s1	Head restraint up/down	13K
S22s2	Front seat height	13L
S22s3	Seat fore/aft	11L
S22s4	Rear seat height	11K
S22s5	Backrest	12K
S22s6	Position # 1	11K
S22s7	Position # 2	13K
S22s8	Memory	12K
S23	Right front ESA switch	35M
S23s1	Head restraint up/down	35K
S23s2	Front seat height	35L
S23s3	Seat fore/aft	33L
S23s4	Rear seat height	33K
S23s5	Backrest	34K
S23s6	Position # 1	33K
S23s7	Position # 2	35K
S23s8	Memory	34K
S59	ESC switch	39M
S59x1	ESC switch connector	39K
W1	Main ground (behind instrument cluster)	

Grounds not indicated, components are connected on engine block or bodywork		
X4/1	Terminal block (circuit 30, interior)	18I
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	9F 32F
X30	Accessory equipment connector block	10M
X34/10	Left front door contact switch multipoint connector	20F
X44/3	CF intermediate connector (2-pole)	22H
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		





