


A1	Instrument cluster	21M	Grounds not indicated, components are connected on engine block or bodywork	Y62y4	Valve (cylinder 4)	6M
A1p7	Electronic clock/tachometer	21M		Y62y5	Valve (cylinder 5)	7M
B2/2	Hot wire mass air flow sensor	1M		X4/1	Terminal block (terminal 30, interior)	29H
B11/2	Engine coolant temperature sensor (4-pole)	13M		X11/4	Data link connector	17M 22M 28F
B17/7	Intake air temperature sensor	13M				
F1	Fuse and relay box			X26	Interior/engine connector (12-pole)	20H
F1-B	Fuse B, terminal 15	33L		X26/2	Engine plug connection (36-pole)	2H
F1-5	Fuse 5, terminal 15	34L		X27	Starter harness connector	36H
F1-6	Fuse 6, terminal 15	28L		X35/7	Cockpit/module box plug connection (12-pole)	36F
F1-7	Fuse 7, terminal 15	20L		X35/8	Cockpit/module box plug connection (electronic accelerator/cruise control/idle speed control) (14-pole)	37F 15G
G3/2	Heated oxygen sensor	14M		X42	Anti-theft alarm connector (front/rear)	30H
G3/2x1	Oxygen sensor connector (4-pole)	14K		X49/2	Backup lamp/starter lock-out switch connector	34H
K17	Secondary air injection relay module	23M		Y3/3	Upshift delay switchover valve	26M
K38	Starter lock-out relay module	31M		Y27	EGR switchover valve	27M
M1	Starter	36M		Y32	Secondary air injection pump switchover valve	24M
N3/1	LH sequential multipoint fuel injection control module	18A		Y33	Electromagnetic secondary air injection pump clutch	25M
N4/1	Electronic accelerator/cruise control module	15M 37M		Y33x1	Electromagnetic secondary air injection pump clutch connector	25K
N16/1	Base module	18M		Y49/1	Left adjustable camshaft timing solenoid	10M
N26	Anti-theft alarm control module	30M		Y49/2	Right adjustable camshaft timing solenoid	9M
S2/1	Ignition/starter switch	29M		Y58/1	Purge switchover valve	27M
S16/3	Starter lock-out/backup lamp switch (transmission range recognition)	35M		Y62	Fuel injection valves	6M
S26/1	Heated windshield washer system thermoswitch	19M		Y62y1	Valve (cylinder 1)	4M
W11	Ground (engine - connection point for ground wires)			Y62y2	Valve (cylinder 2)	5M
W14	Ground (ABS hydraulic unit bracket)			Y62y3	Valve (cylinder 3)	5M
W16	Ground (component compartment)					
W27	Ground (module box bracket)					
				Z6	Ground (W11) connector sleeve (feed from W11)	12F
				Z7	Terminal 87E connector sleeve	9F
				Z7/4	Terminal 87 connector sleeve (feed from base module - N16/1 for injection valves)	4I 8I
				Z7/5	Terminal 87 connector sleeve (feed from base module - N16/1)	10I
				Z7/6	Terminal 87 connector sleeve (chassis, SFI, feed from base module - N16/1)	10F 27F
				Z13	Connector sleeve 5	12I
				Z20/3	Cable end not insulated, placed inside insulated tubing	15E 15H
				Z20/5	Cable end not insulated, placed inside insulated tubing	29E
				Z95	Brake lamp switch opener connector sleeve (feed from brake lamp switch (S9/1), opener)	16I
				Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
				Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		

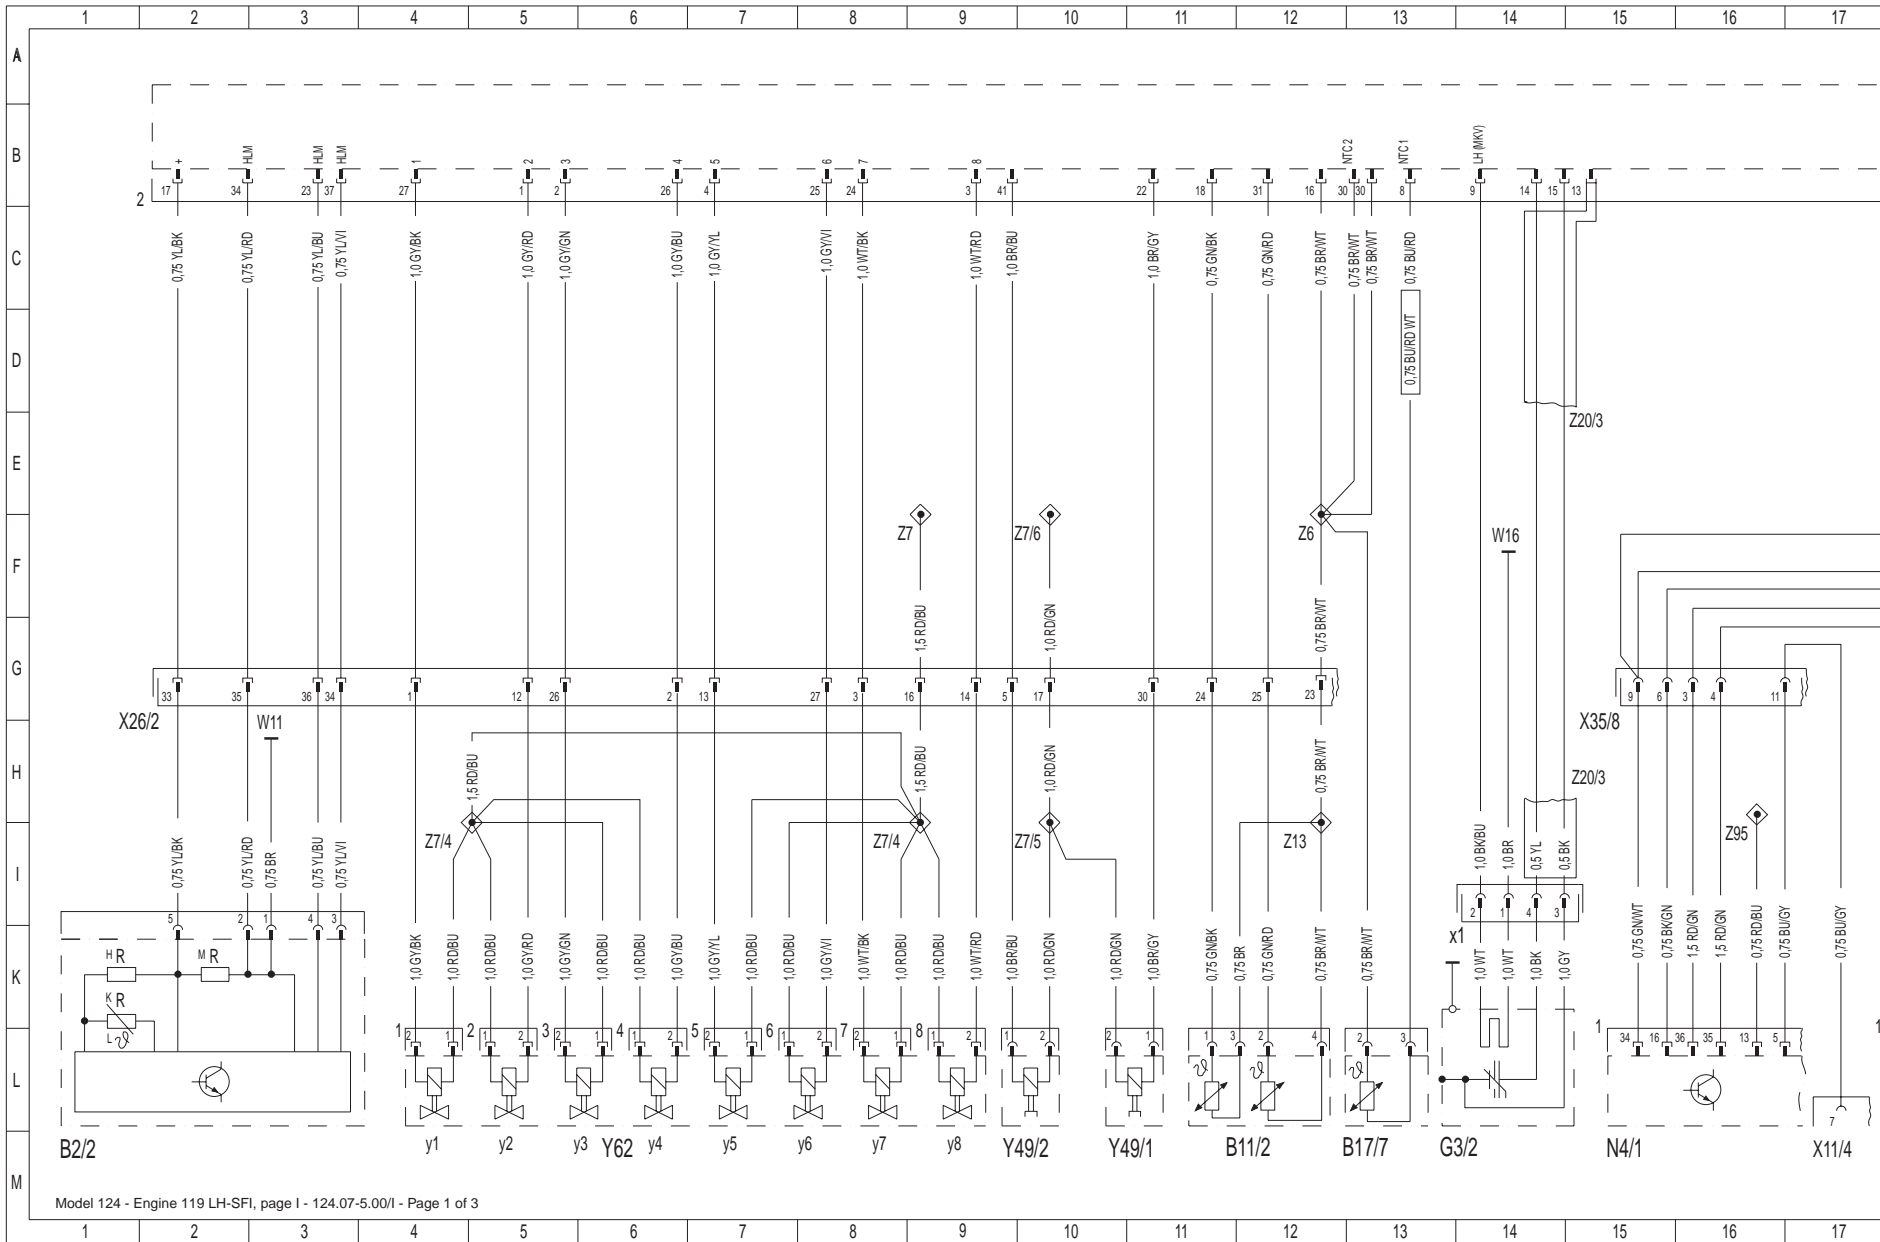

N3/1

