

A1	Instrument cluster	4M
A1e15	SRS MIL	5M
A45	Horn/airbag clock spring contact	10I
A45x1	Horn/airbag clock spring contact connector	10G
F1	Fuse and relay box	
F1-2	Fuse 2, circuit 15R	1L
N2/2	SRS control module	7A
R12/1	Left front ETR squib	12M
R12/2	Right front ETR squib	12M
R12/3	Driver AB squib	9M 10M
R12/4	Front passenger AB squib 1	7M
R12/5	Front passenger AB squib 2	7M
S68/3	Left front seat belt buckle switch (AB/ETR)	13M
S68/3x1	Left front seat belt buckle switch connector (AB/ETR)	13K
S68/4	Right front seat belt buckle switch (ETR)	14M
S68/4x1	Right front seat belt buckle switch connector (AB/ETR)	14K
W12	Ground (center console)	
W16	Ground (component compartment)	
	Grounds not indicated, components are connected on engine block or bodywork	
X11/4	Data link connector (DTC readout)	2M 3M
X11/13	SRS test connector (10-pole)	5F 6F 9E
X28/2	SRS voltage supply connector (1-pole)	1F

X28/4	Driver AB squib connector (2-pole)	9G
X28/5	AB squib slip ring (2-pole)	9I
X28/7	AB test connector	3F
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		

