


124.82-48.00	Radio MB with Active-Bass-Speaker System (except Model 124.034/.036)	As of MY 1994	Page 1 of 1
--------------	--	---------------	-------------

A1 Instrument cluster 12M	R3e1 Illumination 10M
A1r1 Instrument illumination rheostat 12M	R3r1 Heating element 11M
A2 Radio 11A	R3x1 Illuminated cigar lighter connector 10K
A2F1 Fuse (inside radio) 16A	W6 Ground (left wheelhousing in trunk)
A28 Antenna (radio, CB, telephone) 17M	W12 Ground (center console)
A35 CTEL transmitter-receiver 13M	W18 Ground (left front seat crossmember)
B6 Hall-effect speed sensor 14M	W31 Ground strap (antenna)
F1 Fuse and relay box	Ground location without designation, component grounded directly on engine, chassis or body.
F1-1 Fuse 1, circuit 15R 9L	
F1-9 Fuse 9, circuit 30 4L 9L	X1/4 Automatic antenna connector 15H
F1-C Fuse C, circuit 30 15L	X1/5 Sound system feed connector (amplifier - circuit 30) 3H
H4/5 Left front door speaker 2M	X1/8 Taillamp harness, radio/sound system connector 9H
H4/5x1 Left front door speaker connector 1K	X2/2 VSS connector (radio) (2-pole) 13E
H4/6 Right front door speaker 3M	X53/5 Hall-effect sensor multipoint connector (VSS) 13H
H4/6x1 Right front door speaker connector 3K	Z Connector sleeve (solder joint in harness) 5G 5H 6E 6F
H4/7 Left rear speaker 7M	
H4/7x1 Left rear speaker connector 7K	
H4/8 Right rear speaker 8M	Z28/18 Sound system/antenna control connector sleeve 1E 15E
H4/8x1 Right rear speaker connector 8K	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.
H4/9 Left front speaker 5M	
H4/9x1 Left front speaker connector 5K	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C
H4/10 Right front speaker 6M	
H4/10x1 Right front speaker connector 6K	
M11 Automatic antenna (radio/telephone) (USA) 16M	
N2/4 Seat belt warning module (USA) 11M	
N40/3 Left/right audio power amplifier 3A	
R3 Front cigar lighter (with ashtray illumination) 10M	

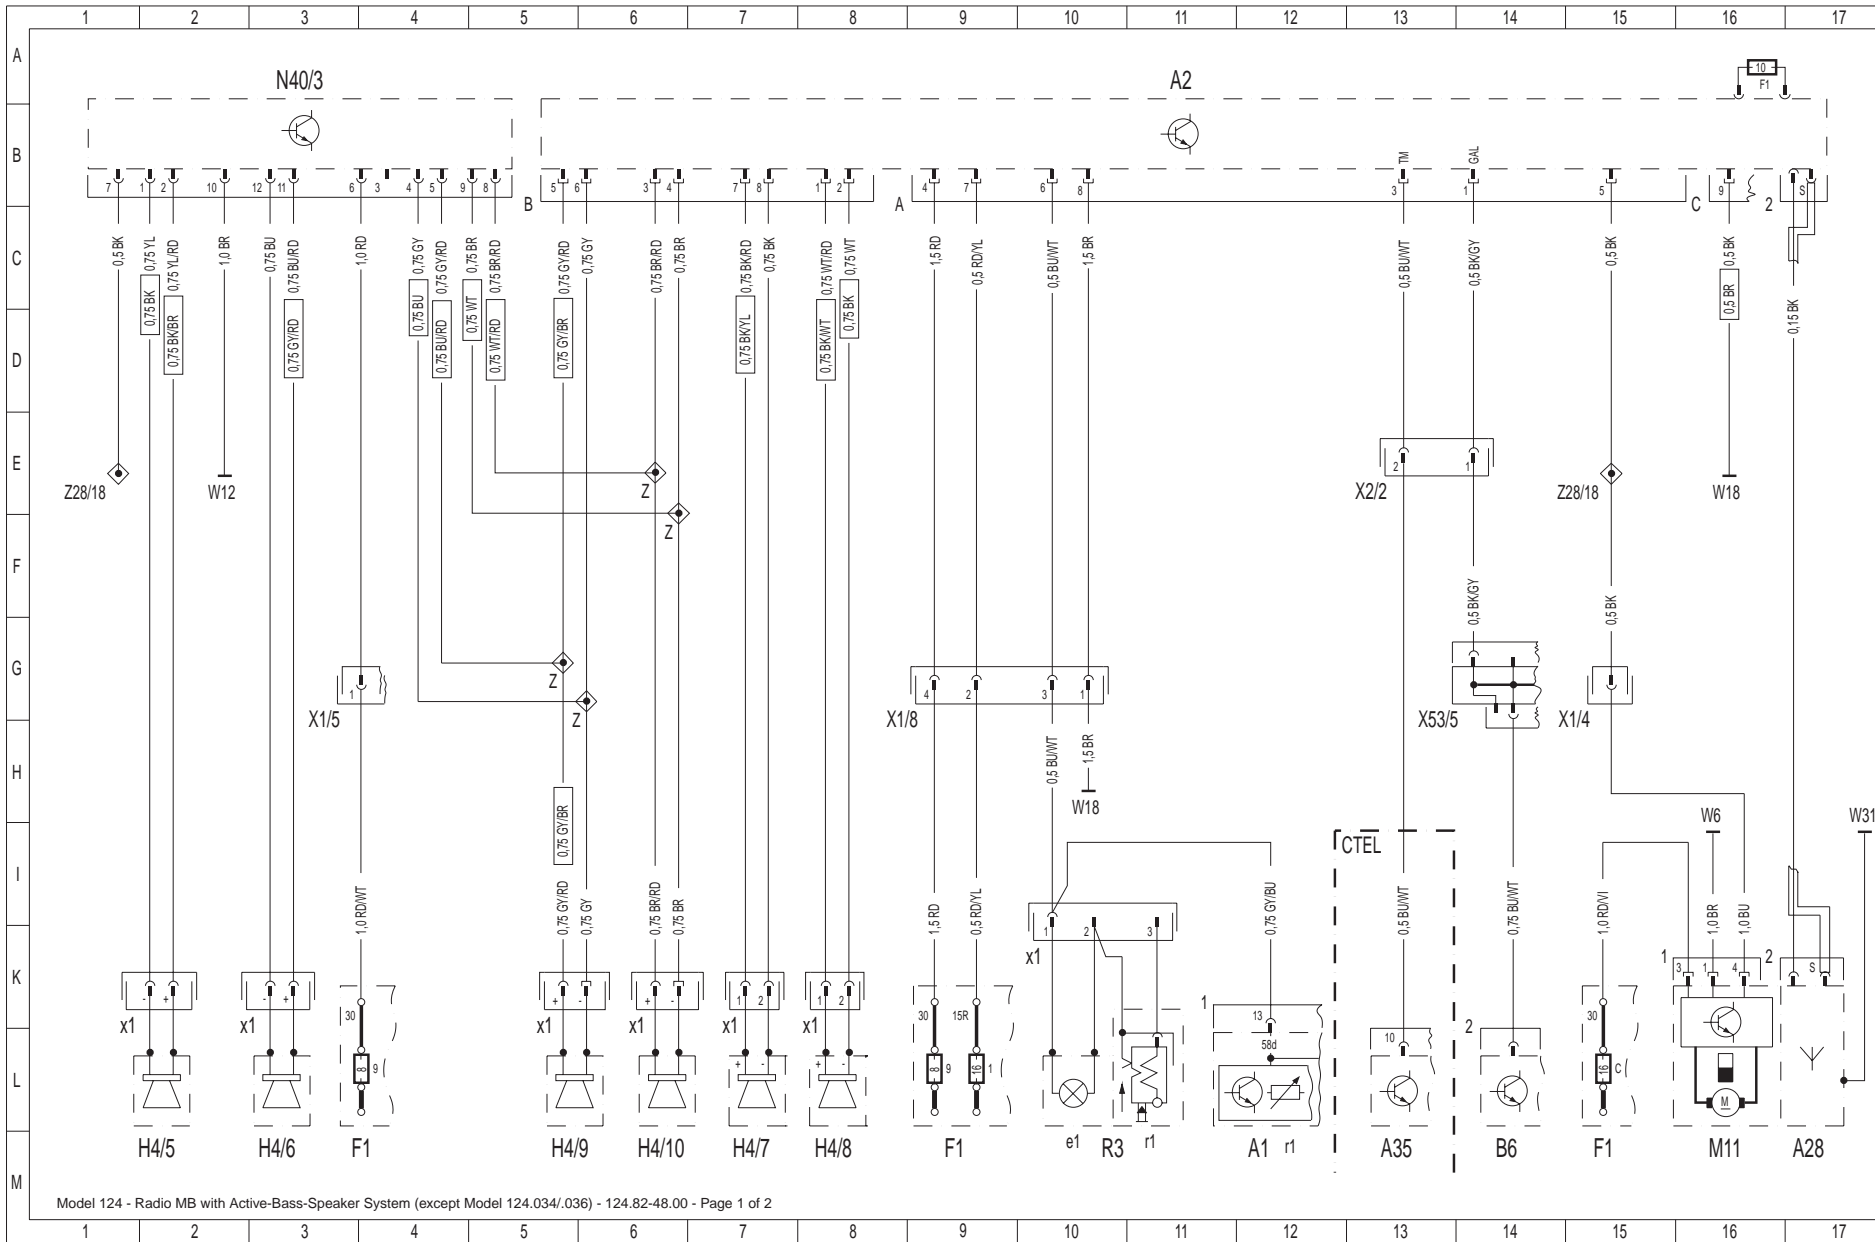


	18	19	20	A
				B
				C
				D
				E
				F
				G
				H
				I
				K
				L
				M
	18	19	20	

P54-6065-94A  
124.82-48.00

124.82-37.00	Radio MB with CD Changer	As of MY 1994	Page 1 of 1
--------------	--------------------------	---------------	-------------

A2	Radio	4A
A2/6	CD changer (in trunk)	2M
F1	Fuse and relay box	0
F1-1	Fuse 1, circuit 15R	6L
F1-9	Fuse 9, circuit 30	6L
W18	Ground (left front seat crossmember)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X1/8	Taillamp harness, radio/sound system connector	6E
Z20	Shielding placed inside insulated tubing	3C
Z20/2	Shielding placed inside insulated tubing	1D
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

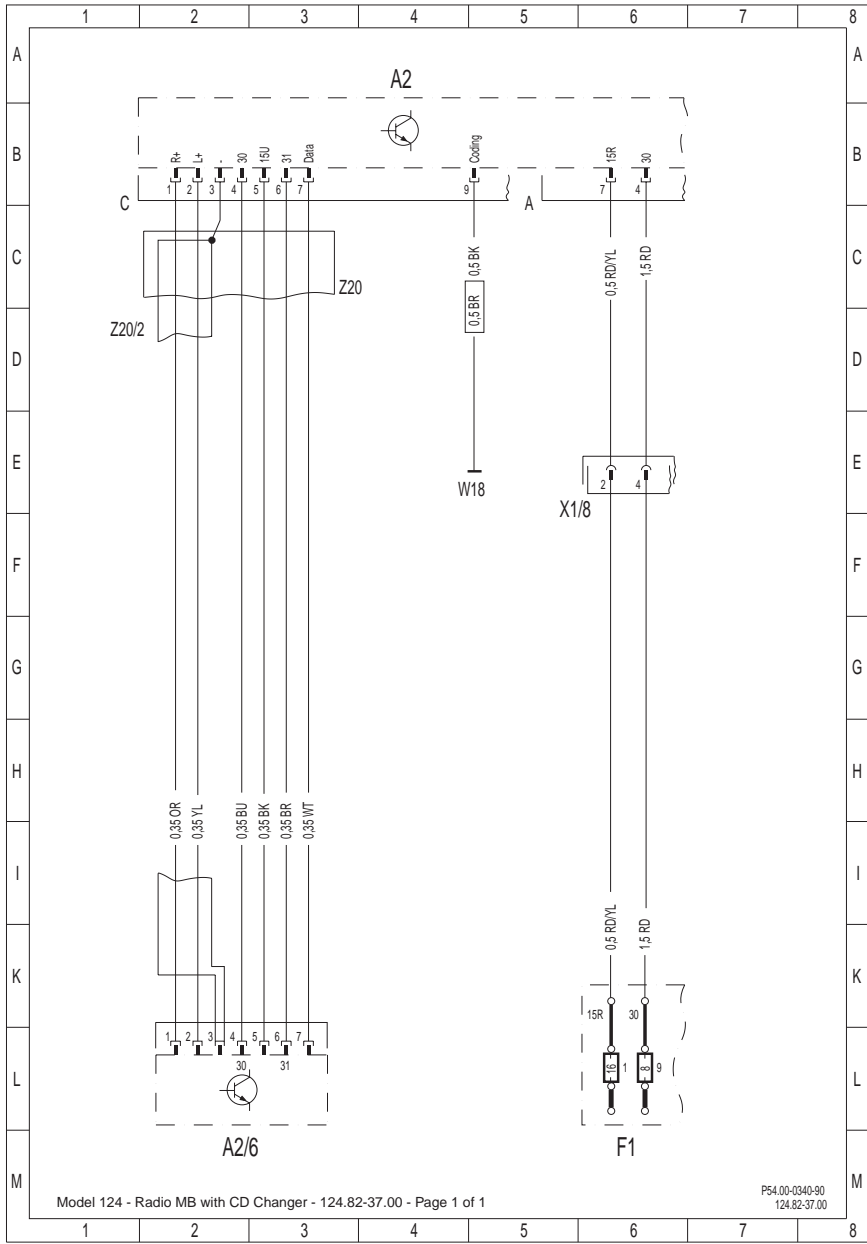

A1	Instrument cluster	14M
A1r1	Instrument illumination rheostat	15M
A2	Radio	14A
A2F1	Fuse (inside radio)	19A
A28	Antenna (radio, CB, telephone)	19M
A35	CTEL transmitter-receiver	15M
B6	Hall-effect speed sensor	16M
F1	Fuse and relay box	
F1-3	Fuse 3, circuit 58R	12L
F1-9	Fuse 9, circuit 30	4L 12L
F1-C	Fuse C, circuit 30	17L
H4/5	Left front door speaker	1M
H4/5x1	Left front door speaker connector	1K
H4/6	Right front door speaker	6M
H4/6x1	Right front door speaker connector	6K
H4/7	Left rear speaker group	3M
H4/7h1	Speaker 1	3M
H4/7h2	Speaker 2	4M
H4/7h1x1	Left rear speaker group speaker 1 connector	3K
H4/7h2x1	Left rear speaker group speaker 2 connector	3K
H4/8	Right rear speaker group	8M
H4/8h1	Speaker 1	8M
H4/8h2	Speaker 2	9M
H4/8h1x1	Right rear speaker group speaker 1 connector	8K
H4/8h2x1	Right rear speaker group speaker 2 connector	8K
H4/9	Left front speaker	2M
H4/9x1	Left front speaker connector	2K

H4/10	Right front speaker	7M
H4/10x1	Right front speaker connector	7K
M11	Automatic antenna (radio/telephone) (USA)	18M
N2/4	Seat belt warning module (USA)	14M
N40/1	Left speakers audio power amplifier	3A
N40/2	Right speakers audio power amplifier	7A
R3	Front cigar lighter (with ashtray illumination)	13M
R3e1	Illumination	13M
R3r1	Heating element	13M
R3x1	Illuminated cigar lighter connector	12K
W6	Ground (left wheelhousing in trunk)	
W12	Ground (center control)	
W18	Ground (left front seat crossmember)	
W31	Ground strap (antenna)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X1/4	Automatic antenna connector	17H
X1/5	Sound system feed connector (amplifier - circuit 30)	4H
X1/8	Taillamp harness, radio/sound system connector	11H
X2/2	VSS connector (radio) (2-pole)	15E
X53/5	Hall-effect sensor multipoint connector (VSS)	16H
Z	Connector sleeve (solder joint in harness)	5D
Z7	Circuit 30 connector sleeve	4D
Z28/5	Left front door speaker group connector sleeve (+ signal)	2G
Z28/6	Left front door speaker group connector sleeve (? signal)	1G

Z28/7	Right front door speaker group connector sleeve (+ signal)	7G
Z28/8	Right front door speaker group connector sleeve (? signal)	6G
Z28/18	Sound system/antenna control connector sleeve	5D 17E
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		



