

Service Manual

● Repairs
and maintenance

Section 3 (34)

Ignition systems

240, 260
1975-

VOLVO

Volvos are sold in versions adapted for different markets. These adaptations depend on many factors including legal, taxation and market requirements.

This manual may therefore show illustrations and text which do not apply to cars in your country.

Group 34 Ignition system

Contents

	Page
Special tools	2
General instructions	3
Specifications: Ignition system with contact breaker	5
Breakerless ignition system	10
Computerized ignition system	21
Inspection of Ignition system with contact breakers B 20 A, B 17-B 23 A	24
Breakerless ignition system B 20 F, B 19 E, ET, B 21 E, ET, F FT, B 23 E, B 27/28 A, E and F	37
Computerized ignition system B 21 F-MPG (1981), B 21 F-CI (1982), B 21 F-LH (1982), B 23 F-LH (1983-1984), B 230 F-LH (1985-)	57

Index page 79


Indicates revised information:

Order number: TP 30432/2


We reserve the right to make alterations
without prior notification.

Special tools


999	Description—Use
9724	Ohm-Diode Tester
9921	Monotester – Dwell angle, ignition setting
9940	Stroboscope – Ignition setting
5275	Flywheel Adapter – Ignition setting MY 1984–

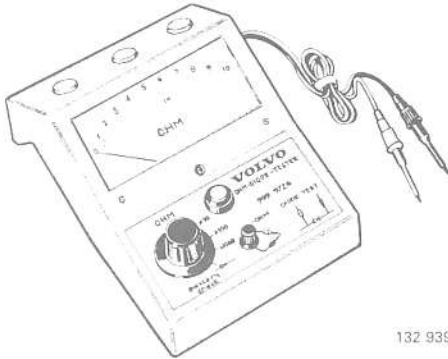


132 939

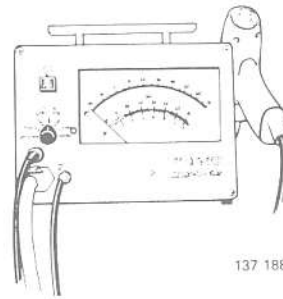

137 188

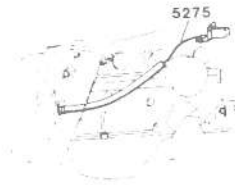


Ignition system – general instructions

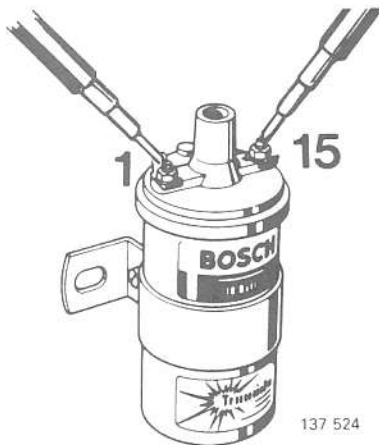

Measuring resistance

Before measuring the resistance of a component make sure that all leads have been disconnected from it.

Resistance values specified in this manual apply at 20°C (68°F).

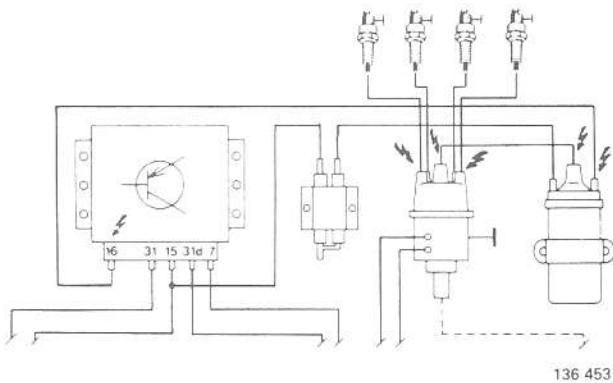

Electronic ignition systems

Electronic ignition systems operate at very high voltages – often in excess of 30 000 V. Such high voltages are a danger to life and special precautions must be taken when working on vehicles so fitted.

The ⚡ symbol used throughout this manual indicates terminals where dangerous high voltages can be expected.



Engine type and model year designation

11 = B317 (B 20 1975–76)	6 = B27 (1975–79)
2 = B 19	61 = A
21 = A	64 = E (–1980)
24 = E	65 = F
26 = E-Turbo	6 = B28 (1980–)
4 = B21	62 = A
41 = A	68 = E (1981–)
44 = E	69 = F
45 = F (5)	8 = B23/B230
46 = E-Turbo	81 = A
47 = F-Turbo	84 = E
48 = F (8)	88 = F
49 = F (9)	

USA/Canada

–1980: VC 244 45 L 1 000 000
 1981–: YV1 AX 45 4X B 1 000 000


Other markets

–1980: 245 45 L 1 000 000
 1981–: YV1 244 46 1B 1 000 000


137 189

Bosch part numbers

Stamped in side of distributor body.

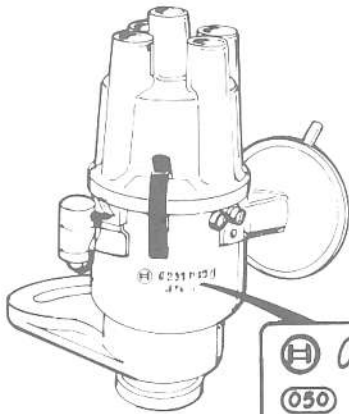

← Bosch number

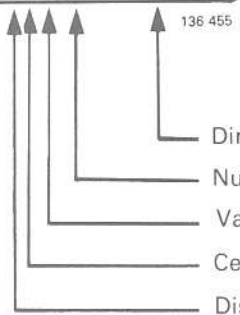

136 455
Direction of rotation

Number of cylinders

Vacuum advance

Centrifugal advance

Distributor body diameter

J = ≤ 70 mm

P = 71–83 mm


T = ≥ 84 mm

Specifications

Ignition system with contact breaker

B 20 A, B 17–B 23 A


Ignition coil

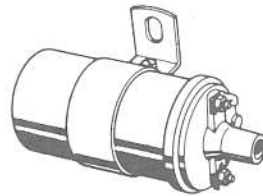

131 753

	A-engines –1978	A-engines 1979–
Resistance of primary coil (across terminals 1(-) and 15(+))	2.85±0.15 Ω	1.9±0.1 Ω
Resistance of secondary coil (across terminals 1(-) and HT terminal)	9.5±2.5 kΩ	9.5±1.5 kΩ
Ballast resistor	–	1.3±0.1 Ω (0.9±0.1 Ω early 79)



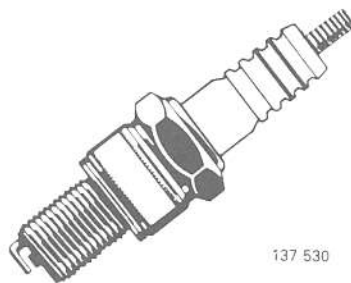




Spark plugs



137 530

B 20	Bosch W 7 B
B 17–B 23	Bosch W 7 DC
Electrode gap	0.7–0.8 mm
Tightening torque (unoiled plug)	25±5 Nm (18±3.5 ft.lbs)

High tension leads*

	240	240	
1975	 1 k Ω 0 Ω/m 1 k Ω	 0 Ω 0 Ω/m 1,4 k Ω	
1976–80	 0 Ω 5,6 kΩ/m 0 Ω	 1 k Ω 0 Ω/m 1 k Ω	
1981–	 0 Ω 5,6 kΩ/m 0 Ω	 1 k Ω 0 Ω/m 5 k Ω	
	136 523	136 524	

*Note: Resistance values are given in K Ω -per-meter of length. (Measure lead in order to compute correct value.) All values have a permissible tolerance of ± 20%.

Specifications

Ignition system with contact breaker

Rotor

Resistance $5 \pm 1 \text{ k}\Omega$




134 578

Firing order


B 20

1-3-4-2

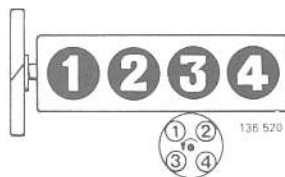

B 17-B 23

1-3-4-2

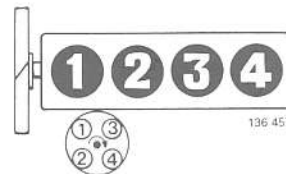

Ignition setting

With effect from 1976, vehicles for Sweden, Australia, USA and Canada (also Switzerland 1983-models) have details of ignition setting stamped on a plate to left of engine compartment.

Ignition setting (before T.D.C., vacuum control unit disconnected)			
Engine type	Model year/Market	11.7–13.3 r/s 700–800 r/min	41.7 r/s 2 500 r/min
B 17 A	1979–84	12°	28–32°
B 19 A	1977 ¹⁾ 1978 Italy 1978–80 Other markets 1981–84	15° 15° 12° 10°	32–36° 32–36° 28–32° 26–30°
B 19 K		7°	17–23°
B 20 A	1975–76	10°	23–27°
B 21 A	1975 1976–77 ¹⁾ 1978 Sweden ³⁾ Other markets 1979–80 ²⁾ 1981 Scandinavia, Australia Other markets 1982–83 Scandinavia, Australia Canada Other markets 1984 Scandinavia, Switzerland Australia Europe Canada	12° 15° 12° 15° 12° 10° 12° 10° 10° 7° 12° 10° 10° 7° 10° 10° 7° 7°	24–28° 32–36° 28–32° 32–36° 28–32° 26–32° 28–32° 26–32° 24–30° 28–32° 26–32° 24–30° 28–32° 20–26° 26–32° 17–23° 24–30°
B 23 A	1981–82 Scandinavia ⁴⁾ 1982 Other markets 1983–84 Europe Overseas	7° 5° 7° 5°	21–26° 19–24° 17–22° 19–24°

Special vehicles

¹⁾ Sweden: 245 with BW 35, BW 55, M 46 and special vehicles 10°

²⁾ 1979–80: Sweden, Overseas with engine types 498 755 and 498 811 and special vehicles with manual gearbox 10°

Special vehicles with automatic gearbox 8°

³⁾ 240 with engine type 498 528 15° and 32–36°


⁴⁾ Ignition setting can be retarded to 5° if, despite using 98 octane fuel, engine is prone to pre-ignition (knocking).

Special vehicle refers to heavy vehicle types such as 245 GL with automatic transmission.

Distributor

Engine type	Model year	Market (Applies to all markets unless otherwise stated)	Bosch No.	Volvo No.
B 17 A	1979-80 1981-84		0 231 176 103 0 185	1 266 478 1 219 661
B 19 A	1977 1978 1979 1980 1981-84	Italy Other markets Thailand, Malaysia, Indonesia Other markets	0 185 0 185 6 103 6 103 0 185 6 103 0 185	1 219 661 1 219 661 1 266 478 1 266 478 1 219 661 1 266 478 1 219 661
B 19 K	1984		0 302	1 332 410
B 20 A	1975-76		0 085	462 657
B 21 A	1975 1976-77 1978 1979 1980 1981-83 1984	Sweden, Canada Other markets Sweden, Australia, Canada, Overseas Other markets (incl. Thailand, Indonesia) Sweden, Australia, Canada, Overseas Other markets (incl. Malaysia, Thailand, Indonesia) Canada Sweden, Australia (1982- also Switzerland, Canada) Other markets Europe Australia, Canada	0 134 0 173 0 185 6 103 0 185 6 103 0 185 6 103 0 185 6 103 0 284 0 185 0 302 0 284	463 692 1 219 625 1 219 661 1 266 478 1 219 661 1 266 478 1 219 661 1 266 478 1 219 661 1 266 478 1 306 792 1 219 661 1 332 410 1 306 792
B 23 A	1981-82 1983-84	Europe Other markets	0 287 0 302 0 287	1 306 872 1 332 410 1 306 872

Ignition setting

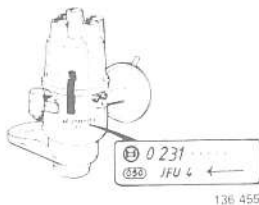

Bosch number at bottom left of diagrams is stamped in distributor body.



Diagram key:



Variation of ignition setting with vacuum









Variation of ignition setting with engine rpm

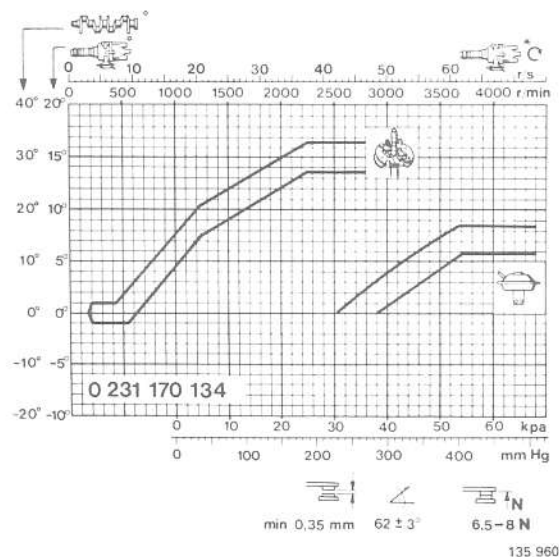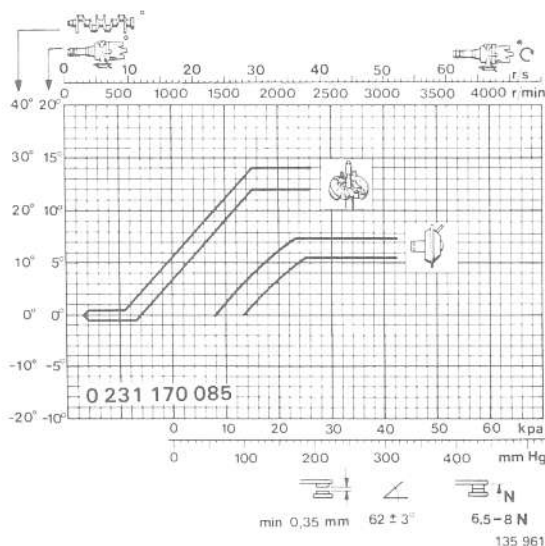

Specifications

Ignition system with contact breaker

Ignition setting graphs

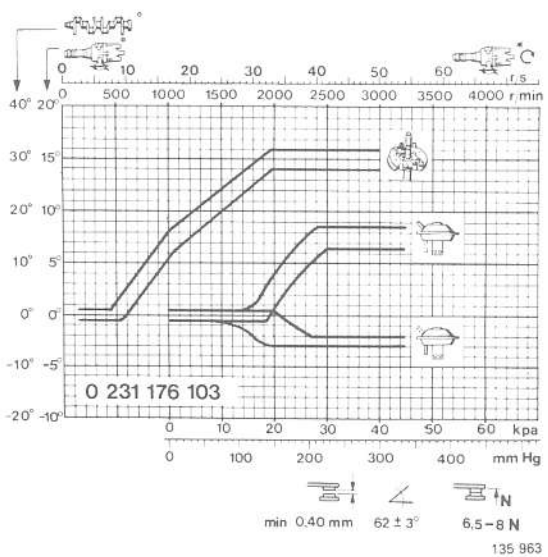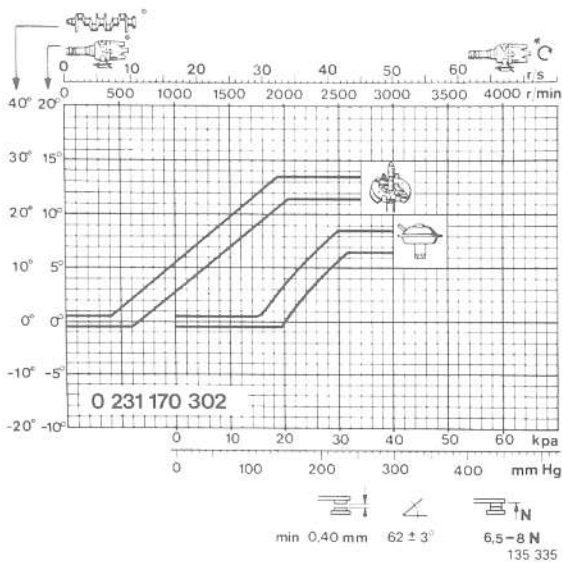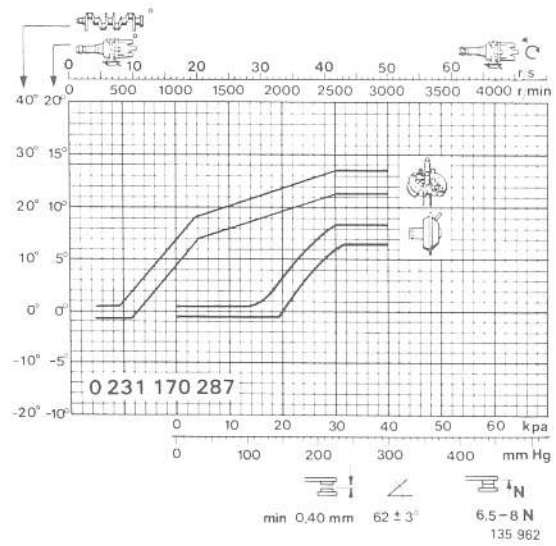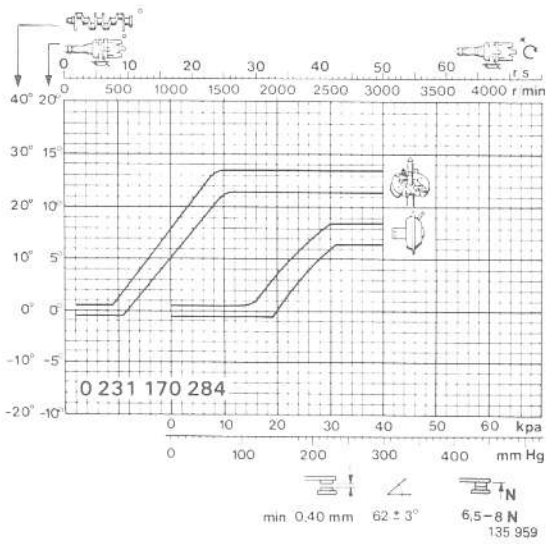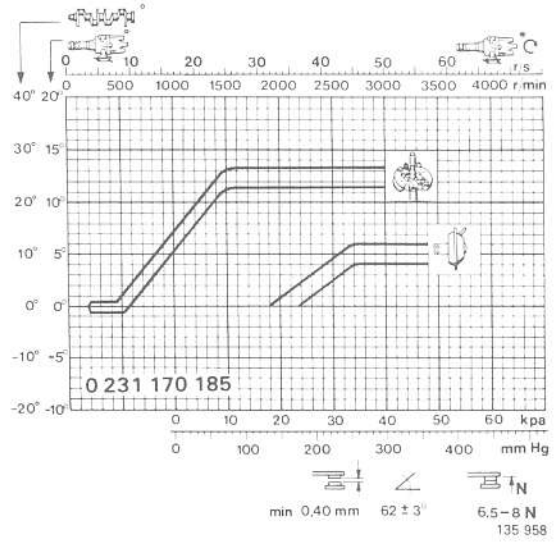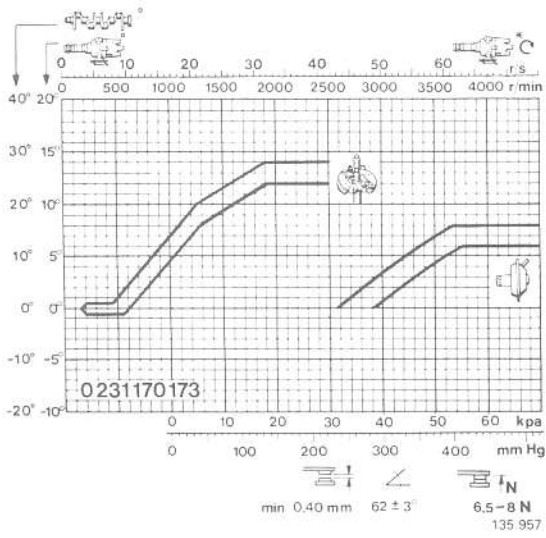



Bosch no.	0231 170 085	0231 170 134	0231 170 173	0231 170 185	0231 176 103	0231 170 284	0231 170 287	0231 170 302
Volvo no.	462 657	463 692	1219 625	1219 661	1 266 478	1 306 792	1 306 872	1 332 410
Direction of rotation	Anti-clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise
Contact breaker gap, mm	min. 0.35	min. 0.40	min. 0.40	min. 0.40	min. 0.40	min. 0.40	min. 0.40	min. 0.40
Dwell angle at 8.3 r/s (500 r/min)	62±3°	62±3°	62±3°	62±3°	62±3°	62±3°	62±3°	62±3°
Contact pressure, N (kp)	*6.5-8 (0.65-0.80)	*6.5-8 (0.65-0.80)	*6.5-8 (0.65-0.80)	*6.5-8 (0.65-0.80)	*6.5-8 (0.65-0.80)	6.5-8.0 (0.65-0.80)	6.5-8.0 (0.65-0.80)	6.5-8.0 (0.65-0.80)

*1978: B19 A Italy, B21 A excluding Sweden.

Centrifugal governor

Total advance, distrib. degrees	13±1	15±1	13±1	12.5±1	15±1	12.5±1	12.5±1	12.5±1
Advance begins at distrib. r/s (distrib. r/min)	9.2-10.8 (550-650)	7.1-9.6 (425-575)	7.5-9.2 (450-550)	7.5-9.2 (450-550)	6.7-10 (400-600)	7.5-9.2 (450-550)	7.7-9.6 (460-600)	6.7-10 (400-600)
5° at distrib. r/s (distrib. r/min)	15.8-19 (950-1140)	13.8-16.7 (830-1000)	14.2-17.5 (850-1050)	13.3-16.3 (800-975)	13-14.3 (780-860)	13.0-16.5 (780-990)	13.8-17.3 (825-1040)	15.8-20.8 (950-1250)
10° at distrib. r/s (distrib. r/min)	23.2-26.3 (1390-1580)	20.8-28.0 (1250-1680)	20.8-26.7 (1250-1600)	20-22.9 (1200-1375)	20.8-25.2 (1250-1510)	19.3-22.8 (1160-1370)	24.0-35.5 (1440-2130)	25.8-30.8 (1550-1850)
Max. advance at distrib. r/s (distrib. r/min)	29.2 (1750)	37.5 (2250)	31.7 (1900)	25.8 (1550)	33.3 (2000)	25 (1500)	41.6 (2500)	33.3 (2000)

DATA


Vacuum control

Direction of control	Positive	Positive	Positive	Positive	Positive	Positive	Positive	Positive
Total control, distrib. degrees	6.5±1	7±1	7±1	5±1	7.5±1	7.5±1	7.5±1	7.5±1
Control begins at mm Hg	60-100	230-300	235-290	135-180	110-145	110-150	110-145	110-150
Data:								
2° at mm Hg	85-130	-	275-320	175-215	130-170	130-170	135-170	135-170
5° at mm Hg	130-180	320-400	335-390	-	165-210	165-210	165-215	170-210
Max. control at mm Hg	175-185	400	400-410	255-265	220	220-230	230-240	220-240
Direction of control	-	-	-	-	Negative	-	-	-
Total control, distrib. degrees	-	-	-	-	2.5±0.5	-	-	-
Control starts at mm Hg	-	-	-	-	80-160	-	-	-
Data:								
1° at mm Hg	-	-	-	-	95-180	-	-	-
Max. control at mm Hg	-	-	-	-	200	-	-	-

Specifications Breakerless ignition system

B 20 F, B 19 E, ET, B 21 E, ET, F, FT, B 23 E, B 27 A, E, F, B 28 A, E, F

Ignition coil

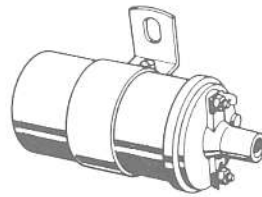

131 753

	B 20, B 19-B 23	B 27/B 28
Resistance of primary coil across terminals 1(-) and 15(+)	1.9±0.1 Ω	0.5±0.1 Ω
Resistance of secondary coil terminal (across terminals 1(-) and HT)	9.5±1.5 kΩ	9.5±1.5 kΩ
Ballast resistor	0.9±0.1 Ω	1±0.1 Ω

Spark plugs 4-cyl engines

B 20 F	- 1976	Bosch W 6 B
B 19 E, B 21 E	1975-84	Bosch W 6 DC
B 19 ET, B 21 ET		Bosch W 6 DC
B 21 F	1976-79 1980-82 USA 1980-84 Others	Bosch W 7 DC Bosch WR 7 DS Bosch W 7 DC
B 21 FT	1981-85	Bosch WR 7 DS
B 23 E	1979-80 1981-84	Bosch W 5 DC Bosch W 6 DC




137 530

Electrode gap	0.7-0.8 mm
Tightening torque (unoiled plug)	25±5 Nm (18±3.5 ft.lbs)

6-cyl engines

B 27 A	1975-79	Bosch H 6 D
B 27 E	1975-78 1979-80	Bosch H 6 D Bosch H 5 D
B 27 F	1976-79	Bosch H 6 D
B 28 A and E	1980-84	Bosch H 6 D
B 28 F	1980-84 USA 1980-84 Others	Bosch HR 6 DS Bosch H 6 D

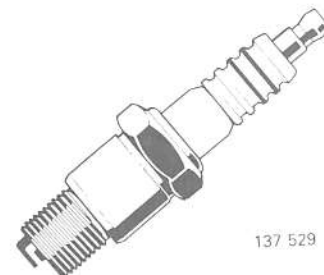

137 529

Electrode gap	0.6-0.7 mm
Tightening torque (unoiled plug)	12±2 Nm (8.7±1.5 ft.lbs)





Rotor

Resistance $5 \pm 1 \text{ k}\Omega$



134 578

High tension leads*

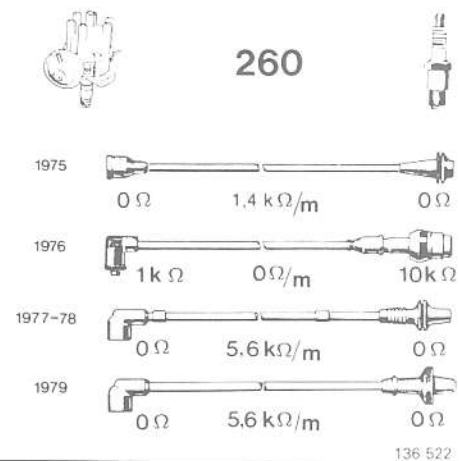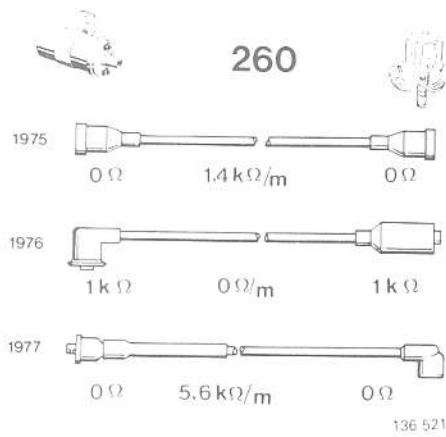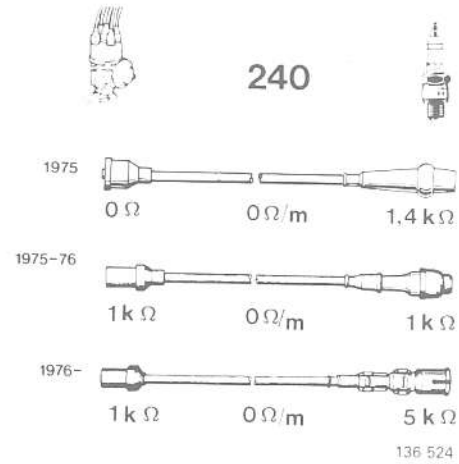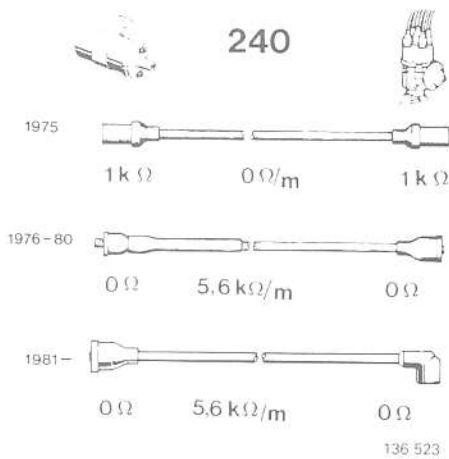

*Note: Resistance values are given in K Ω -per-meter of length. (Measure lead in order to compute correct value.) All values have a permissible tolerance of $\pm 20\%$.

Firing order


B 20

1-3-4-2




B 19-B 23

1-3-4-2

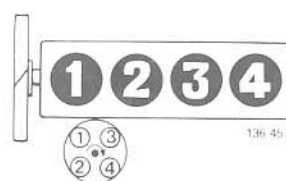

B 27, B 28

1-6-3-5-2-4

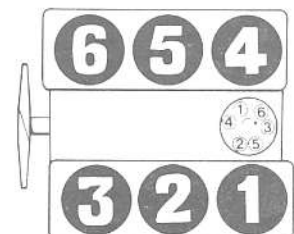

Specifications

Breakerless ignition system

Ignition setting (before T.D.C. with vacuum control unit disconnected)

With effect from 1976, vehicles for Sweden, Australia, USA and Canada (also Switzerland 1983-models) have details of ignition setting stamped on a plate to left of engine compartment.

4-cyl E-engines

Engine type	Model year/market	Notes	11.7–13.3 r/s 700–800 r/min	41.7 r/s 2 500 r/min
B 19 E	1977–83 1984		8° 10°	28–33° 24–28°
B 19 ET	1982–84		15°	21–26°
B 21 E	1975–82 ¹⁾		8°	28–33°
B 21 ET	1981–84		15°	21–26°
B 23 E	1979–82 1983 Canada 1984 Other markets		5° 10° 5° 10°	25–30° 25–29° 25–30° 25–29°

¹⁾ 1976–80: Australia, Sweden Special vehicles 5

4-cyl F-engines

B 20 F	1975		5°	20–25°
B 21 F	1976 1977 USA 1978 Other markets 1979 California, Japan 1980 Other markets 1981 Canada 1981 Other markets 1981–84 Japan 1981 USA		15° 12° 15° 12° 8° 10° 10° 8° 8° 8°	25–30° 28–32° 25–30° 28–32° 22–26° 26–30° 24–28° 22–26° 22–26° 22–26°
B 21 FT	1981–85	Adjust at 15 r/s (900 r/min)	8°	26–30°

6-cyl A and E-engines

B 27 A	1975–79		10°	22–25°
B 28 A	1980–84		10°	22–25°
B 27 E	1975 1976 Sweden, Australia 1977–78 Other markets 1979–80		10° 10° 10° 10° 10°	30–34° 22–26° 30–34° 30–34° 25–29°
B 28 E	1981–82 1983–84		10° 12°	25–29° 27–31°

¹⁾ 1978: Sweden, Australia, Special vehicles 8

6-cyl F-engines

B 27 F	–1976 1977 California 1979 Other markets		10° 7° 10° 10°	27–32° 20–24° 27–32° 20–24°
B 28 F	1980–82	Adjust at 15 r/s (900 r/min) Applies to: 1981: California, Japan 1982: All	10°	20–24°

Distributor**4-cyl E-engines**

Engine type	Model year	Description	Bosch P/N 0 237 00. . . .	Volvo P/N
B 19 E	1977-83 1984		2 017	1 219 957
			2 039	1 276 403
B 19 ET	1982-84		3 027	1 276 701
B 21 E	1975 1976	Sweden, Australia Other markets	2 001	463 832
			2 010	1 219 662
	1977-80 1981-82	Sweden, Australia (Overseas 1979-) Other markets (incl. Thailand 1979-)	2 001	463 832
			2 010	1 219 662
			2 017	1 219 957
		2 017	1 219 957	
B 21 ET	1981-84		3 027	1 276 701
B 23 E	1979-82 1983	Canada Other markets	2 017	1 219 957
			2 039	1 276 403
	1984		2 017	1 219 957
			2 039	1 276 403

4-cyl F-engines

B 20 F	1975	BW 35 (California: to engine no. 500) M 40/M 41 (California: to engine no. 500) California BW 35 (engine no. 501-) California M 40/M 41 (engine no. 501-)	2 003	462 762
			2 002	462 896
			2 009	1 218 672
			2 008	1 218 671
B 21 F	1976	USA	2 007	463 694
			3 003	1 219 848
	1977 1978	Canada, Japan California, Canada, Japan Other markets	2 007	463 694
			3 009	1 266 466
	1979	California, Japan (Canada -1980) Other markets	3 003	1 219 848
			2 039	1 276 403
	1980-81 1980-84	USA (Canada 1981-82) Japan	2 038	1 266 904
			2 039	1 276 403
		2 039	1 276 403	
B 21 FT	1981-84		3 024	1 276 703

6-cyl A and E-engines


Engine type	Model year	Description	Bosch P/N 0 237 40. . . .	Volvo P/N
B 27 A	1975-79		2 006	269 995
B 27 E	1975 1976	Sweden, Australia Other markets	2 001	269 323
			2 005	269 565
	1977-78	Sweden, Australia Other markets	2 001	269 323
			2 005	269 565
	1979-80		2 007	269 733
		2 013	1 269 191	
B 28 A	1980-84		2 006	269 995
B 28 E	1981-84		2 013	1 269 191

6-cyl F-engines

B 27 F	-1976 1977-78	Japan, Canada USA	2 004	269 134
			2 004	269 134
	1979		6 001	269 739
			6 004	1 269 291
B 28 F	1980-84		2 017	1 269 380

Ignition setting graphs

Bosch number at bottom left of diagrams is stamped in distributor body.

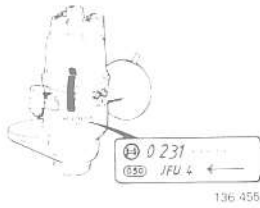






Legend









Variation of ignition setting with vacuum



Variation of ignition setting with engine rpm


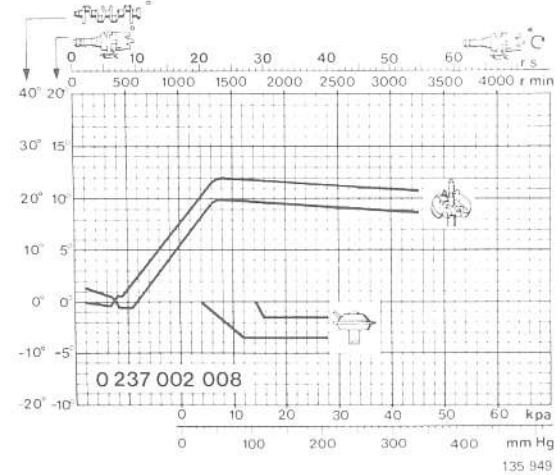
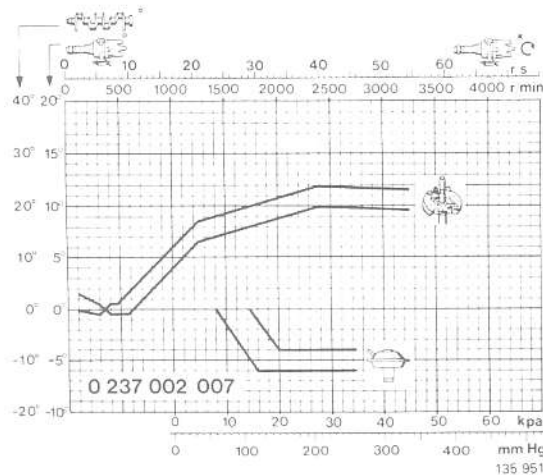
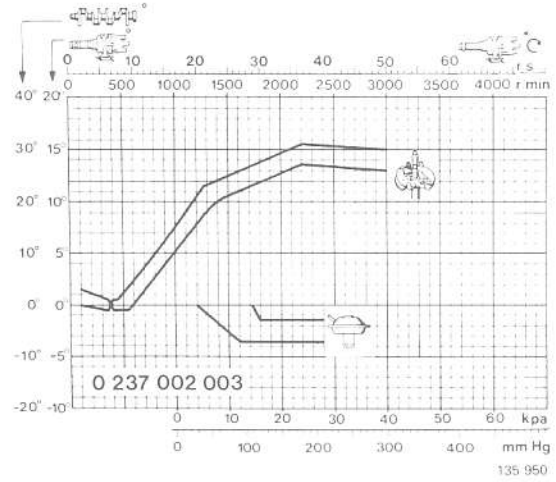
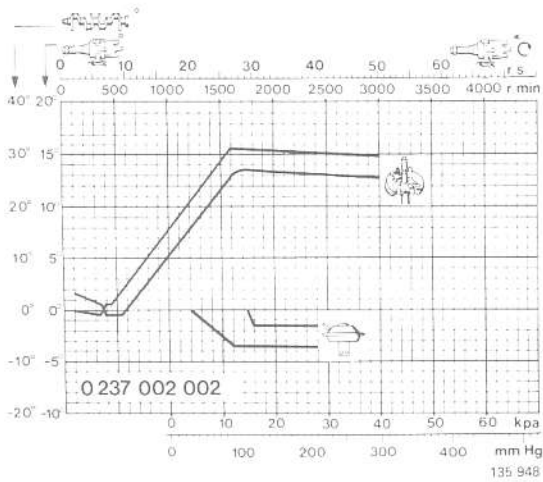
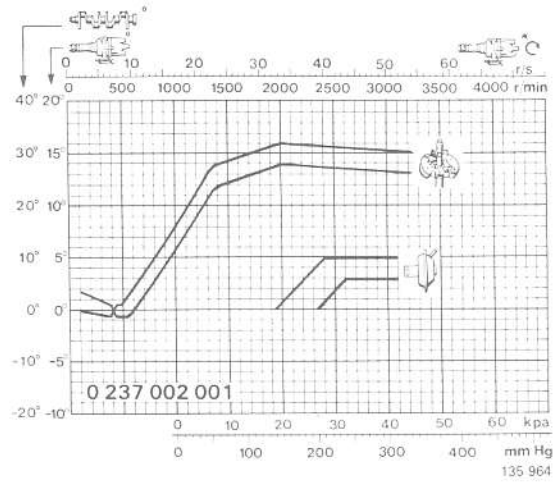


Specifications
Breakerless ignition system

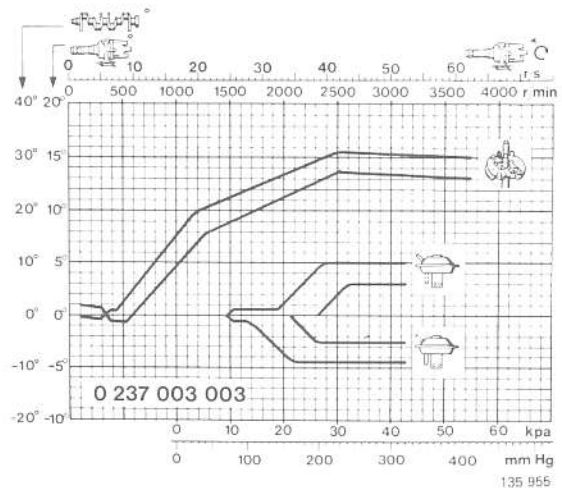
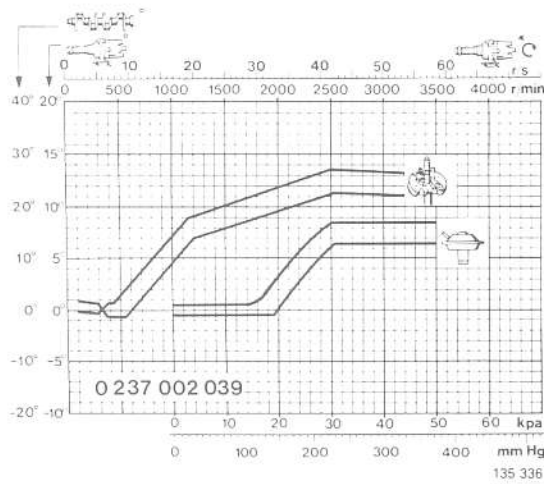
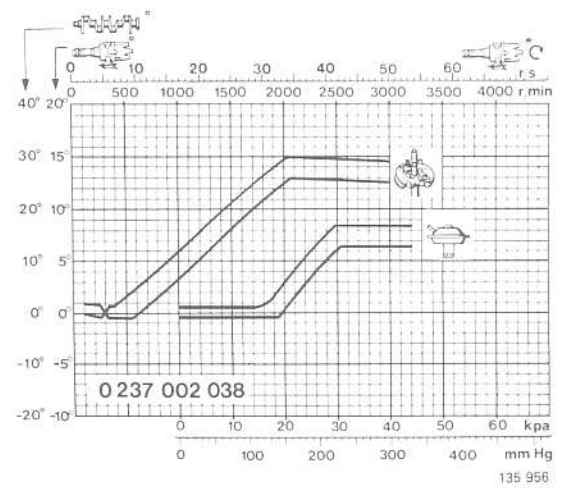
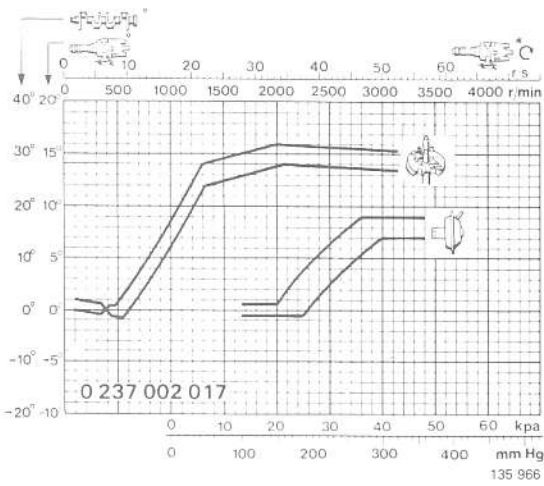
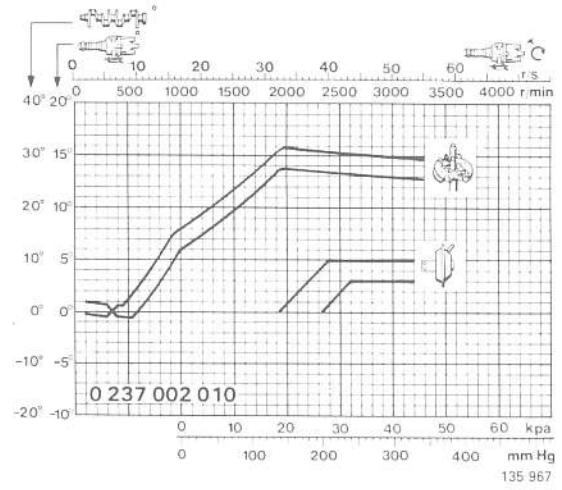
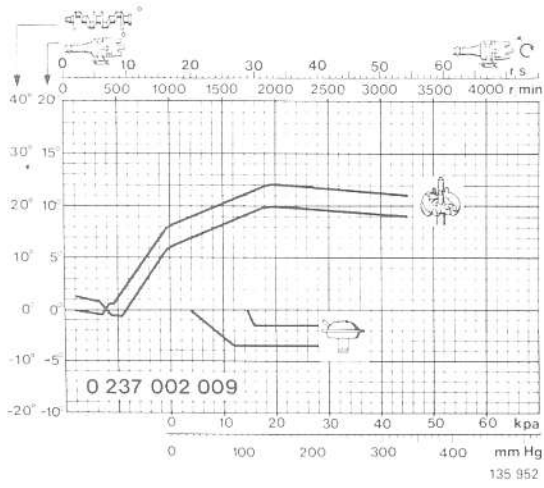


Specifications

Breakerless ignition system

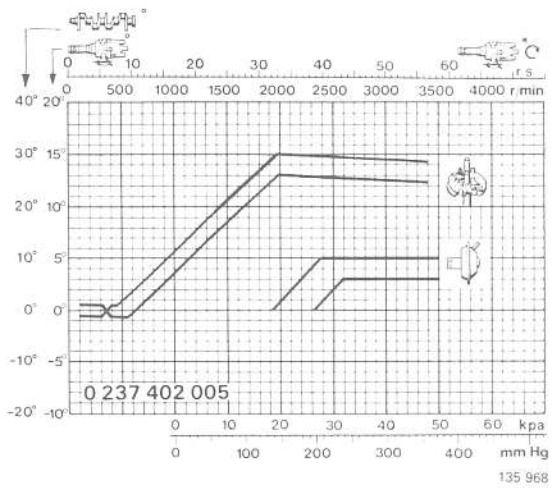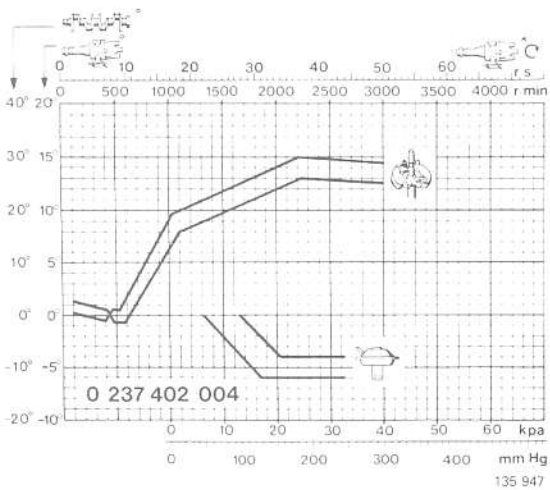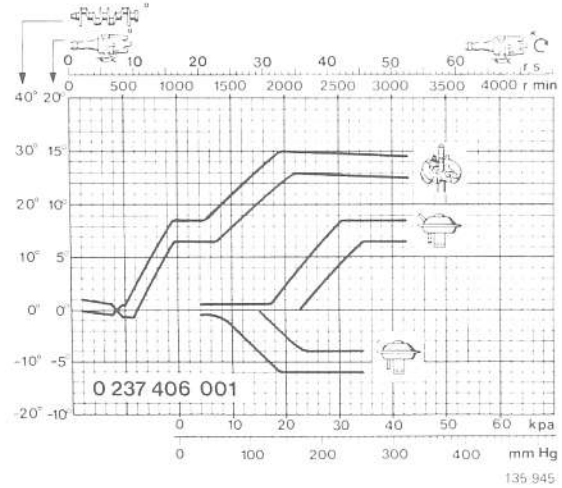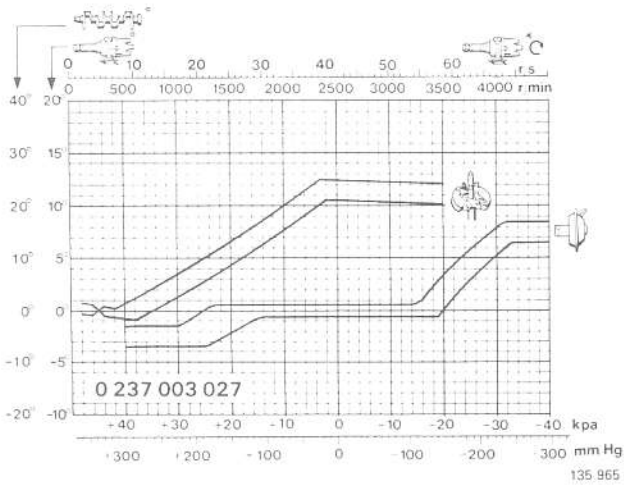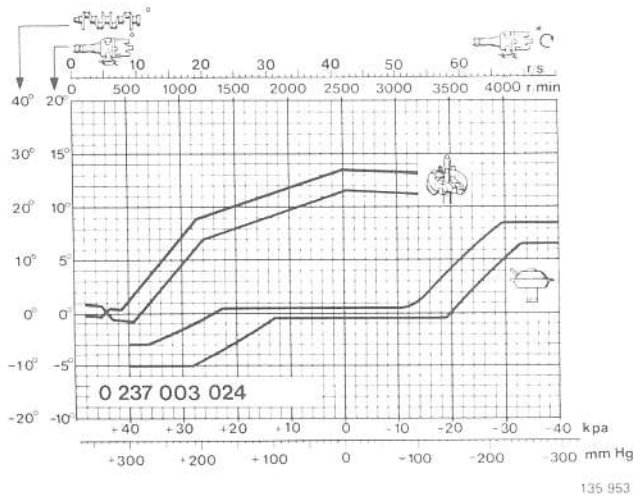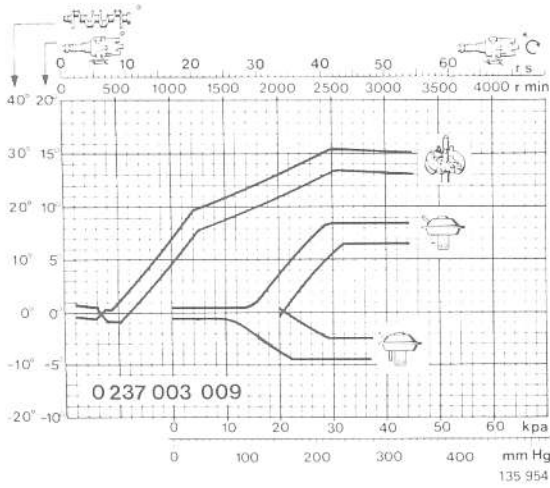

Specifications
Breakerless ignition system

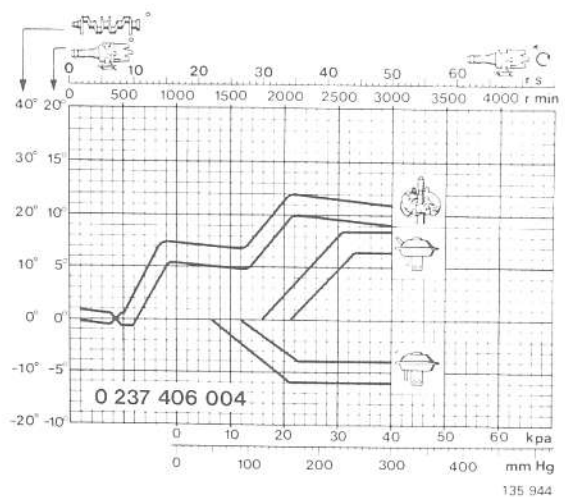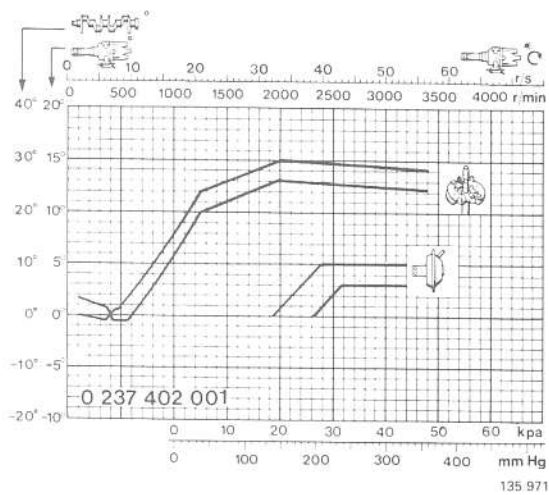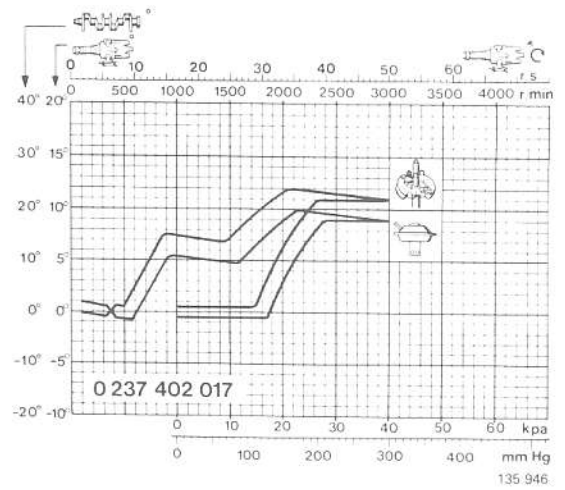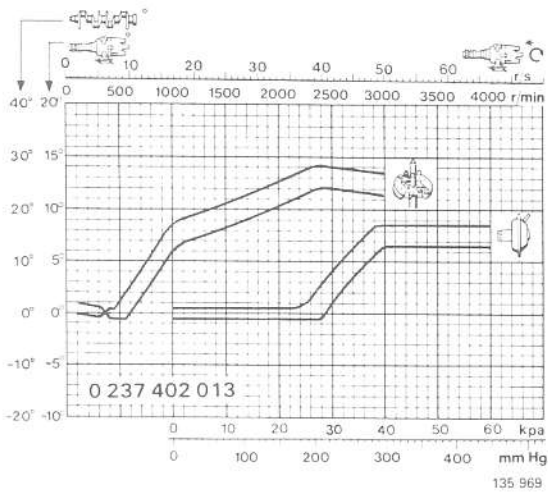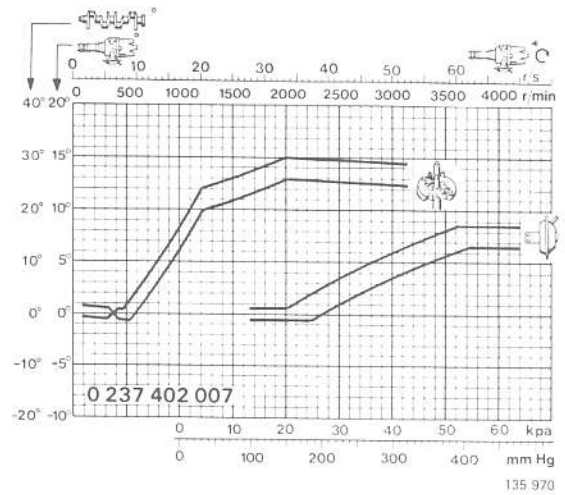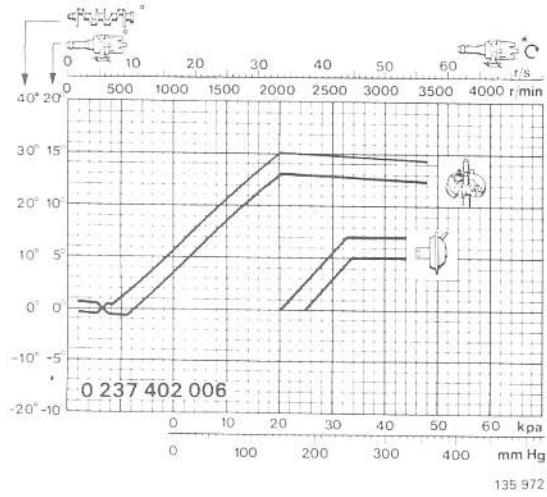

4-cyl

Bosch no.	0237 002 001	0237 002 002	0237 002 003	0237 002 007	0237 002 008	0237 002 009	0237 002 010	0237 002 017
Volvo	463 832	462 896	462 762	463 694	1 218 671	1 218 672	1 219 662	1 219 957
Direction of rotation	Clockwise	Anti-clockwise	Anti-clockwise	Anti-clockwise	Anti-clockwise	Anti-clockwise	Clockwise	Clockwise
Resistance of impulse sender pole k Ω	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25

Centrifugal governor

Total advance, distrib. degrees.	15 \pm 1	14.5 \pm 1	14.5 \pm 1	11 \pm 1	11 \pm 1	11 \pm 1	15 \pm 1	15 \pm 1
Advance begins at distrib. r/s	7.7-9.2	7.5-9.2	7.2-9.2	7.8-9.5	7.5-9.2	7.5-9.2	7.7-9.2	7.7-9.2
(distrib. r/min)	(460-550)	(450-550)	(430-550)	(470-570)	(450-550)	(450-550)	(460-550)	(460-550)
DATA								
5° at distrib. r/s	13.2-15.7	13.8-16.8	13.8-16.8	15-18.3	13.3-16.2	12.5-15.3	13.2-15.7	13.2-15.7
(distrib. r/min)	(790-940)	(830-1010)	(830-1010)	(900-1100)	(800-970)	(750-920)	(790-940)	(790-940)
10° at distrib. r/s	19-20.8	20.5-23.3	20-23.3	29.2-40	19.7-22.5	25-32.5	20.8-25.8	18.2-20.7
(distrib. r/min)	(1140-1250)	(1230-1400)	(1200-1400)	(1750-2400)	(1180-1350)	(1500-1950)	(1250-1550)	(1090-1240)
Max. advance at distrib. r/s	33.3	26.7	36.7	40	22.5	32.5	33.3	33.3
(distrib. r/min)	(2000)	(1600)	(2200)	(2400)	(1350)	(1950)	(2000)	(2000)

Vacuum control

Direction of control	Positive	-	-	-	-	-	Positive	Positive
Total control, distrib. degrees	4 \pm 1	-	-	-	-	-	4 \pm 1	8 \pm 1
Control begins at mm Hg	140-200	-	-	-	-	-	140-200	140-190
Data:								
2° at mm Hg	170-230	-	-	-	-	-	170-230	165-220
5° at mm Hg	-	-	-	-	-	-	-	205-270
Max. control at mm Hg	210-240	-	-	-	-	-	210-240	270-300
Direction of control	-	Negative	Negative	Negative	Negative	Negative	-	-
Total control, distrib. degrees	-	2.5 \pm 1	2.5 \pm 1	5 \pm 1	2.5 \pm 1	2.5 \pm 1	-	-
Control begins at mm Hg	-	30-110	30-110	60-110	30-110	30-110	-	-
Data:								
1° at mm Hg	-	45-115	45-115	65-120	45-115	45-115	-	-
Max. control at mm Hg	-	90-120	90-120	120-150	90-120	90-120	-	-

4-cyl

Bosch no.	0237 002 038	0237 002 039	0237 003 003	0237 003 009	0237 003 024	0237 003 027
Volvo	1 266 904	1 276 403	1 219 848	1 266 466	1 276 703	1 276 701
Direction of rotation	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise
Resistance of impulse sender pole kΩ	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25	0.95-1.25

Centrifugal governor

Total advance, distrib. degrees	14±1	12.5±1	14.5±1	14.5±1	12.5±1	11.5±1
Advance begins at distrib. r/s (distrib. r/min)	7.5-9.2 (450-550)	7.5-9.2 (450-550)	7.5-9.2 (450-550)	7.5-9.2 (450-550)	7.5-9.2 (450-550)	6.7-10.0 (400-600)

DATA

5° at distrib. r/s (distrib. r/min)	15-19.2 (900-1150)	13.7-17.5 (820-1050)	14.2-17.5 (850-1050)	14.2-17.5 (850-1050)	14.2-17.5 (850-1050)	20.5-26.3 (1250-1575)
10° at distrib. r/s (distrib. r/min)	24.2-28.3 (1450-1700)	25-35.8 (1500-2150)	20.8-29.2 (1250-1750)	20.8-30.3 (1250-1820)	25-35.8 (1500-2150)	32.5-38.3 (1950-2300)
Max. advance at distrib. r/s (distrib. r/min)	33.3 (2000)	41.7 (2500)	42.5 (2550)	41.7 (2500)	41.7 (2500)	40 (2400)

Vacuum control

Direction of control	Positive	Positive	Positive	Positive	Positive	Positive
Total control, distrib. degrees	7.5±1	7.5±1	4±1	7.5±1	7.5±1	7.5±1
Control begins at mm Hg	120-145	110-140	145-200	105-155	95-140	110-140
Data:						
2° at mm Hg	130-170	130-170	165-225	125-175	120-170	135-170
5° at mm Hg	170-210	170-210	-	165-220	155-215	170-220
Max. control at mm Hg	220-230	220-230	215-245	215-245	225-245	230-245

Direction of control

Total control, distrib. degrees	-	-	Negative	Negative	-	-
Control begins at mm Hg	-	-	3.5±1	3.5±1	-	-
Data:	-	-	105-160	95-160	-	-
2° at mm Hg	-	-	125-190	125-190	-	-
Max. control at mm Hg	-	-	170-200	170-215	-	-

Pressure control

Direction of control	-	-	-	-	Negative	Negative
Total control, distr. degrees	-	-	-	-	5±1	2.5±1
Control begins at mm Hg	-	-	-	-	95-170	110-180
Data:	-	-	-	-	-	-
1° at mm Hg	-	-	-	-	110-210	125-210
Max control at mm Hg	-	-	-	-	225-275	185-230

Breakerless ignition system

6-cyl

Bosch no.	0237 402 001	0237 402 004	0237 402 005	0237 402 006	0237 402 007	0237 402 013	0237 402 017	0237 406 001	0237 406 004
Volvo	269 323	269 134	269 565	269 995	269 733	1 269 191	1 269 380	269 739	1 269 291
Direction of rotation	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise	Clockwise
Resistance of impulse sender pole k Ω	540-660	540-660	540-660	540-660	540-660	540-660	540-660	540-660	540-660

Centrifugal governor

Total advance, distrib. degrees	14 \pm 1	14 \pm 1	14 \pm 1	14 \pm 1	14 \pm 1	13 \pm 1	11 \pm 1	14 \pm 1	11 \pm 1
Advance begins at distrib. r/s	7.9-9.6	7.9-9.6	7.9-9.6	7.9-9.6	7.9-9.6	7.5-9.2	8.3-9.6	8.3-10.0	8.3-10.0
(distrib. r/min)	(475-575)	(475-575)	(475-575)	(475-575)	(475-575)	(450-550)	(500-575)	(500-600)	(500-600)

DATA									
5° at distrib. r/s	13.3-15.8	12.9-15.4	15.8-19.2	15.8-18.8	12.9-15.4	12.5-15.4	12.5-15	12.5-15	12.5-15
(distrib. r/min)	(800-950)	(775-925)	(950-1 150)	(950-1 125)	(775-925)	(750-925)	(750-900)	(750-900)	(750-900)
10° at distrib. r/s	19-20.8	18.3-25.8	24.2-27.5	24.2-27.5	18.3-20.8	23.3-31.7	30-35.8	23.3-28.3	31.3-34.6
(distrib. r/min)	(1 140-1 250)	(1 100-1 550)	(1 450-1 650)	(1 450-1 650)	(1 100-1 250)	(1 400-1 900)	(1 800-2 150)	(1 400-1 700)	(1 875-2 075)
Max. advance at distrib. r/s	33.3	36.7	33.3	33.3	33.3	40	35.8	34.2	35
(distrib. r/min)	(2 000)	(2 200)	(2 000)	(2 000)	(2 000)	(2 400)	(2 150)	(2 050)	(2 100)

Vacuum control


Direction of control	Positive	-	-	-	Positive	Positive	Positive	Positive	Positive
Total control, distrib. degrees	4 \pm 1	-	-	6 \pm 1	7.5 \pm 1	7.5 \pm 1	10 \pm 1	7.5 \pm 1	7.5 \pm 1
Control begins at mm Hg	140-200	140-200	170-230	150-190	140-200	170-210	105-140	125-170	120-140
Data:									
2° at mm Hg	170-230	-	-	180-215	200-260	200-240	120-145	140-195	150-190
5° at mm Hg	-	-	-	220-250	290-350	240-275	140-165	180-235	190-230
Max. control at mm Hg	210-240	210-240	245-255	400	290-310	290-310	200-210	230-260	230-250
Direction of control	Negative	-	-	-	-	-	-	Negative	Negative
Total control, distrib. degrees	5 \pm 1	-	-	-	-	-	-	5 \pm 1	5 \pm 1
Control begins at mm Hg	50-100	-	-	-	-	-	-	50-115	50-90
Data:									
2° at mm Hg	75-125	-	-	-	-	-	-	85-145	90-130
Max. control at mm Hg	130-155	-	-	-	-	-	-	145-180	160-170

Specifications

Computerized ignition systems

B 21 F-MPG 1981, B 21 F-CI 1982, B 21 F-LH 1982, B 23 F 1983-1984
B 230 F 1985-

Ignition coil

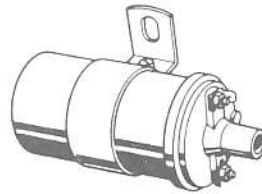

131 753

	Essex	Bosch
Resistance of primary coil (across terminals 1(-) and 15(+))	1.2±0.1 Ω	1.2±0.1 Ω
Resistance of secondary coil (across terminals 1(-) and HT terminal	10.6±1.0 kΩ	8.5±0.8 kΩ
Capacitor, terminal 1(-)	50-250 nF	

Spark plugs



137 530

B 21 F, B 23 F	Bosch WR 7 DS
B 230 F	Bosch WR 7 DC
Electrode gap	0.7-0.8 mm
Tightening torque (unoiled plug)	25 ± 5 Nm (18 ± 3.5 ft.lbs)

High tension leads

Resistance of lead between ignition coil and distributor	5.6 kΩ/m
Resistance of spark plug suppressor	5 kΩ
Resistance of distributor suppressor	1 kΩ

Firing order

1-3-4-2



136 457

Ignition setting (vacuum governor on control unit disconnected); see instructions on page 65.

Engine type	Model year		11.7-13.3 r/s 700-800 r/min	41.7 r/s 2 500 r/min
B 21 F	1981-82		12°	22-30°
B 23 F, B 230 F	1983-		12°	16-24°

Distributor

Engine type	Model year	Remarks	Volvo P/N
B 21 F	1981-82		1 306 059
B 23 F	1983 1984		1 332 684 1 336 737
B 230 F	1985-		1 332 587

Ignition advance graphs, control unit

Legend:



Variation of ignition setting with vacuum





Max vacuum advance in relation to engine rpm.





Variation of ignition setting with engine rpm

Example control unit P/N 1306057: at 30 r/s (1 800 r/min) vacuum advance cannot be more than 90° regardless of extent of depression.



B 21 F-MPG 1981

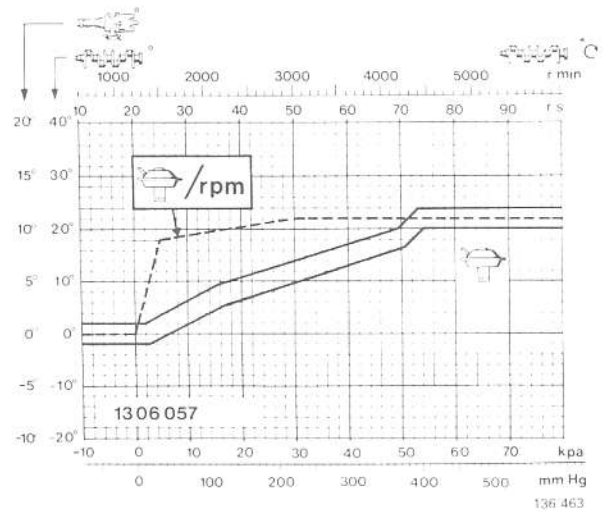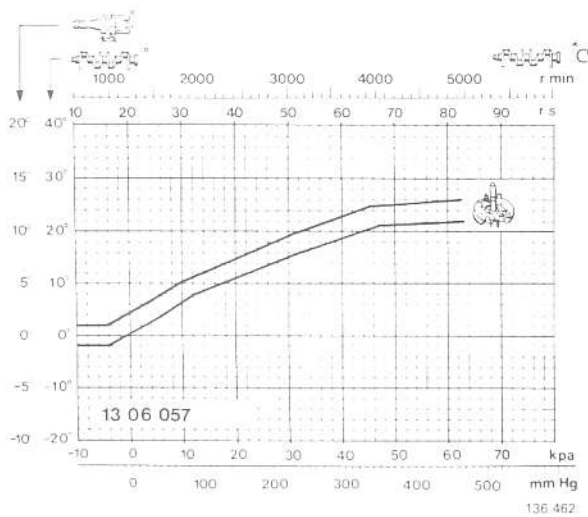



B 21 F-CI 1982

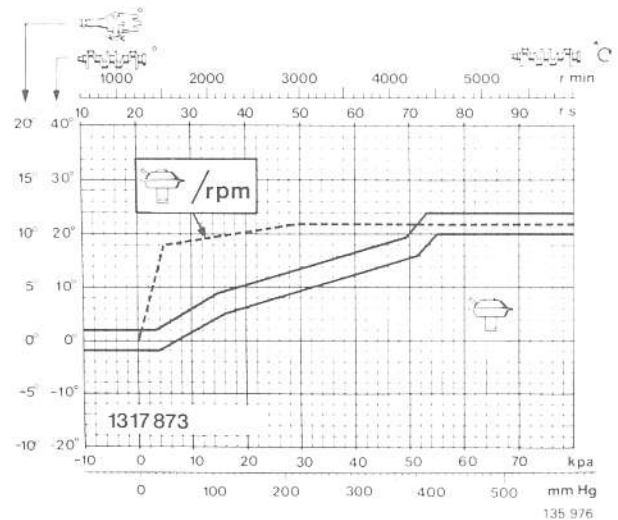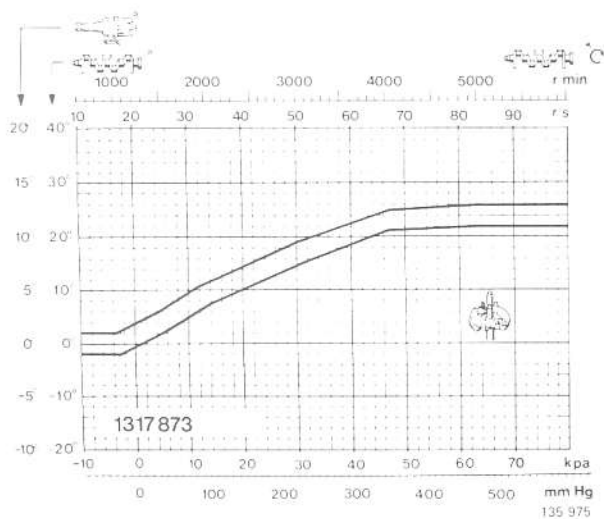



B 21 F-LH 1982

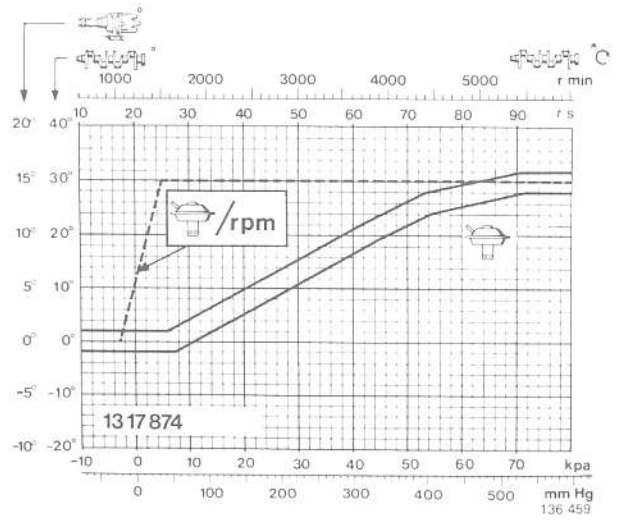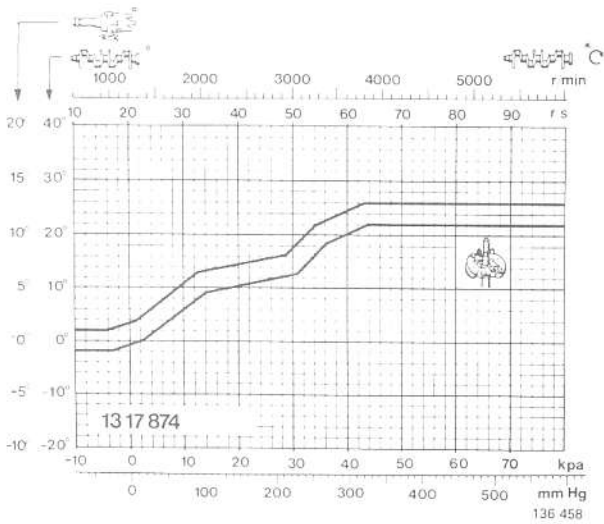



**B 23 F-LH Auto transmission 1983-84
Manual gearbox 1983 engine P/N 499802**
(Changed engine version 1983)

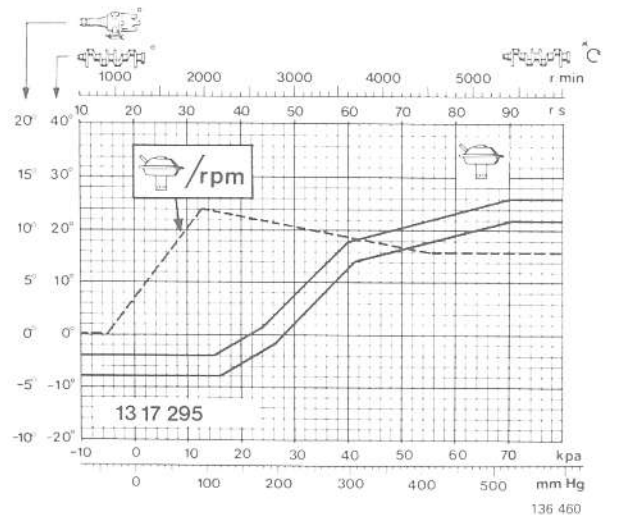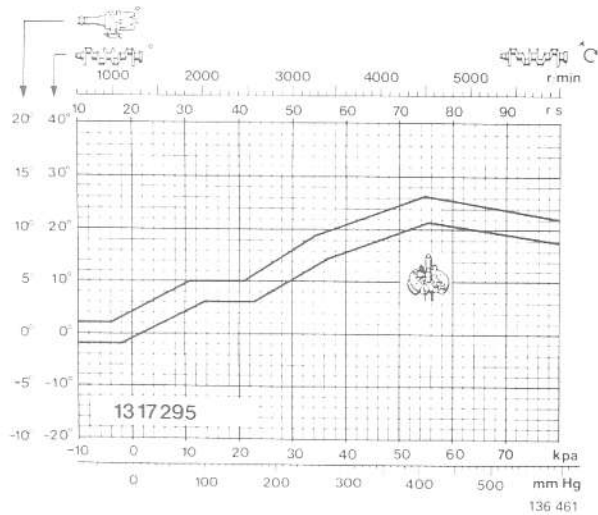

**B 23 F-LH Manual gearbox 1983 engine P/N 499890
Manual gearbox 1984**

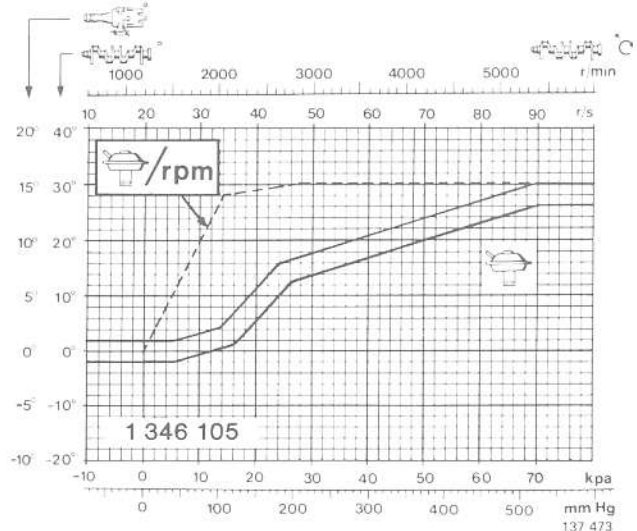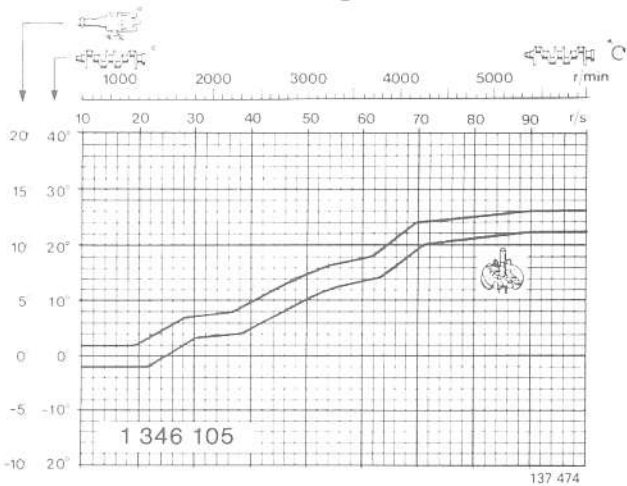

B 230 F-LH 1985-

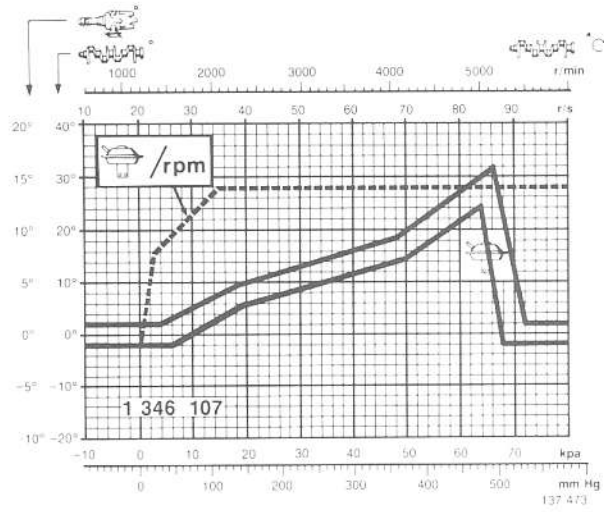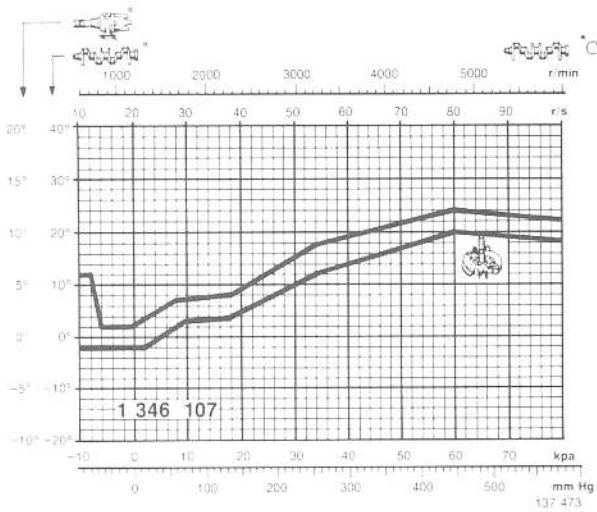

Ignition system with contact breaker assembly

Contents

Ignition coil and HT leads

Distributor cap and rotor arm

Replacing contact breaker points

 Checking ignition setting

 Checking centrifugal advance

 Checking vacuum advance

Reconditioning distributor

 Replacing vacuum control unit


 Replacing distributor

 Checking side play

 Lubrication

Distributor test bench

Operation	Page
A1-A4	26
B1-B2	27
B3-B15	28
B6	29
B7	29
B8-B14	30
C1-C6	32
C1-C2	32
C3-C4	32
C5	33
C6	33
D1-D4	34

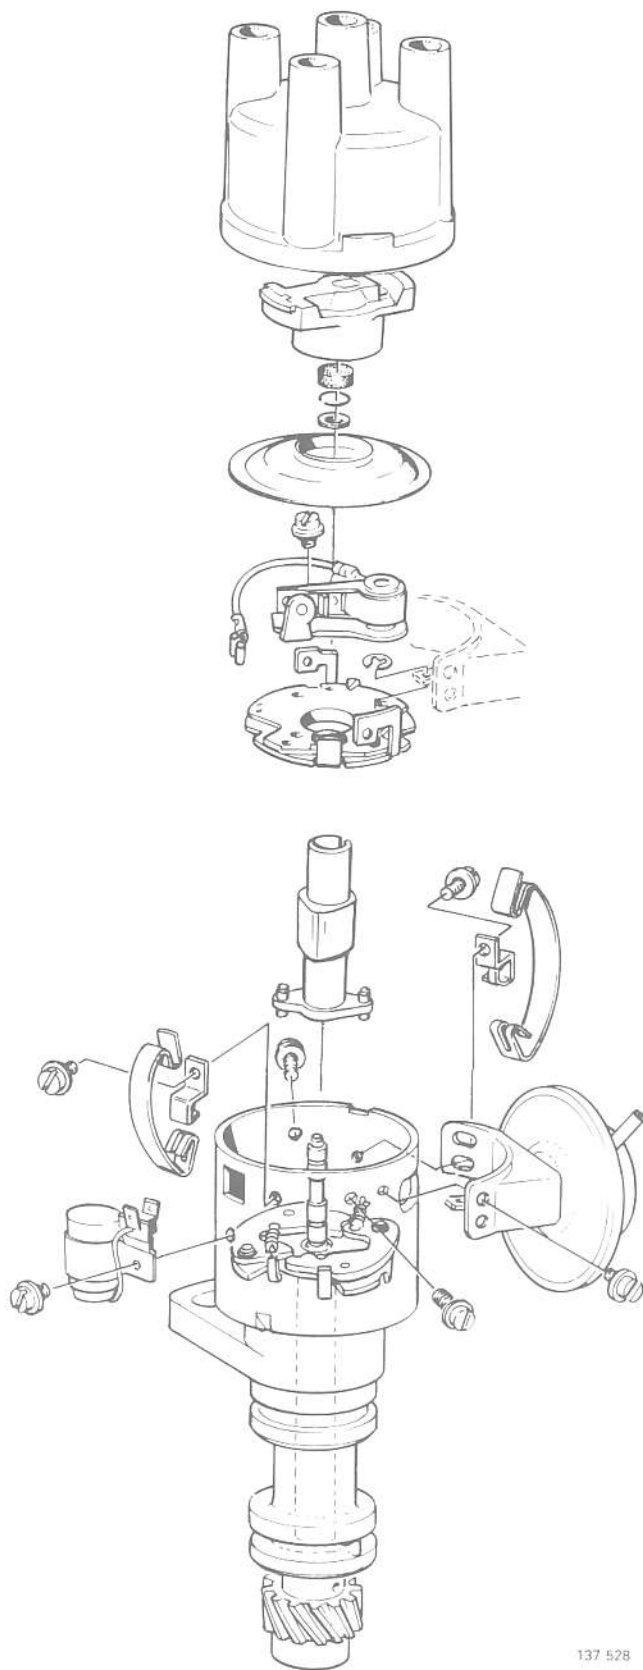

137 528

A. Ignition coil and HT leads




A1

Testing ignition coil, ballast resistor and HT leads

Test conditions:

Components should be at a temperature of about 20°C (68°F).

All leads must be disconnected from the components when taking measurements.

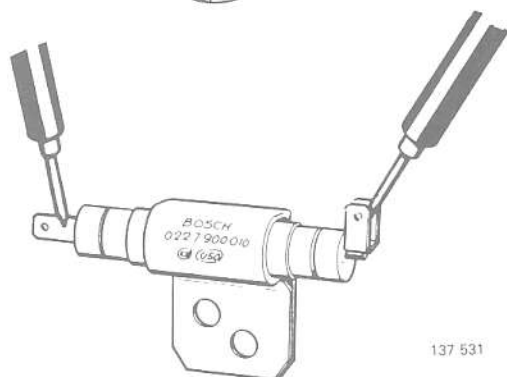


A2

Measuring resistance of ballast resistor

Ballast resistor fitted to 1979 models onwards:

Resistance: 0.9 Ω (early 79)
1.3 Ω (others)

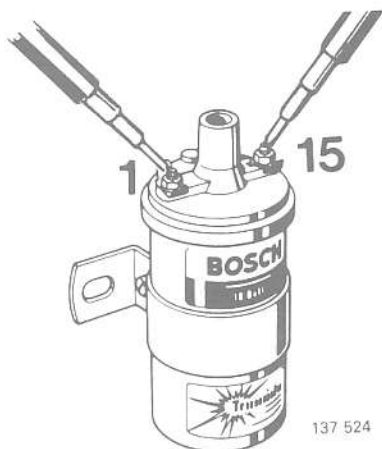


A3

Checking ignition coil:

- check outer casing of ignition coil for cracks etc.
- measure resistance across terminals 1(-) and 15 (+).


Resistance: 2.7–3.0 Ω – 1978
1.8–2.0 Ω 1979–84

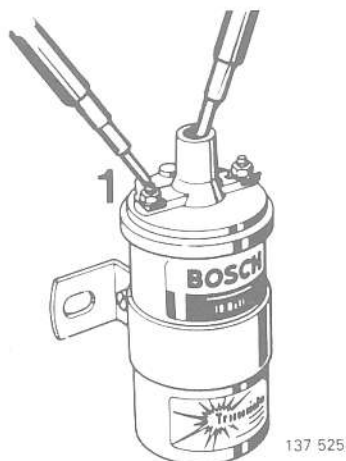

- measure resistance across terminal 1(-) and high tension terminal.

Resistance: 7.0–12.0 Ω – 1978
8.0–11.0 Ω 1979–84

Checking resistance* of HT leads

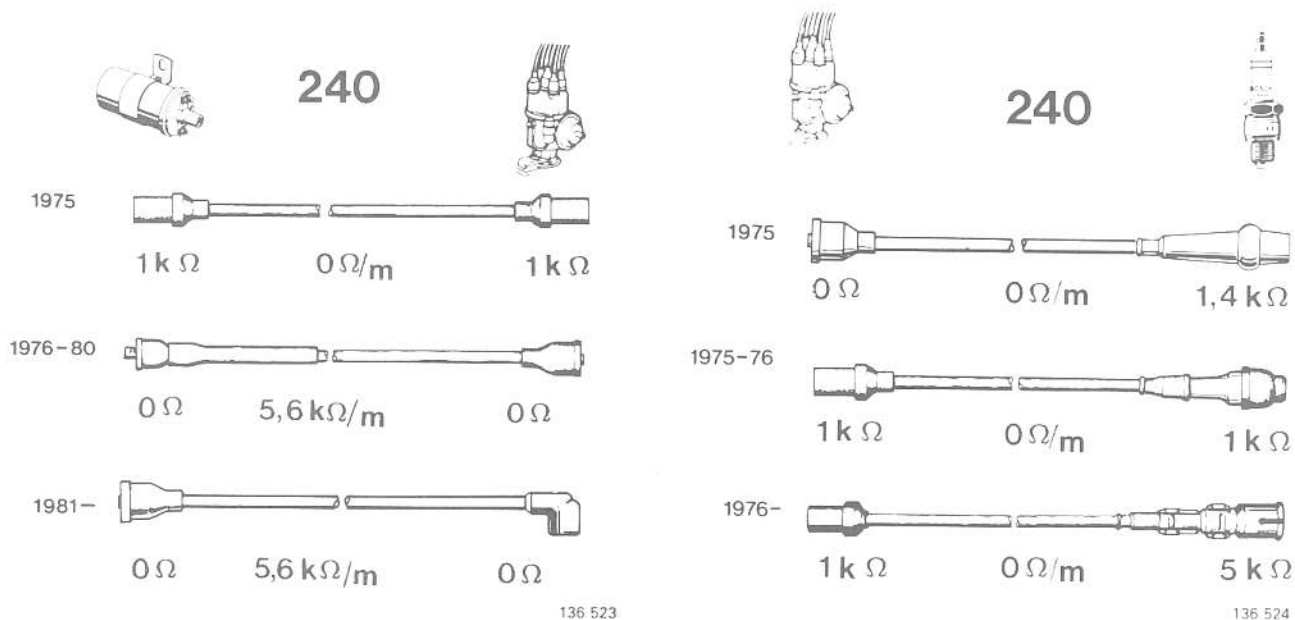


136 523

136 524

*Note: Resistance values are given in K Ω ·per-meter of length. (Measure lead in order to compute correct value.) All values have a permissible tolerance of ± 20%.

B. Distributor

B1

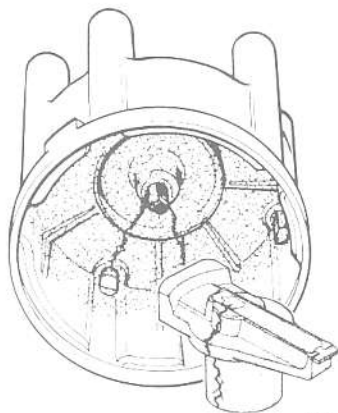

134 577

Distributor cap

Check for:

- dirt
- cracks
- burnt terminals, tracking
- worn rotor.

B2




134 578

Checking rotor

Replace rotor if cracked or excessively burnt.

Resistance = 5 ± 1 kΩ.

B3

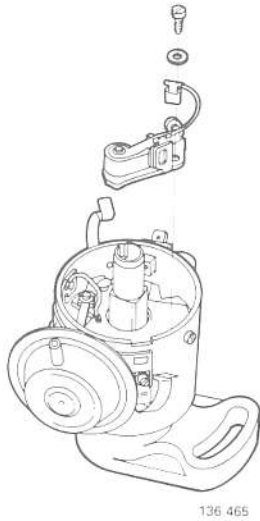

Replacing contact breaker points

Grease cams after installing new points.


Turn crankshaft until fibre heel on contact breaker is on top of cam.

Adjust gap to **0.40 mm** on B 17–B 23.

0.35 mm on B 20

Apply 1–2 drops of engine oil to spindle wick.

B4

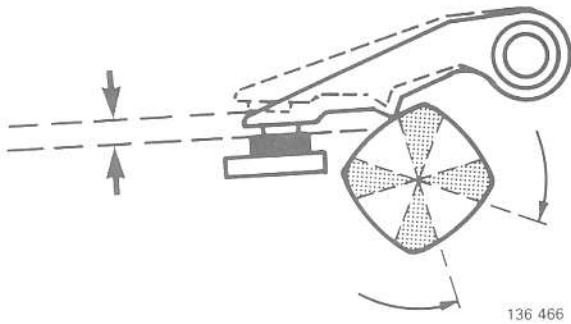


Adjust dwell to 59–65°

Volvo Monotester or dwell meter.

Reduce points gap to decrease dwell angle and increase gap to increase angle.

Refit rotor and distributor cap.

B5

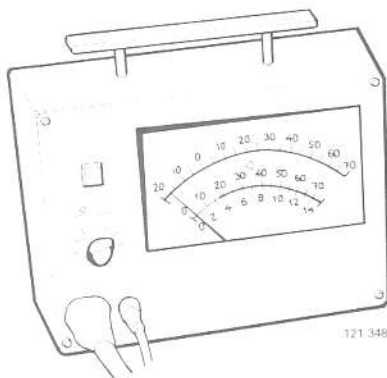

Check dwell angle at 42 r/s (2500 r/min)


If dwell angle differs by more than 2° from reading at idle, check distributor for wear.

B6

**Adjust ignition setting at 11.7–13.3 r/s
(700–800 r/min)**

Disconnect hose from vacuum unit on distributor.

Adjust ignition timing to value indicated in table below.

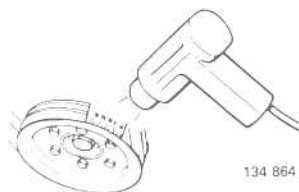

B7

Check centrifugal advance at 42 r/s (2500 r/min)

Check that ignition advance is according to specification, see table below. If advance is not according to specification, check advance weight assembly.

Ignition setting

With effect from 1976, vehicles for Sweden, Australia, USA and Canada (also Switzerland 1983-models) have details of ignition setting stamped on a plate to left of engine compartment.

Ignition setting (before T.D.C., vacuum control unit disconnected)			
Engine type	Model year/Market	11.7–13.3 r/s (700–800 r/min)	41.7 r/s (2500 r/min)
B 17 A	1979–84	12°	28–32°
B 19 A	1977 ¹⁾	15°	32–36°
	1978 Italy	15°	32–36°
	1978–80 Other markets	12°	28–32°
	1981–84	10°	26–32°
B 19 K	1984	7°	17–22°
B 20 A	1975–76	10°	23–27°
B 21 A	1975	12°	24–28°
	1976–77 ¹⁾	15°	32–36°
	1978 Sweden ³⁾ Other markets	12°	28–32°
		15°	32–36°
	1979–80 ²⁾	12°	28–32°
	1981 Scandinavia, Australia Other markets	10°	26–32°
		12°	28–32°
	1982–83 Scandinavia, Australia Canada Other markets	10°	26–32°
		7°	24–30°
		12°	28–32°
1984 Scandinavia, Switzerland Australia Europe Canada	10°	20–26°	
	10°	27–33°	
	7°	17–23°	
	7°	24–30°	
B 23 A	1981–82 Scandinavia ⁴⁾	7°	21–26°
	1982 Other markets	5°	19–24°
	1983–84 Europe Overseas	7°	17–22°
		5°	19–24°

Special vehicles

¹⁾ Sweden: 245 with BW 35, BW 55, M 46 and special vehicles 10°


²⁾ 1979–80: Sweden, Overseas with engine type 498 755 and 498 811 and special vehicles with manual gearbox 10°

³⁾ 240 with engine type 498 528 15° and 32–36°

⁴⁾ Ignition setting can be retarded of 5° if, despite using 98 octane fuel, engine is prone to pre-ignition (knocking).

Special vehicle refers to heavy vehicle types such as 245 GLE with automatic transmission.

B8

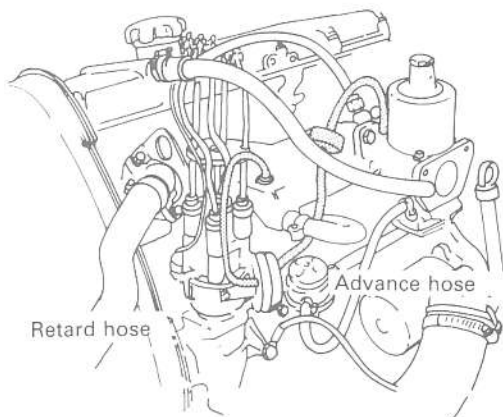


136 467

Vacuum advance/retard

Some distributors are equipped with a vacuum control unit with two vacuum hoses. In such cases the control unit regulates both vacuum advance and retard.

B9

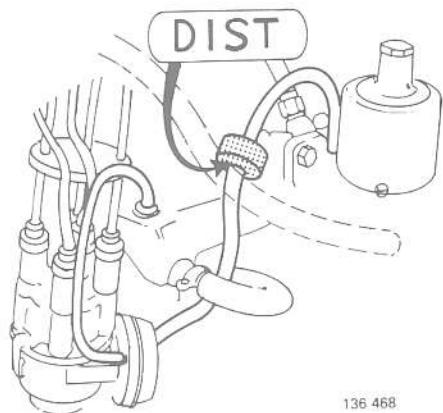

136 468


Delay valve

Because of exhaust emission laws some vehicles are equipped with a delay valve connected between the inlet manifold and vacuum control unit.

Several different types of valves are in use. On all types "DIST" must face distributor.

Check that it is possible to suck air through "DIST" side of valve and that it is very difficult to blow air through same side.

B10

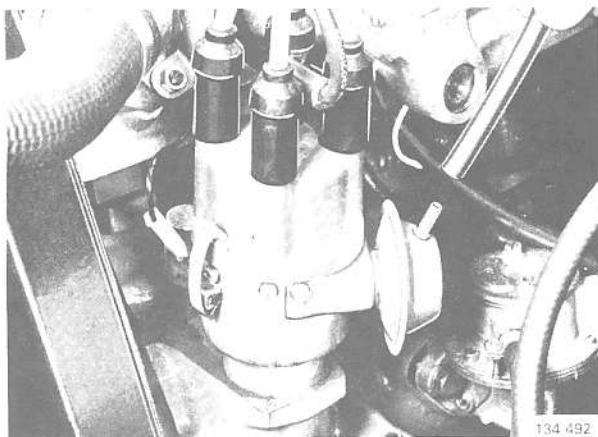


134 492

Checking vacuum advance

Connect a vacuum pump to vacuum control unit. Run engine at idle speed and record ignition advance. Increase vacuum and check that ignition advance increases.

If ignition advance does not increase check vacuum control unit.

B11

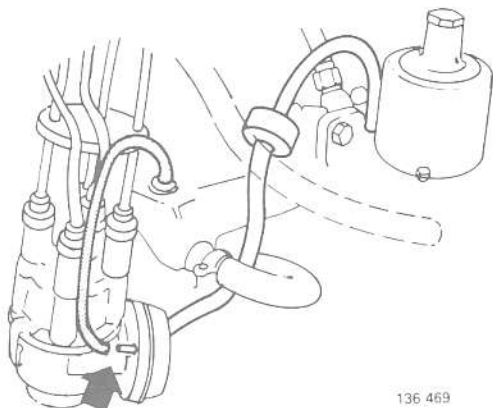

136 469

Checking vacuum retard


Run engine at idle speed.

Check that ignition is retarded when vacuum hose is connected.

If not, check condition of hose. If hose is in good condition check vacuum control unit.

Ignition system with contact breaker assembly

B12

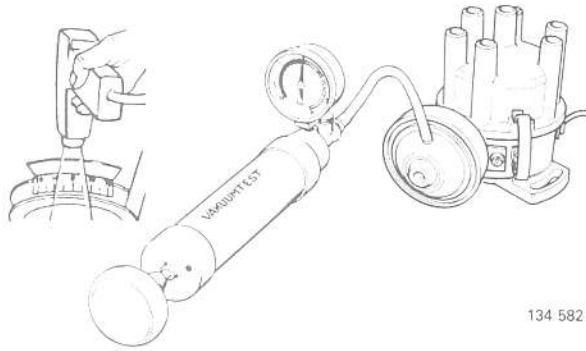

134 582


Check vacuum advance with a vacuum pump

Check distributor number and find correct ignition advance graph on pages 7 and 8.

Select a pressure from graph and pump up vacuum pump to this value.

Record ignition advance.

Subtract basic ignition setting from recorded ignition advance and check that value conforms to graph.

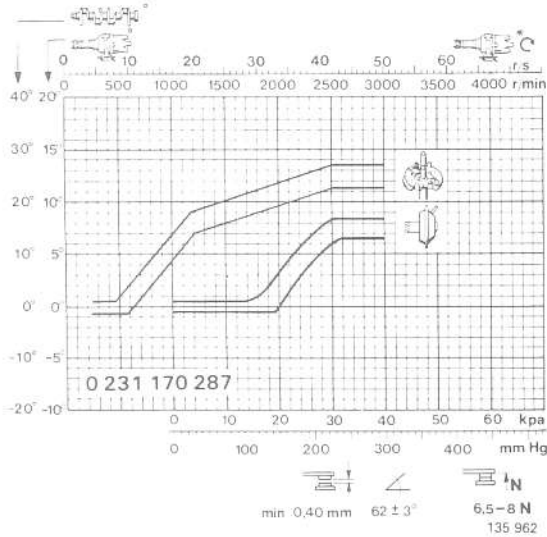

B13

Example: Bosch number 0 231 170 287 on B 23 A 1981-82 Sweden


You decide to check vacuum advance at 200 mm Hg.

Recorded advance at this pressure is found to be 16-21°.

Basic ignition setting = 7°.

Difference = 9 - 14° which is as specified.

B14

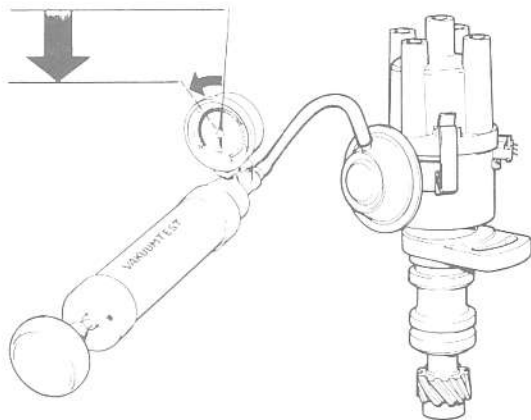

136 678

Check vacuum unit for leakage

Connect a vacuum pump. Increase vacuum to 500 mm Hg (67 kPa).

Record pressure for 1 minute. Pressure must not drop by more than 100 mm Hg (13.5 kPa).

B15

Pre-ignition - B 23 A Sweden 1981-82





If, despite use of 98 octane fuel, engine is prone to pre-ignition (knocking), ignition can be retarded to 5°.

Ignition setting can also be retarded to 2° before T.D.C. if vehicle is required for towing purposes. Note that fuel consumption will increase and that ignition should be reset to specification during normal usage.



135 321

C. Reconditioning distributor

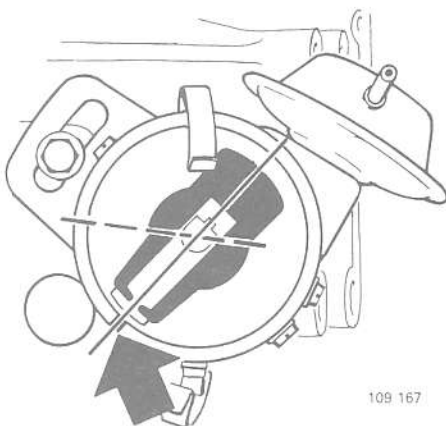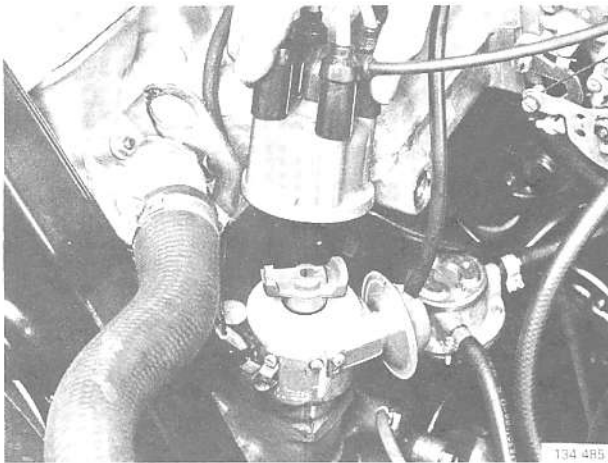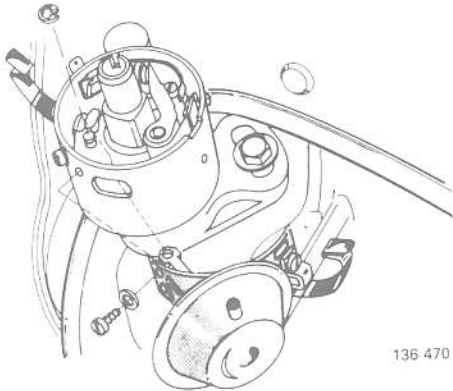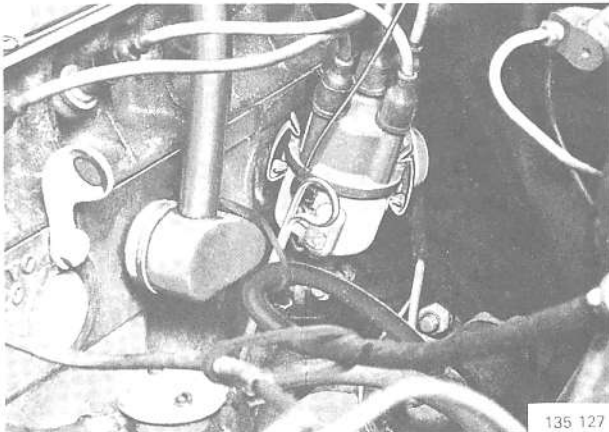

C1

Replacing vacuum control unit

(B 20: distributor must be removed from engine before vacuum unit can be replaced. See operation C3.)

Remove:

- distributor cap
- rotor
- condensation trap
- vacuum hose.

C2

Mark position of distributor

Turn distributor to obtain access to vacuum unit retaining screws.

Replace vacuum unit.

Turn distributor back to mark.

Fit:

- condensation trap
- rotor
- distributor cap
- vacuum hose.

Check/adjust ignition setting.

C3

Replacing distributor

Remove:

- distributor cap
- condensation trap.

Disconnect:

- wire
- vacuum hose.

Turn crankshaft until rotor points towards scribed line in distributor body.

Remove retaining screw and lift away distributor.

C4


To install:

- turn rotor approx. 60° clockwise away from line in distributor body. (Does not apply to B 20)
- fit distributor
- rotor should now point towards line. Reconnect vacuum hose and wire. Fit condensation trap and reclamp distributor cap.

Check/adjust ignition timing.


Checking side play of distributor shaft

Max side play = **0.2 mm** (0.079 in). Fit a new distributor if side play is greater than 0.2 mm.

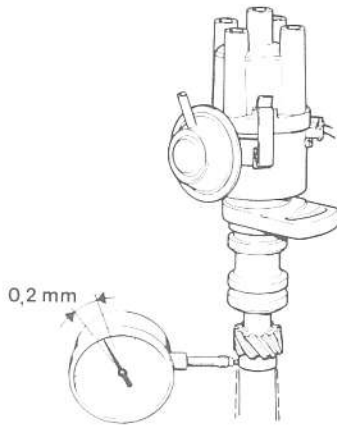

136 679


Lubrication

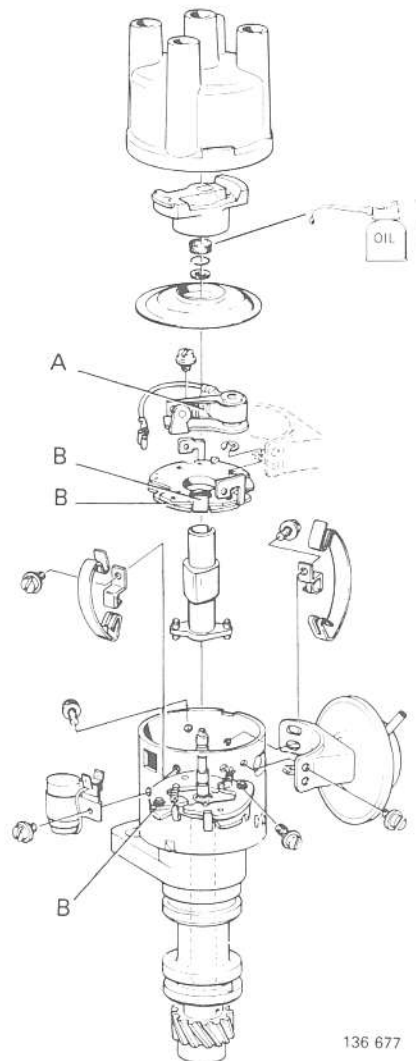

136 677

A = distributor grease P/N 116 1136-7 or Bosch Ft1v4
B = distributor grease P/N 116 1136-7 or Bosch Ft1v26

D. Testing distributor on a test bench

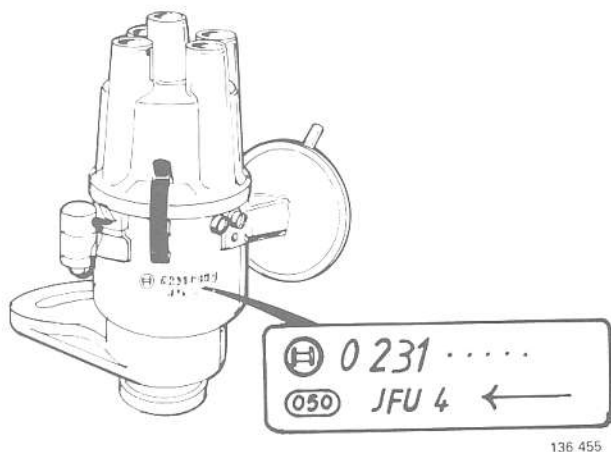

Refer to the manufacturer's instructions at all times when testing distributors on a test bench.

The number on the side of the distributor is the Bosch part number.

D1

Checking dwell angle

Condition: New contact breaker points.

Run distributor at 3.5–4.2 revs/sec (200–250 r/min).


Adjust dwell angle to 59–65°. (It is advisable to set dwell angle to 59° as angle increases as cam wears.)

Increase speed to 25 r/s (1 500 r/min).

Read off dwell angle.

Dwell angle must not vary by more than 2° from previous setting.

Check distributor for wear, damage etc if deviation is too great.

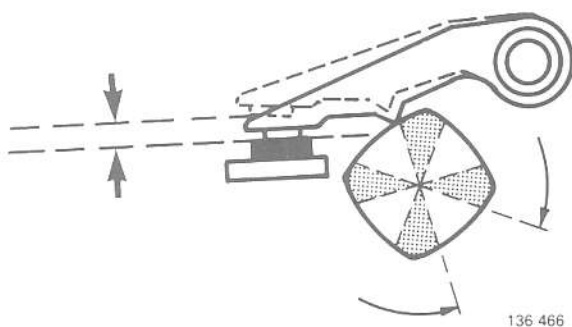

D2

Checking firing

Run distributor at 3–5 revs/sec (200–300 r/min) on test bench.

Set distributor "0" to position which corresponds to firing of cylinder 1.

Firing should be 0–90–180–270°.

Increase speed.

Check shape of arrows (or equivalent symbol depending on test unit).

If deviation is more than 2° this indicates that side play is too large or cam is worn.




D3


Checking mechanical advance

Run distributor at 3.5 r/s (200 r/min). Calibrate meter. Increase speed and check that mechanical advance conforms to specification.

If not, check that balance weights are lubricated and do not bind.

Also check springs.

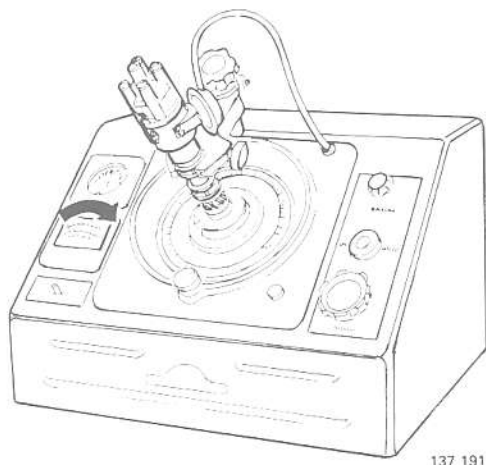

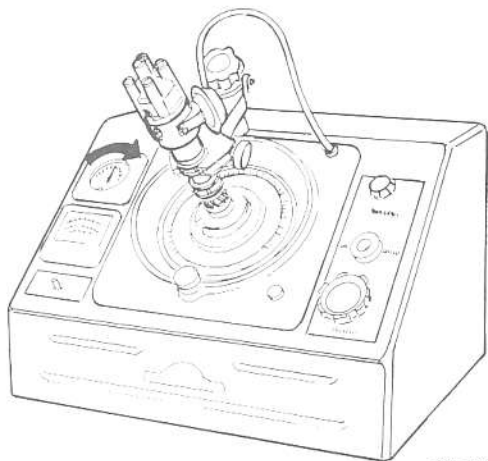

137 192

Checking vacuum advance

Run distributor at 10 r/s (600 r/min).





Calibrate meter.

Increase vacuum and compare value to specification.

Breakerless ignition system

Contents

	Operation	Page
Ignition coil and HT leads	E1–E4	38
Checking distributor cap and rotor	F1–F2	39
Checking impulse sender and air gap	F3–F4	40
Checking ignition advance	F5–F11	40
Basic-setting	F5	40
Mechanical advance	F6	40
Vacuum advance	F7–F10	42
Retard	F11	43
Reconditioning distributor	G1–G28	43
Replacing vacuum control unit	G1–G2	43
Replacing distributor B 19–B 23	G3–G4	44
Replacing impulse sender B 19–B 23	G5–G11	44
Replacing distributor B 27/B 28	G12–G21	47
Replacing impulse sender B 27/B 28	G22–G27	49
Checking side play	G28	51
Lubrication	G29	52
Replacing control unit	G30	52
Testing distributor on test bench	G31–G34	53
Wiring diagram		55
Fault tracing		56

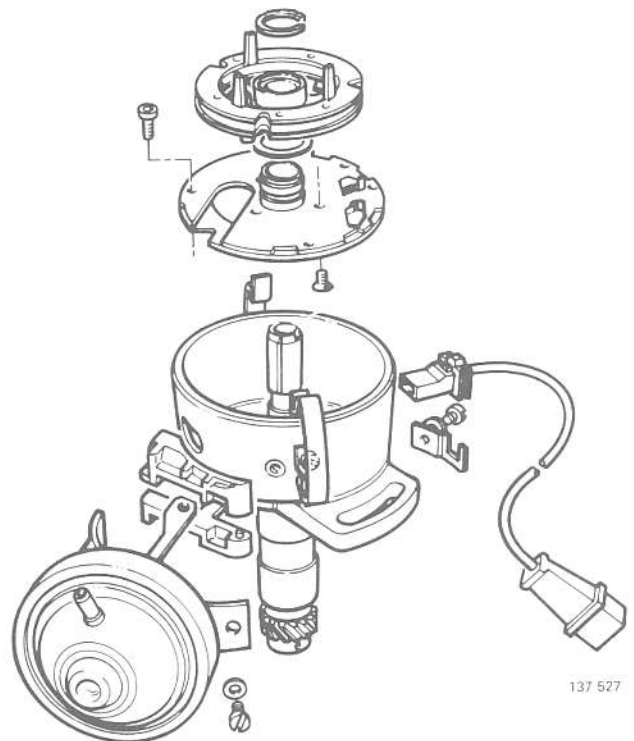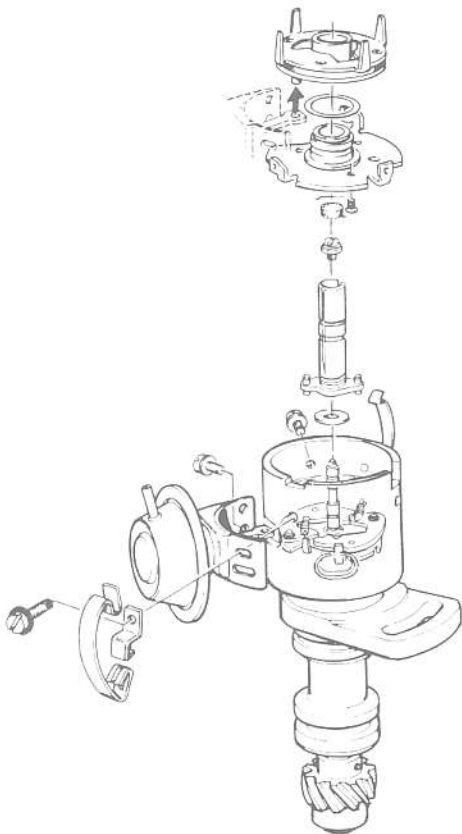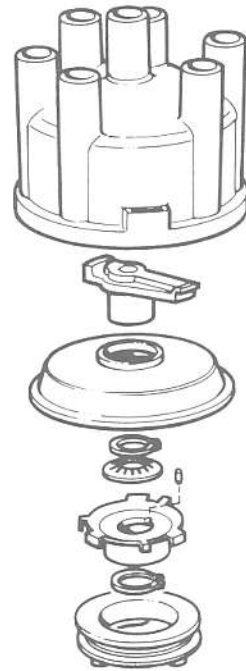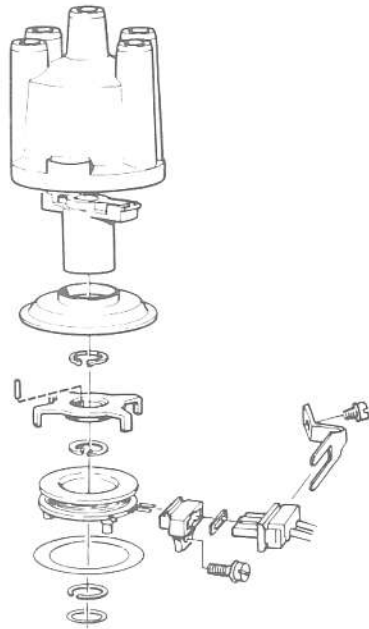

137 526

137 527

E. Ignition coil and HT leads




136 464

E1

Testing ignition coil, ballast resistor and HT leads

Test conditions:

- Ignition coil and ballast resistor at approximately 20°C (68°F)
- All leads disconnected from components under test.

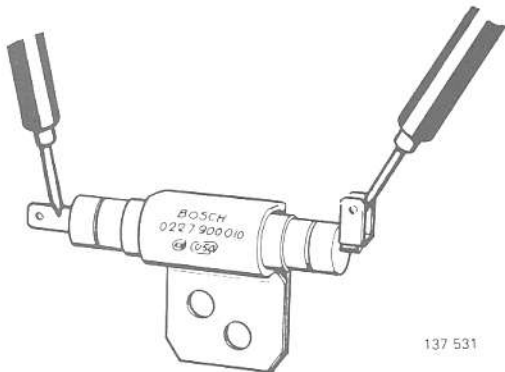


137 531

E2

Measuring resistance of ballast resistor

B 20, B 19–B 23	0.9±0.1 Ω
B 27, B 28	1.0±0.1 Ω

(Both resistors are connected in series)

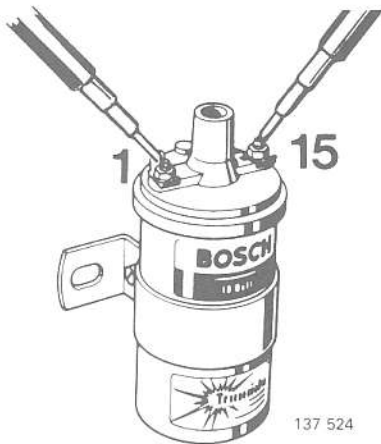


137 524

E3

Checking ignition coil

- check outer casing for cracks
- measure resistance across terminals 1(–) and 15(+).

B 20, B 19–B 23	1.9±0.1 Ω
B 27, B 28	0.5±0.1 Ω




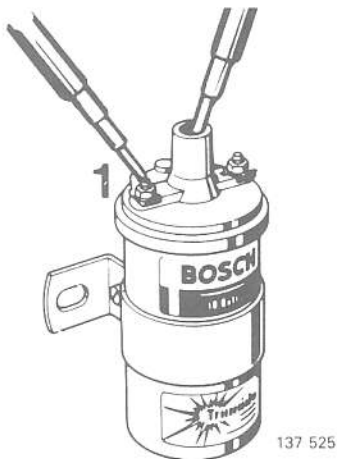


137 525

- measure resistance across terminal 1(–) and HT terminal.

All models: 9.5±1.5 kΩ.


Checking HT leads*

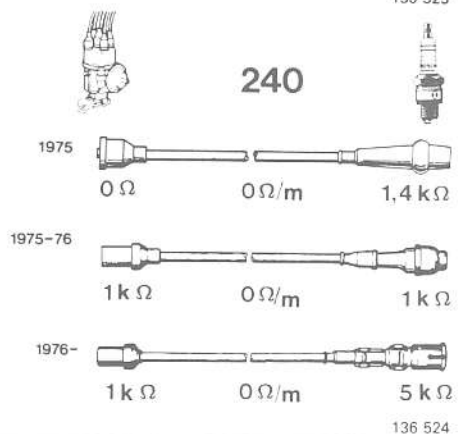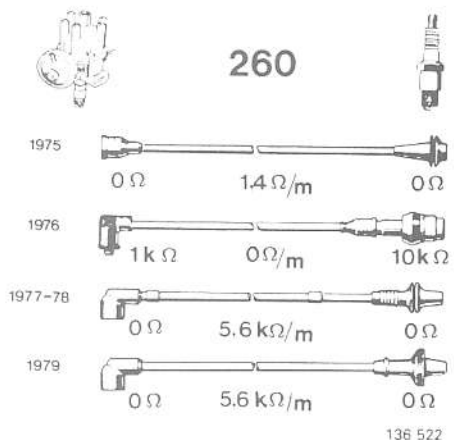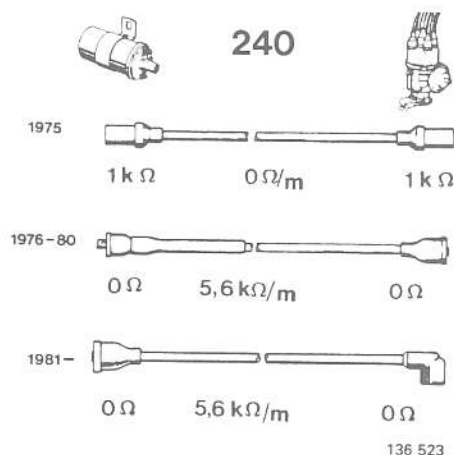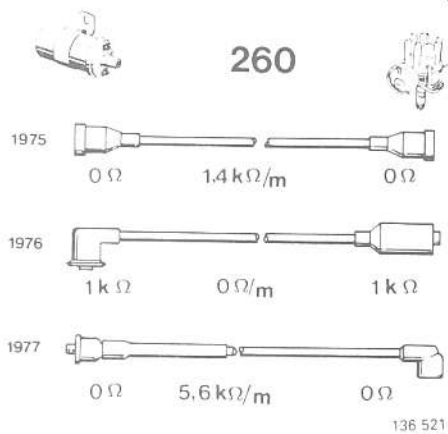

*Note: Resistance values are given in K Ω -per-meter of length. (Measure lead in order to compute correct value.) All values have a permissible tolerance of ± 20%.

F. Distributor

F1

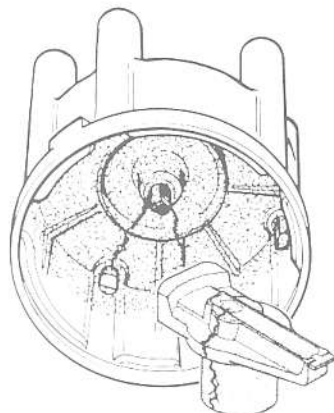

Checking distributor cap

Check for:

- cracks
- burnt electrodes, tracking
- carbon brush for wear or damage

Important! To prevent retaining springs from damaging rotor do not crank engine when distributor cap is off.

F2

Checking rotor

Rotor should be free from cracks and electrode should not be burnt.

Measure resistance. Resistance = 5 ± 1 kΩ.



F3


Checking impulse sender

Measure resistance of sender.

B 20, B 19–B 23	0.95–1.25 kΩ
B 27, B 28	0.54–0.66 kΩ

Check that no arcing to earth occurs.

If meter pointer swings to far right (i.e. open circuit) remove impulse sender and check if sender or lead is defective.

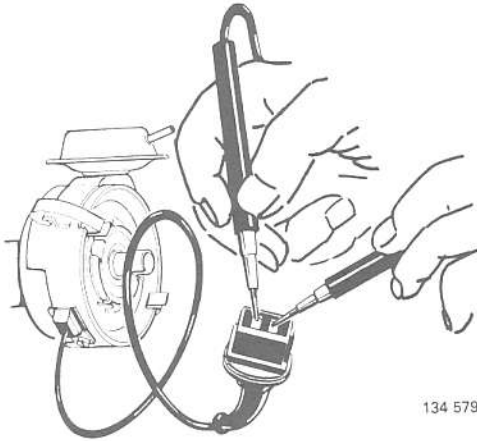

134 579


F4

Checking air gap

Set rotor and stator tips opposite each other and measure air gap with feeler gauge.

6 cyl engines: **min 0.3 mm** (0.012 in)
 4 cyl engines: **min 0.25 mm** (0.010 in).

Adjust if necessary.

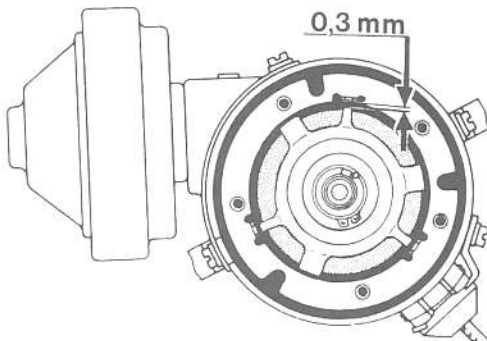


134 580

F5

Checking/adjusting basic setting at 11.7–13.3 r/s (700–800 r/min)

Disconnect hose from vacuum control unit.

Adjust ignition setting to specification. See next page.

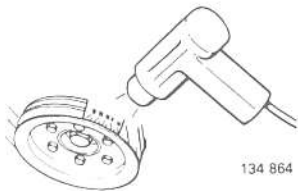


134 864

F6

Checking centrifugal advance at 42 r/s (2500 r/min)

Check that ignition advance is according to specification. See next page.

If not, examine centrifugal advance mechanism.

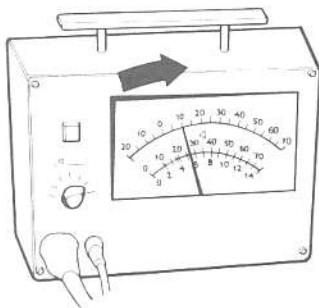

Ignition setting (before T.D.C., disconnected vacuum control unit)

With effect from 1976, vehicles for Sweden, Australia, USA and Canada (also Switzerland 1983-models) have details of ignition setting stamped on a plate to left of engine compartment.

4-cyl E-engines

Engine type	Model year/Market	Description	11.7–13.3 r/s (700–800 r/min)	41.7 r/s (2500 r/min)
B 19 E	1977–83 1984		8° 10°	28–33° 24–28°
B 19 ET	1982–84		15°	21–26°
B 21 E	1975–82 ¹⁾		8°	28–33°
B 21 ET	1981–84		15°	21–26°
B 23 E	1979–82 1983 1984	Canada Other markets	5° 10° 5° 10°	25–30° 25–29° 25–30° 25–30°

¹⁾ 1976–80: Australia, Sweden Special vehicles 5°

4-cyl F-engines

B 20 F	1975		5°	20–25°
B 21 F	1976 1977 1978 1979 1980 1981–84	USA, California Other markets California, Japan Other markets Canada Other markets	15° 12° 15° 12° 8° 10° 10° 8° 8°	25–30° 28–32° 25–30° 28–32° 22–26° 26–30° 24–28° 22–26° 22–26°
B 21 FT	1981–85	Adjust at 15 r/s (900 r/min)	12°	26–30°


6-cyl A and E-engines

B 27 A	1977–79		10°	22–25°
B 28 A	1980–84		10°	22–25°
B 27 E	1975 1976 1977–78 ¹⁾ 1979–80	Sweden, Australia Other markets	10° 10° 10° 10° 10°	30–34° 22–26° 30–34° 30–34° 25–29°
B 28 E	1980–82 1983–84		10° 12°	25–29° 27–31°

¹⁾ 1978: Sweden, Australia Special vehicles 8°

6-cyl F-engines

B 27 F	– 1976 1977 1979	California Other markets	10° 7° 10° 10°	27–32° 20–24° 27–32° 20–24°
B 28 F	1980–82	Adjust at 15 r/s (900 r/min) for 1981 – California	10°	20–24°

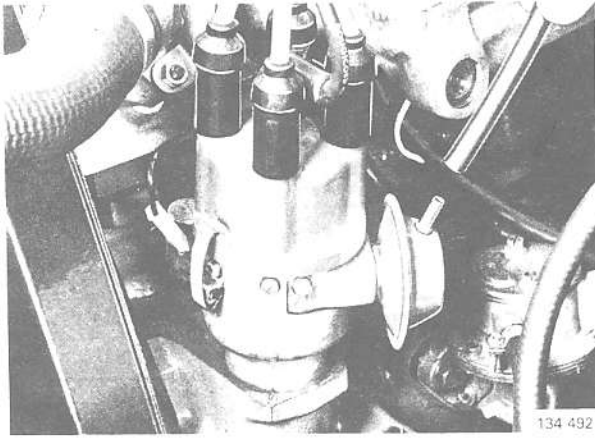

134 492


F7

Checking vacuum advance

Connect a vacuum pump to vacuum unit.

Run engine at idle speed and record ignition advance. Pump vacuum pump and check that ignition setting advances.

If ignition setting does not advance check vacuum control unit.

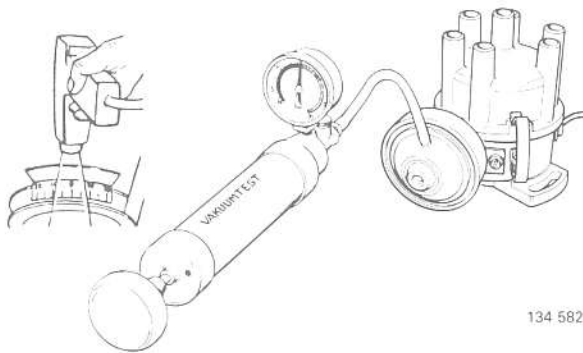


134 582

F8

Check Bosch number on distributor and turn to appropriate graph on pages 16–20

Select pressure from graph and pump up vacuum pump to this value. Record ignition setting. Subtract basic ignition setting and check that value conforms to graph.

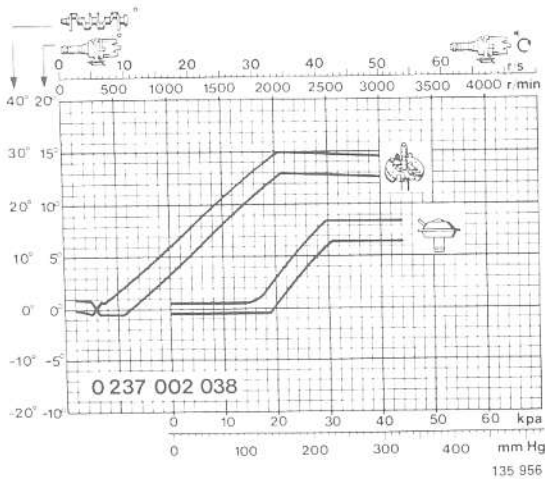


135 956

Example: Bosch number 0 237 002 038

F9

B21 F 1979– (Excl. California and Japan)

You select a pressure of 200 mm Hg. Crankshaft degrees at this pressure = 9–14°. Basic ignition setting is 10° which means that 19–24° should be recorded at timing test.

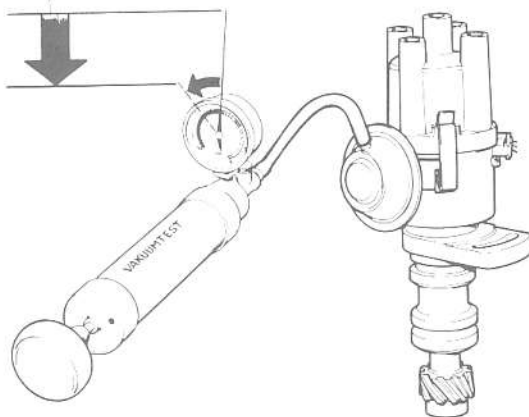


136 678

F10

Check vacuum control unit for leakage

Connect a vacuum pump and increase vacuum to 67 kPa (500 mm Hg).

Pressure should not drop by more than 13.5 kPa (100 mm Hg) during one minute.

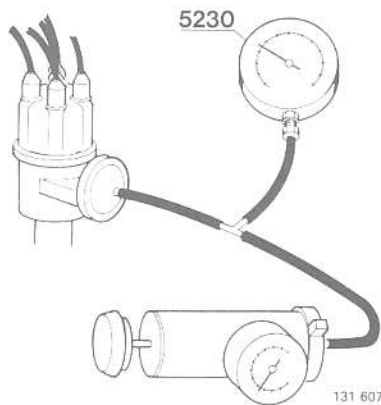

Checking ignition retard

Applies to B 19/21 E and F-Turbo engines.

Connect pressure gauge 5230 and pump 5496 to vacuum control unit.


Start engine and run at idle.

Record ignition advance. Increase pressure to 30 kPa and read off ignition setting.

Ignition setting should drop 3–7°.

Disconnect pump and pressure gauge. Reconnect hose.

G. Distributor – reconditioning

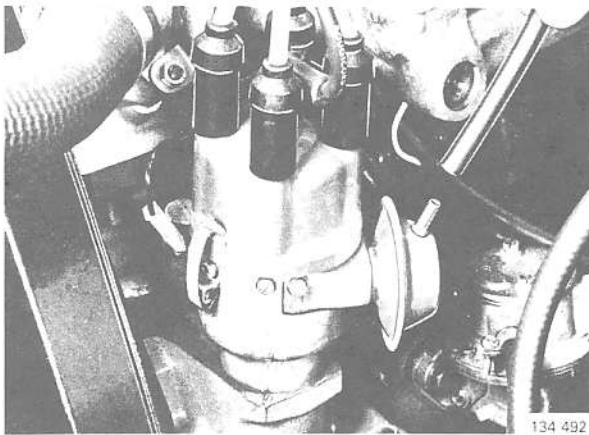

Replacing vacuum control unit

B 20: Remove distributor from engine prior to removing vacuum unit.


Remove:

- distributor cap
- rotor
- dust cover
- vacuum hose.

Mark position of distributor.

Turn distributor to obtain access to vacuum unit retaining screws.

Remove vacuum unit.

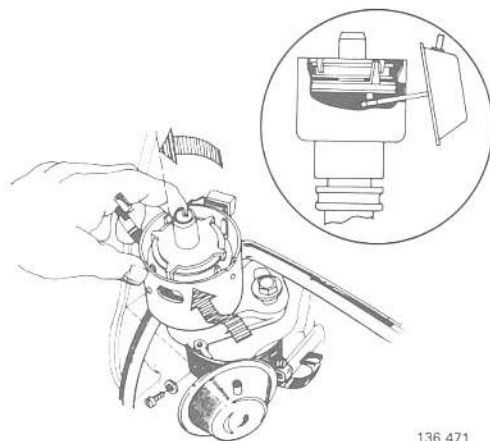

Hook on vacuum unit


Tighten screws.

Return distributor to original position.

Fit:

- vacuum hose
- dust cover
- rotor
- distributor cap.

Check ignition setting.

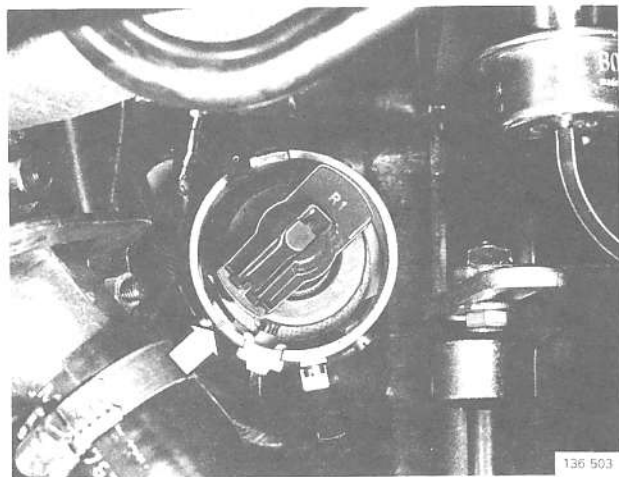

Replacing distributor on B 19–B 23

G3

Removing


Unclip distributor cap and remove dust cover.

Turn crankshaft until rotor points towards mark in distributor body, see fig.

Disconnect:

- wire
- vacuum hose.

Remove distributor retaining screw and lift away distributor.

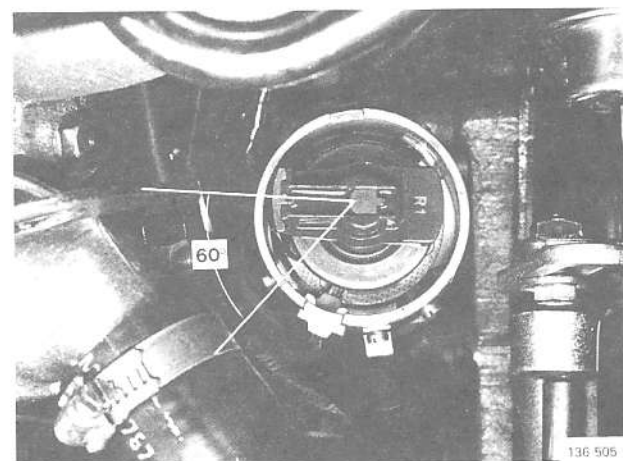

Installing

Turn rotor approx. 60° clockwise from mark in distributor body.

(Does not apply to B 20.)

Place distributor in position and fit screw loosely.

Check that rotor points towards mark.

Connect:

- wire
- vacuum hose.

Refit distributor cap.

Check/adjust basic ignition timing.

G4

Replacing impulse sender on B 19–B 23


G5

Removing

Remove distributor as described in G3.

Remove/disconnect:



- retaining clips
- vacuum unit
- wire
- impulse sender screw.

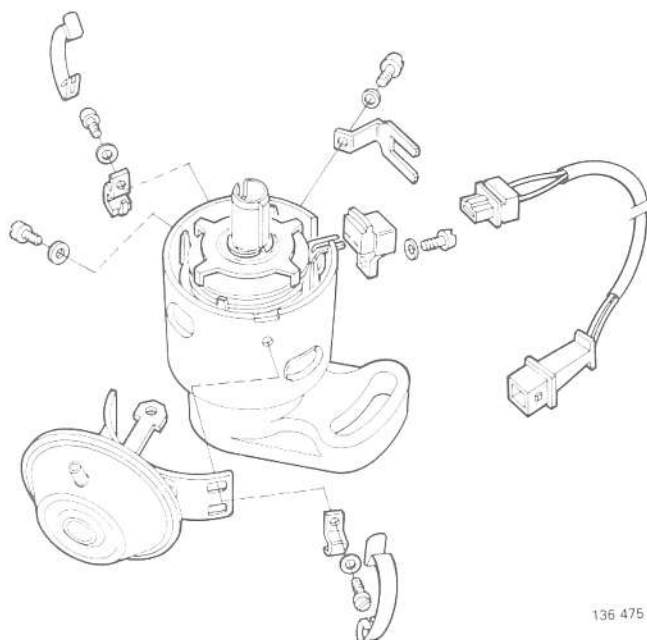

G6


**Unclip lock ring and remove shims as applicable
Remove rotor and lock pin**

Use two screwdrivers to pry rotor off shaft.
Remove lock ring and lift out impulse sender.

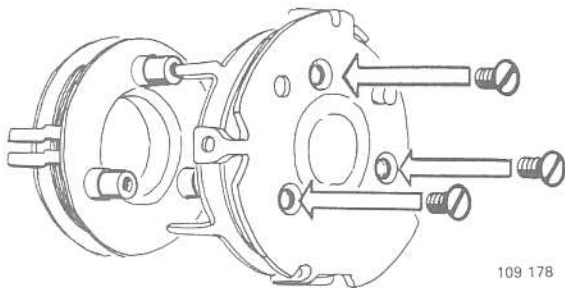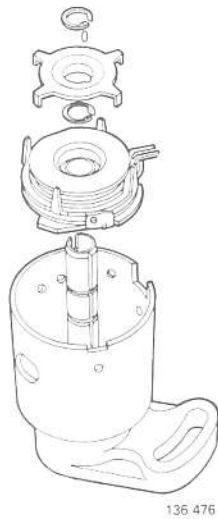

Fit new impulse sender


G7

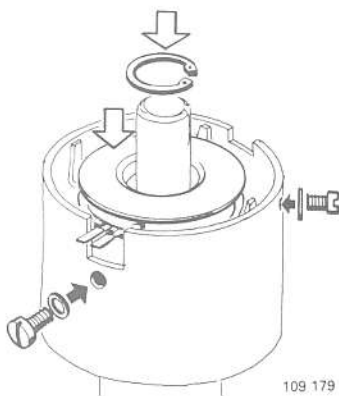

Attach lock ring

G8

G9

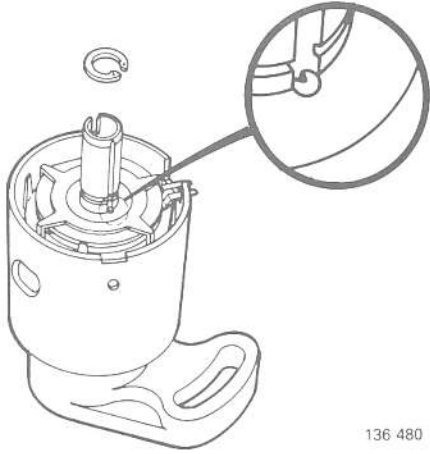


136 480

Fit rotor and lock pin

If lock pin has a groove turn it to face centre shaft.
Fit shims and lock ring.

G10

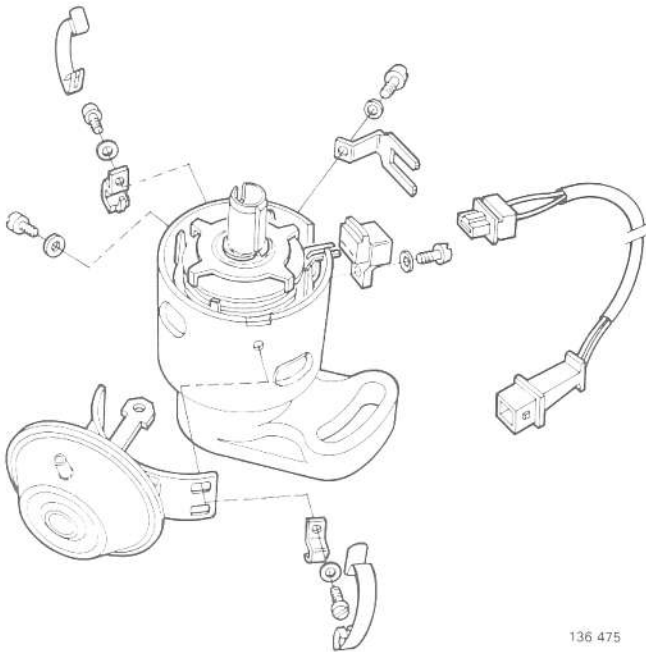


136 475

Fit/connect:

- impulse sender screw
- wire
- vacuum unit
- retaining clips.

G11

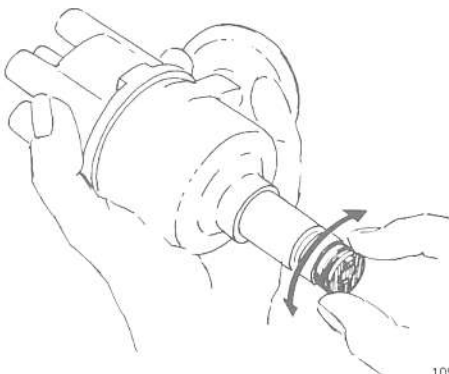


109 252

Turn shaft and check for grinding etc

Magnets will give slight resistance to turning action.
Refit distributor. See G14.
Check/adjust basic ignition setting.

Replacing distributor on B 27, B 28

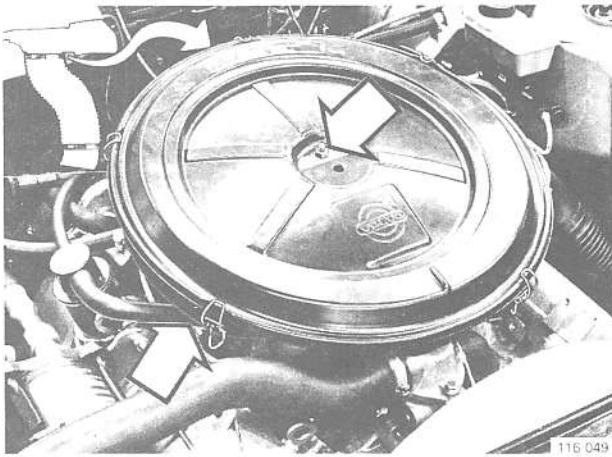

G12


B 27 A, B 28 A start at operation G15

Other engine types:

Remove air filter.

B 27 E 1975–78


Proceed to G15.

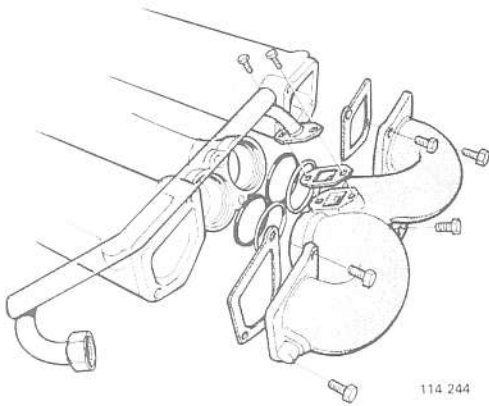

G13

Remove front part of inlet manifold


Disconnect link rod from throttle pulley.

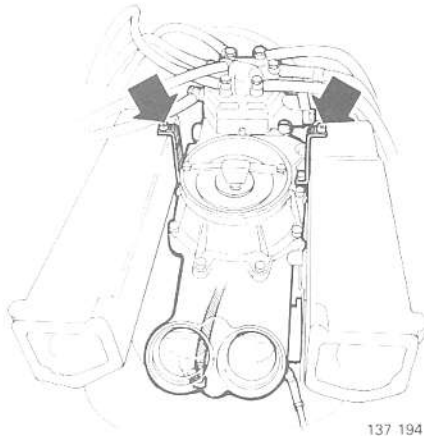

G14

Remove air-fuel control unit retaining screws

Lift unit up slightly.

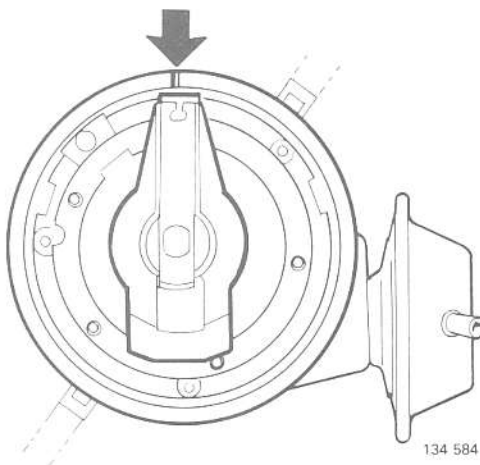

G15

All B 27, B 28 models

Unclip distributor cap and lift out dust cover.


Turn crankshaft until rotor points towards mark in distributor body.

Remove/disconnect:

- vacuum hose
- wire
- screw.

Remove distributor.

G16

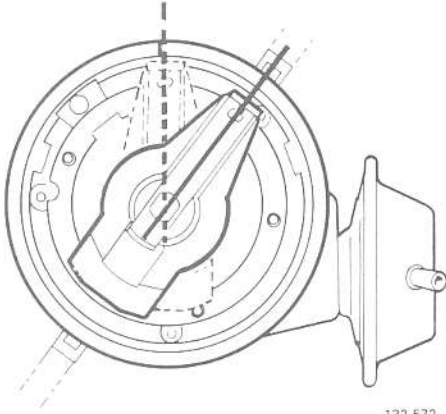


132 572

Installing distributor

Turn rotor to point towards clip.
Fit distributor.

G17

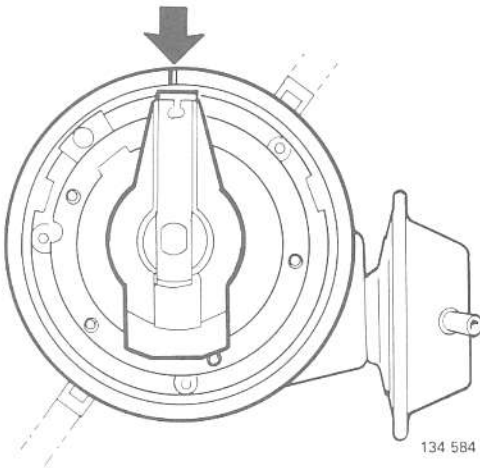

134 584


Check setting

Rotor should point towards mark in distributor body.
Fit retaining screw loosely.

Fit/connect:

- wire
- vacuum hose
- dust cover
- distributor cap.

G18

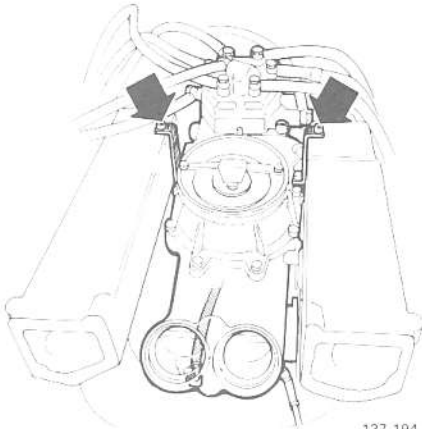

137 194

B 27 A, B 28 A proceed to G21


B 27 E 1975–78 proceed to G20

Other B 27 E models and B 27 F, B 28 E and B 28 F

Install air-fuel control unit

Reconnect link rod to throttle pulley. Tighten air-fuel control unit screw.

G19

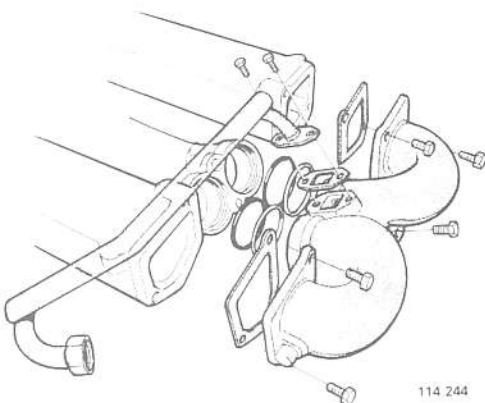


114 244

Refit inlet manifold

Tightening torque 10–15 Nm (7–11 ft.lbs.).

G20

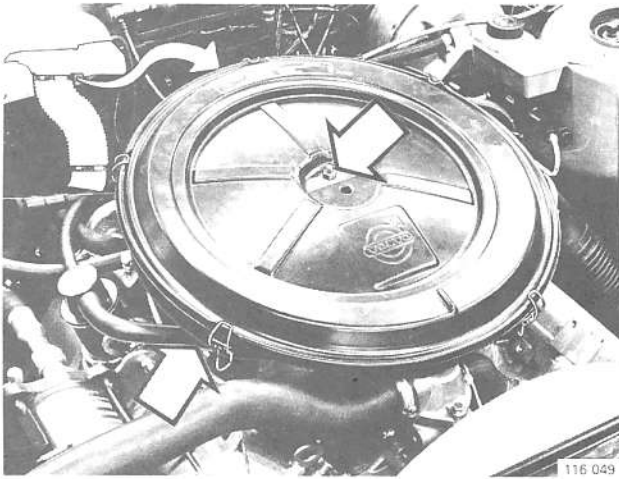


Fit air filter

G21

All B 27, B 28

Check/adjust basic ignition setting.

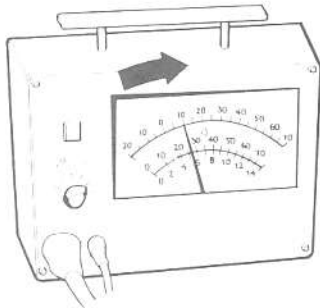


G22

Replacing impulse sender on B 27/B 28


Remove distributor according to G12–G15.

Remove:

- vacuum unit
- clips
- wire.

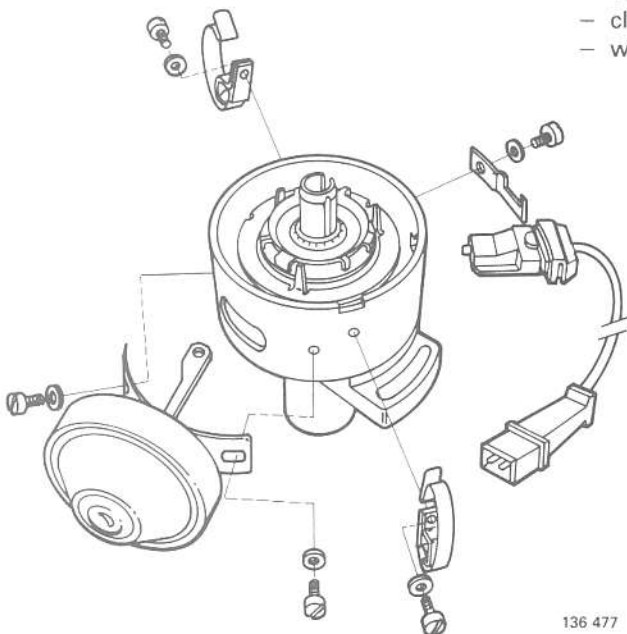

136 477

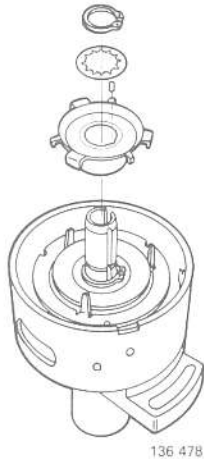

136 478


G23

Lift off rotor

Unclip lock ring and remove washer.

Lift off rotor. (Pry rotor off shaft with two screwdrivers if necessary.)

Take care not to drop lock pin into distributor.

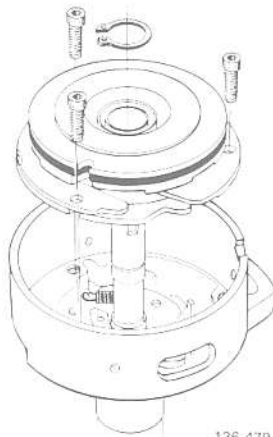


136 479

G24

Remove impulse sender

Remove screws and lock ring.

Lift up sender.

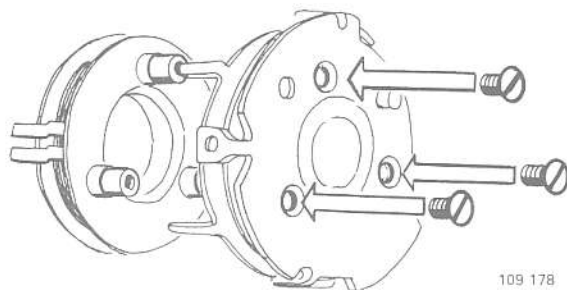

109 178


Install new impulse sender

Remove screws from impulse sender.

Place base plate section on shaft.

Make sure that pins are opposite lug in distributor body.

Fit screws and lock ring.

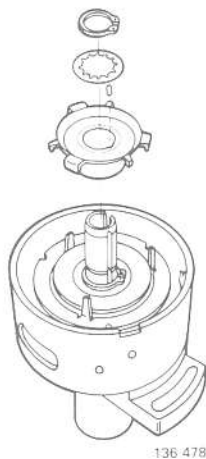

136 478

G25

Refit rotor


If lock pin has a groove turn it to face centre shaft.

Fit shims and lock ring.


Refit:

- vacuum unit
- clips.

Reconnect wire.

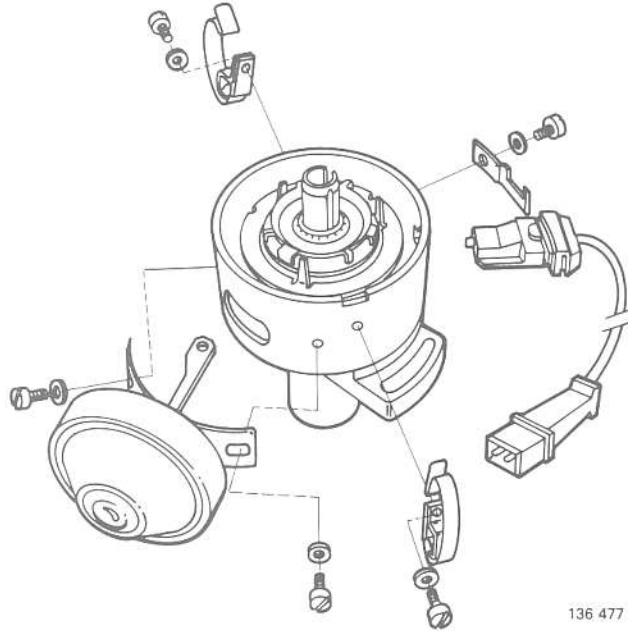

136 477

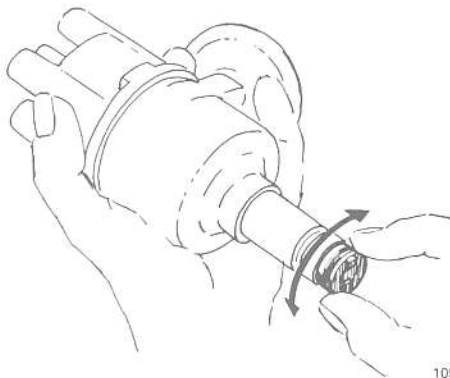


109 252

G27

Turn shaft and check for grinding etc

Magnets will offer slight resistance to turning action.
Refit distributor. See G16–G21.

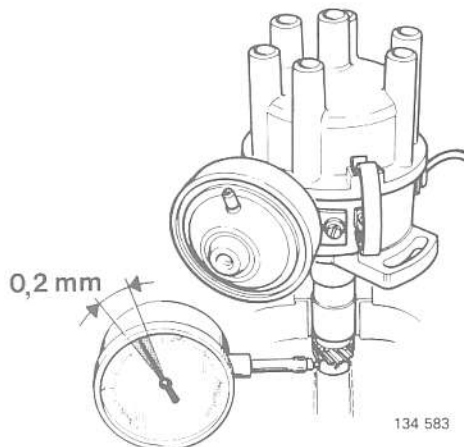



134 583

G28

Check distributor shaft side play

Max. side play = 0.2 mm (0.008 in).
If side play is greater than specified, replace distributor.


Lubrication

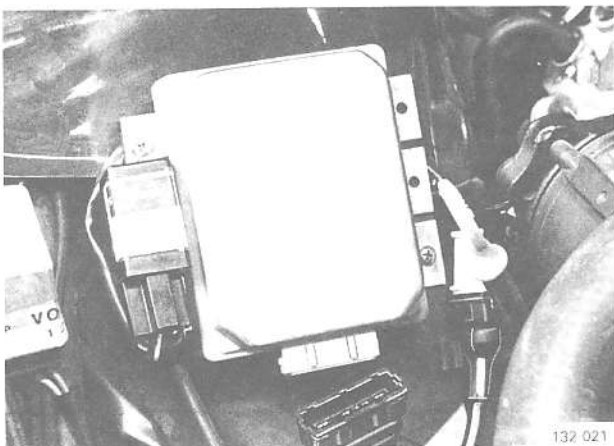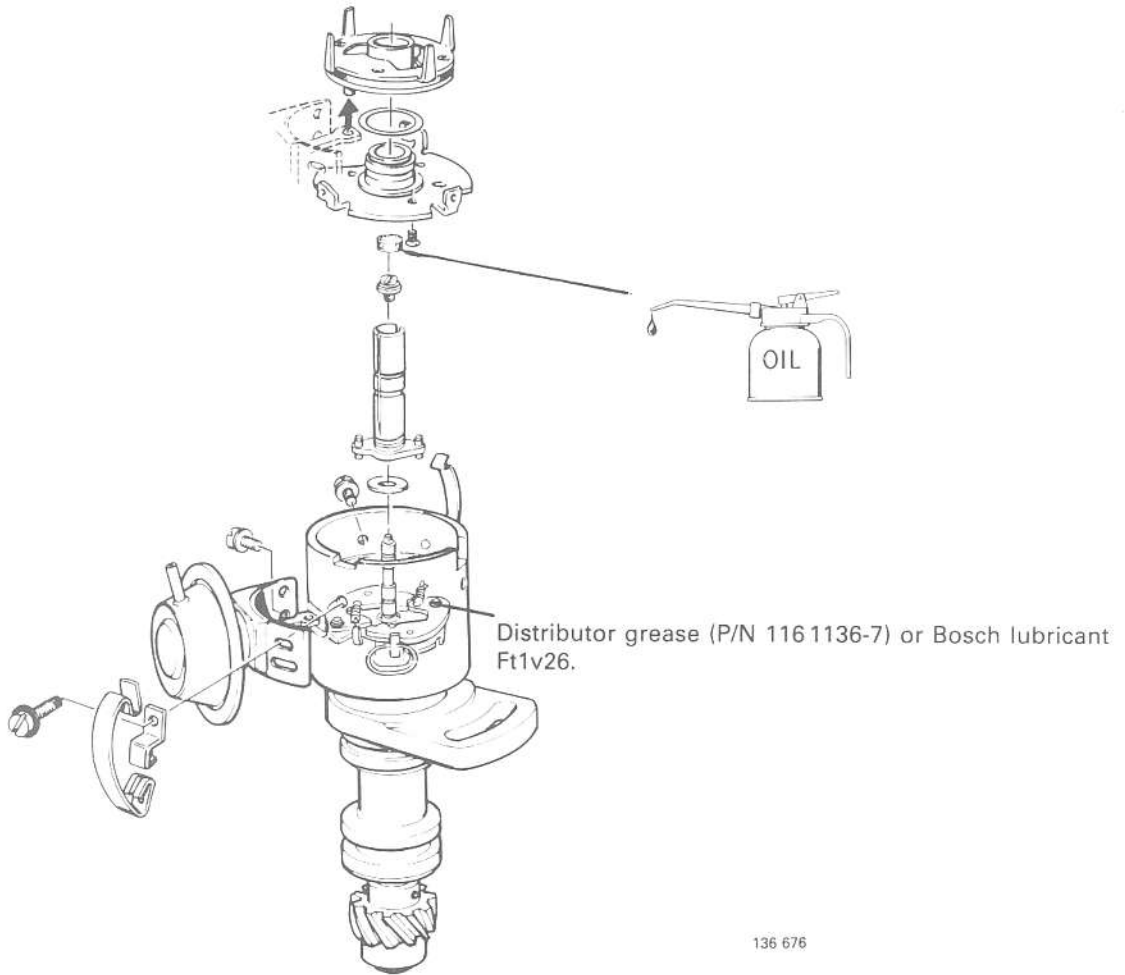

Replacing control unit



Make sure that rubber seal remains in bottom of connector when disconnecting control unit.

Testing distributor on a test bench

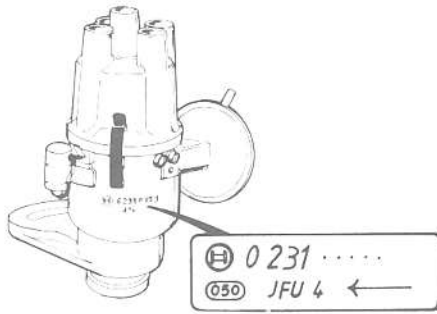

Refer to the manufacturer's instruction at all times when testing distributors on a test bench.

The number on the side of the distributor is the Bosch part number.

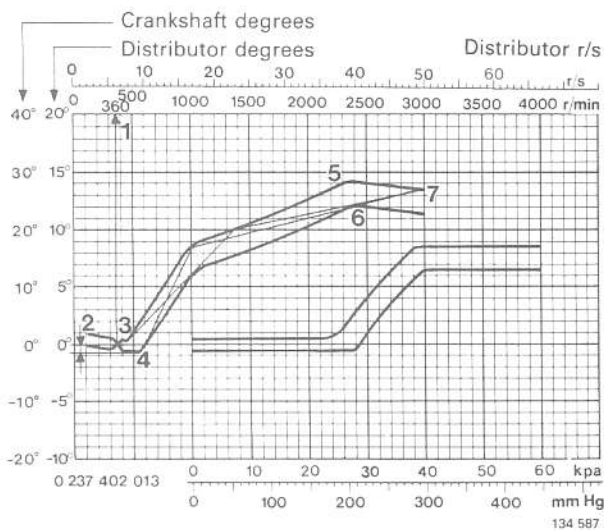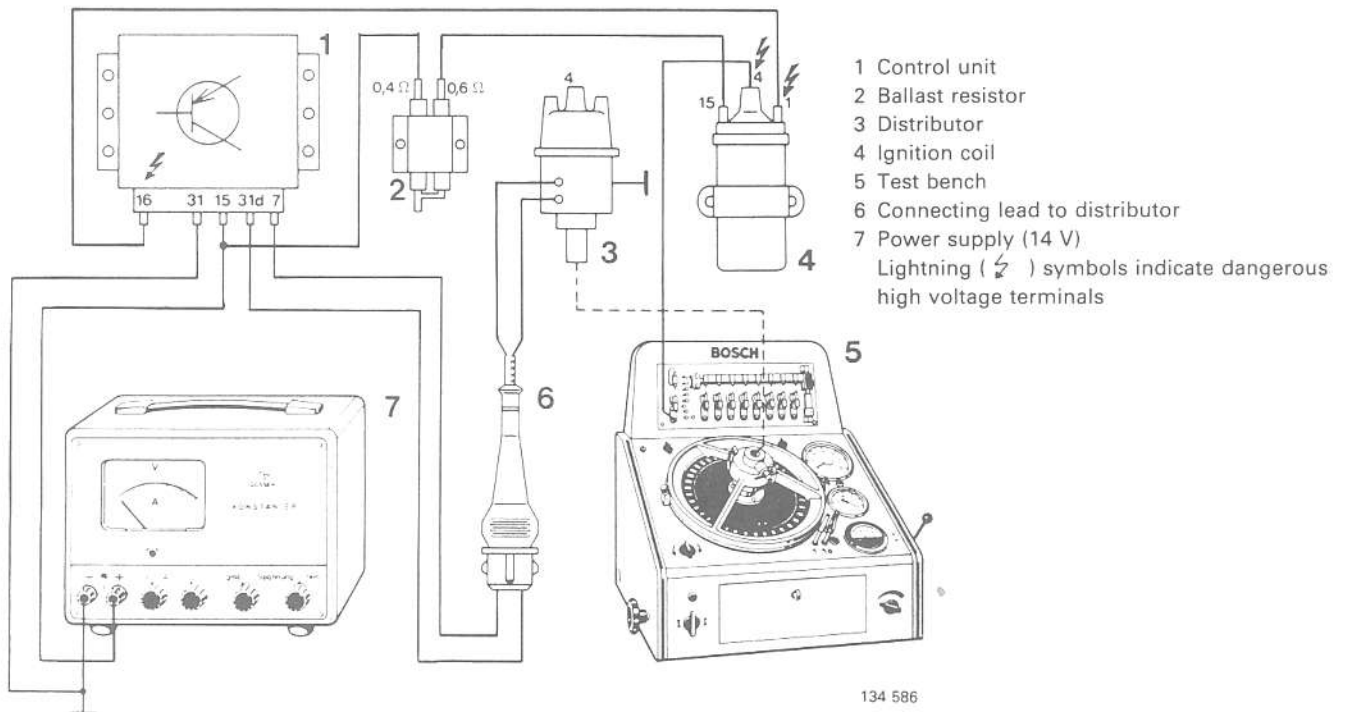

- 1 Zero set at (360 r/min)
- 2 Electronic advance
- 3 and 4 Centrifugal advance begins
- 5 and 6 Centrifugal advance ends
- 7 Absolute limit of ignition advance

Calibrate test bench

Set zero at distributor shaft speed corresponding to zero advance. See diagrams on pages 15–17. This compensates for the electronic advance from the impulse sender.

G31

G32



Checking firing

Set distributor "0" to position which corresponds to firing of cyl 1.

Firing should be:

4 cyl: 0-90-180-270

6-cyl: 0-75-120-195-240-315-360

Max. deviation = $\pm 1.5^\circ$.

Increase speed.

Check shape of arrows (or equivalent symbol depending on test unit).

If deviation is more than 2° this indicates that side play is too large.

G33




Checking centrifugal advance

Run distributor at 3.5 r/s (200 r/min). Calibrate meter. Increase speed and check that centrifugal advance conforms to specification.

If not, check that balance weights are lubricated and do not bind.

Also check springs.

G34

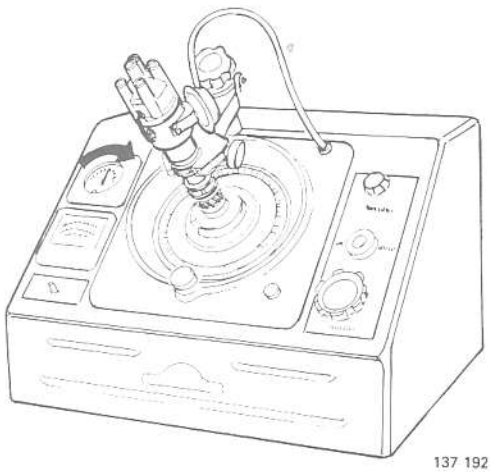

Checking vacuum advance


Run distributor at 10 r/s (600 r/min).

Calibrate meter.

Increase vacuum and compare value to specification.


Wiring diagram, breakerless ignition system

4 cyl

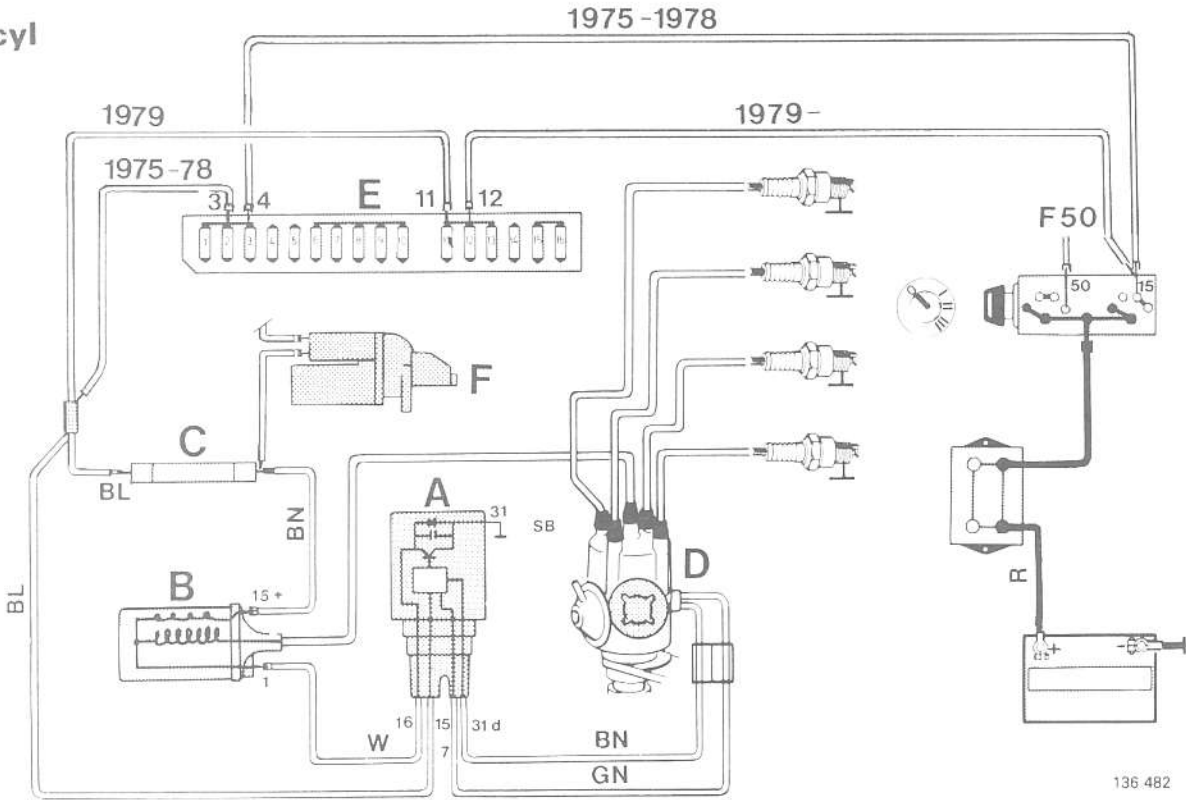


- A = Control unit
- B = Ignition coil
- C = Ballast resistor
- D = Distributor
- E = Fuse box
- F = Starter motor

6 cyl

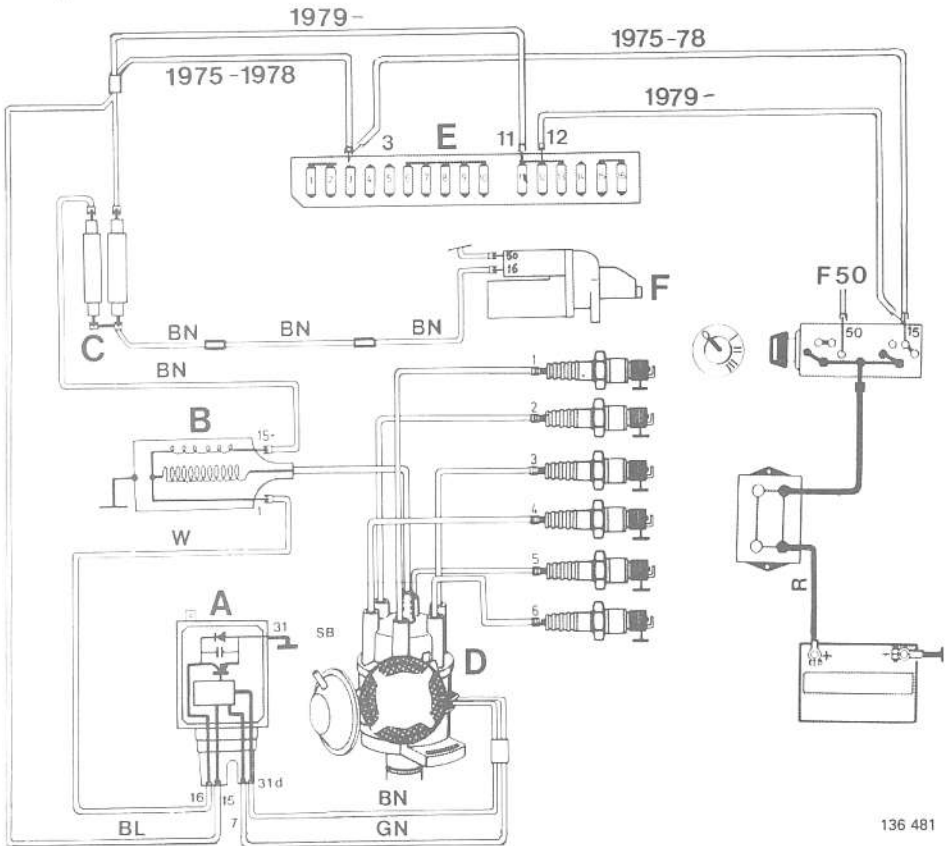


- Colour code:
- BL = blue
 - GN = green
 - BN = brown
 - SB = black
 - OR = orange
 - R = red
 - Y = yellow
 - W = white

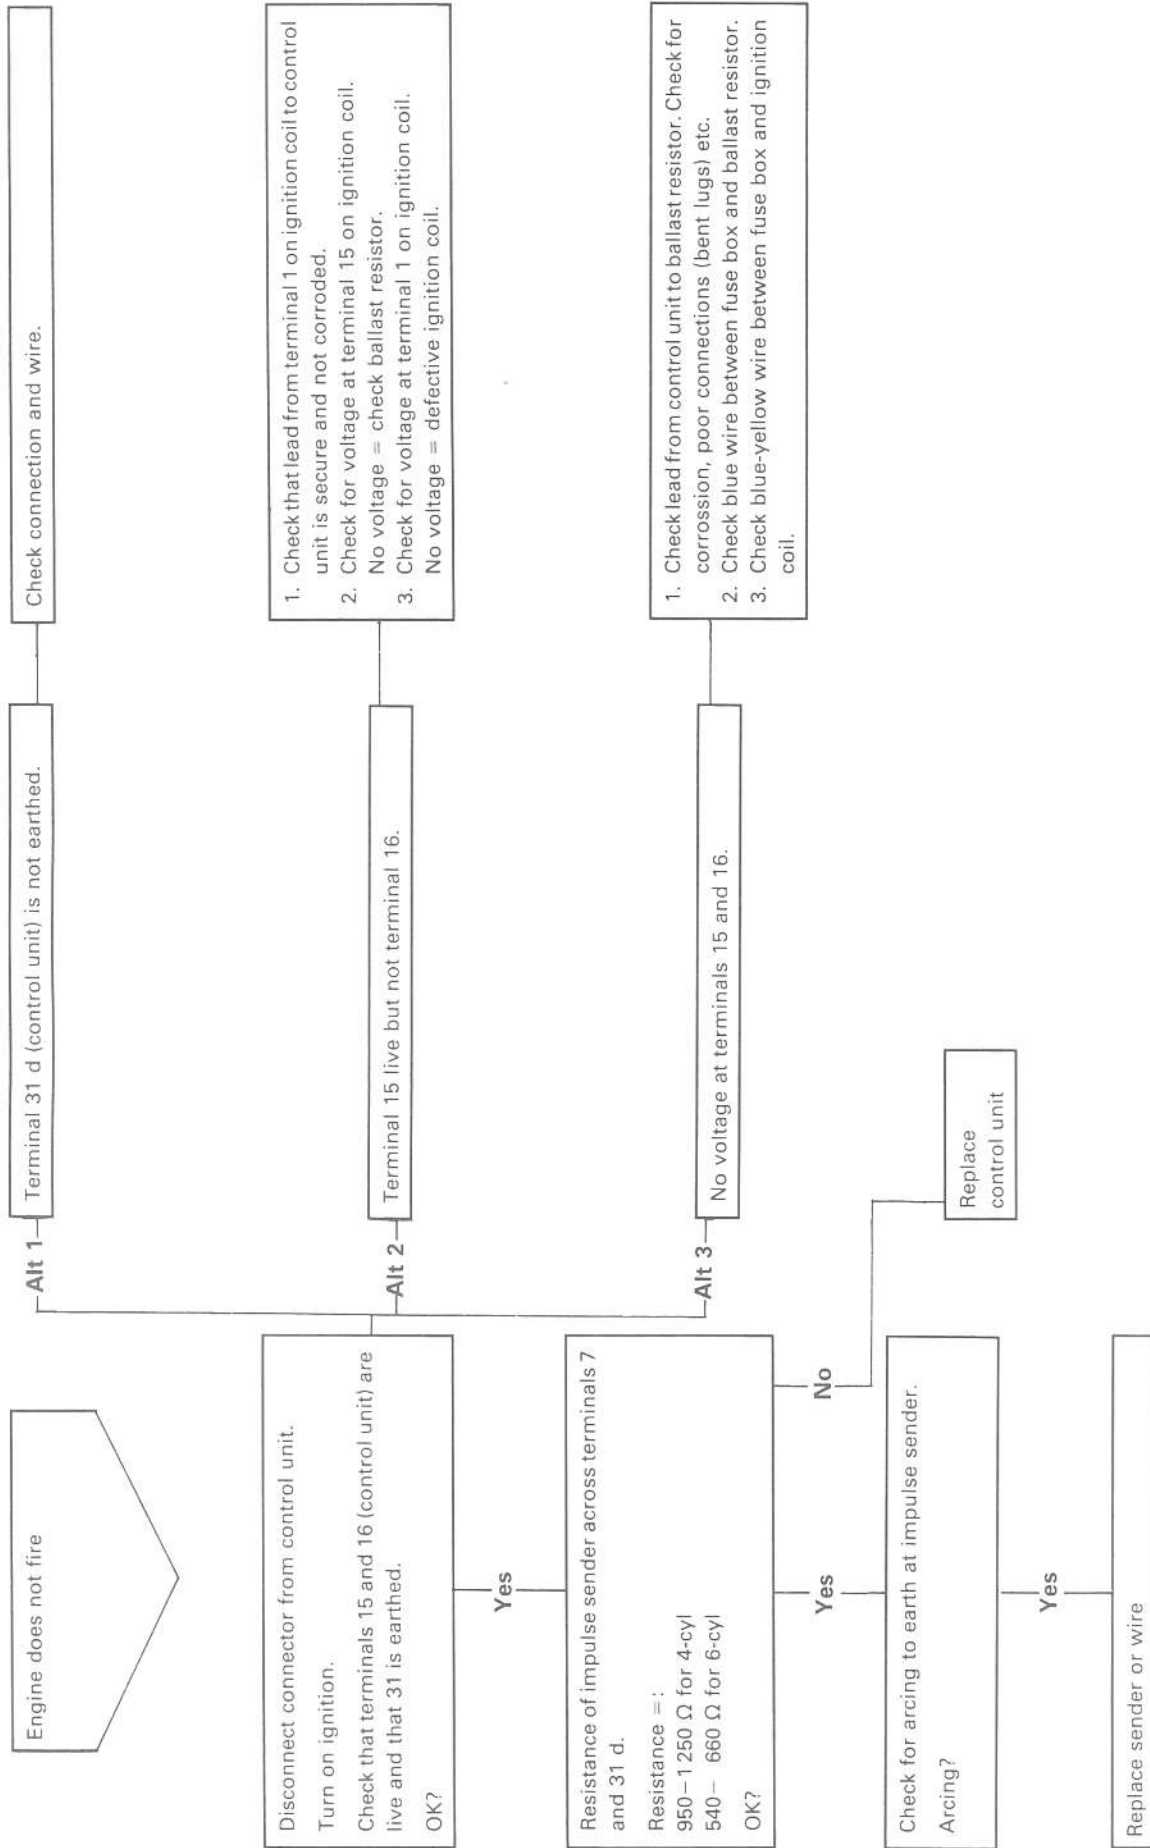

Computerized ignition system

Contents	Operation	Page
General instructions	H1-H4	58
Connectors and earth points	J1-J4	59
Modifications to 1983 models	K1-K8	60
Ignition col and HT leads	L1-L4	62
Checking distributor cap and rotor	M1-M3	63
Checking basic ignition setting	M4-M10	63
Checking/adjusting microswitch		
B 21 F-MPG 1981, B 21 F-CI 1982	M5-M6	64
B 21 F-LH 1982	M7	64
B 23 F-LH 1983-1984	M8-M9	65
B 230 F-LH 1985-		
Checking ignition advance	M11-M15	65
centrifugal advance	M11	65
vacuum advance	M12	66
dwell angle	M13	66
knock sensor	M14-M15	66
Reconditioning distributor (P/N 1306059)	N1-N4	67
replacing impulse sender	N1-N2	67
replacing distributor	N3-N4	67
Replacing distributor P/N 1332684, 1336737, 1332587	N5-N14	68
replacing impulse sender	N5-N8	68
replacing distributor	N9-N14	69
Replacing control unit	N15	70
Wiring diagram		71
Fault tracing		73


H. General instructions

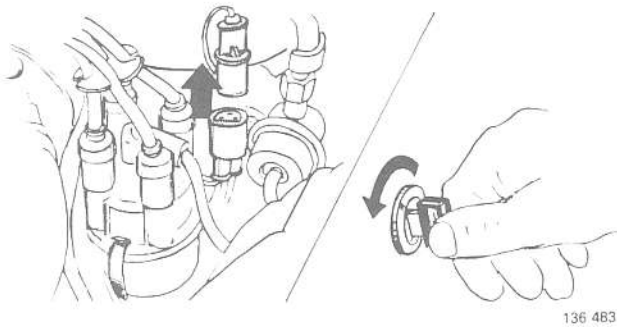

136 483

H1


Always switch off the ignition when disconnecting/connecting ignition system terminals.

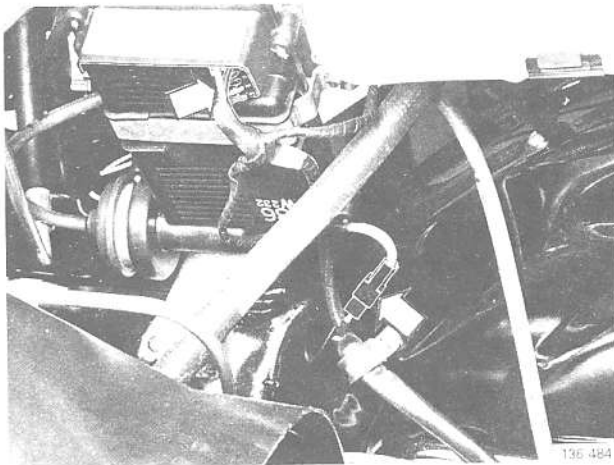

136 484

H2

Begin by checking all relevant terminals and connectors before carrying out extensive fault tracing procedures.


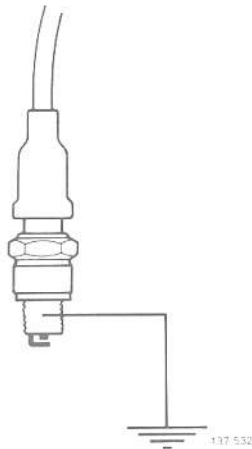


137 532

H3

Never let spark length exceed 5 mm when checking ignition system circuits or control unit may be damaged.

Consequently, connect spark plug to HT lead and earth plug via engine.

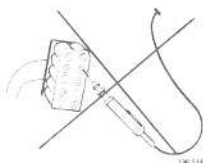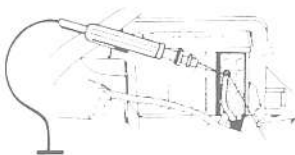


136 514

H4

CAUTION:


To avoid damaging the connector sleeves DO NOT DISCONNECT CONNECTOR from control unit when checking voltage. The volt-/ohm-meter should be connected directly to the wires.

J. Connectors and earth points

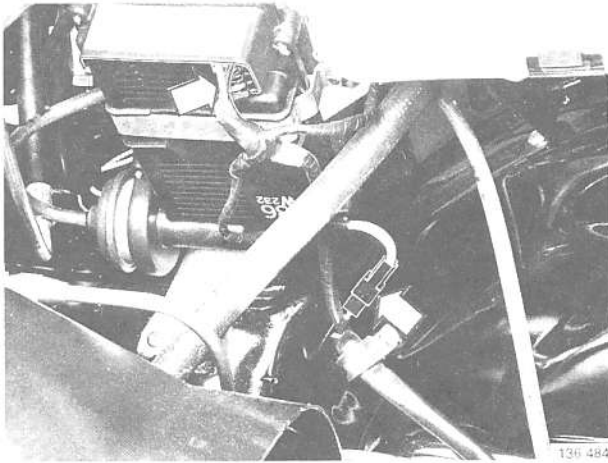


Control unit

J1

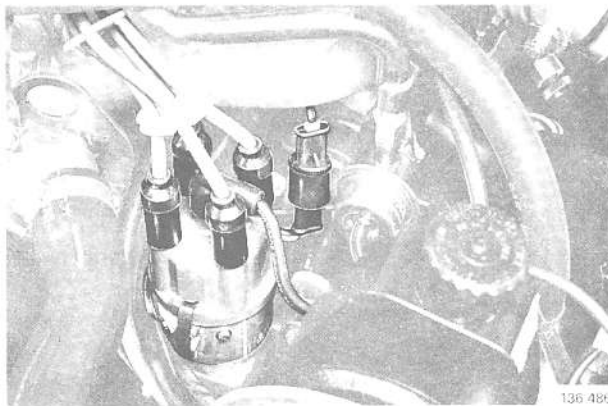


Distributor

J2

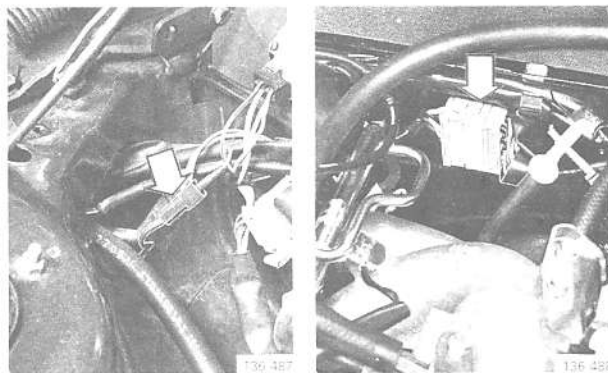

Bulkhead

J3

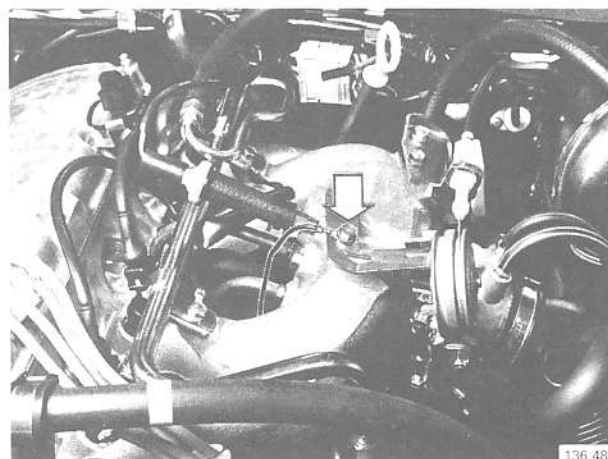


Control unit earth


J4

K. Modifications

Connecting guide sleeves

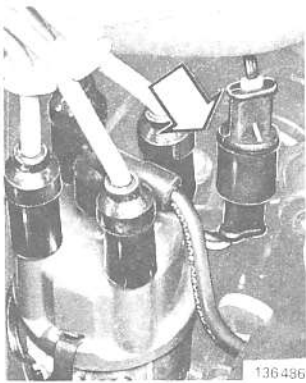

136 486

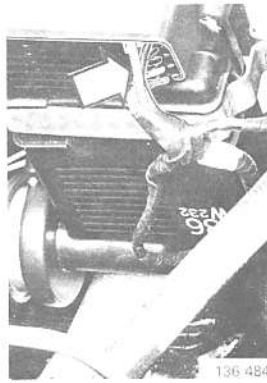

136 484

K1

With effect from 1983 models the distributor connector is equipped with guide sleeves. These sleeves can also be fitted to earlier models and to the control unit connector.

Guide sleeves P/N 1 324 909-9.

Note: From model-year 1984, the guide sleeves are installed in the control unit at the factory.

Note: The wiring harness for the control unit must be replaced if the connector has been disconnected or when replacing the control unit.

K2

Drift for connecting guide sleeves


P/N 999 5268-1.

To install guide sleeve, place sleeve in the drift and check that it protrudes 2 mm (0.08 in.).

If not, shorten tool to dimension shown adjacent.

Countersink tool.



Easier to insert guide sleeve if opening is countersunk.

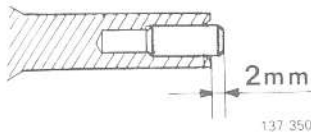

137 350



137 351

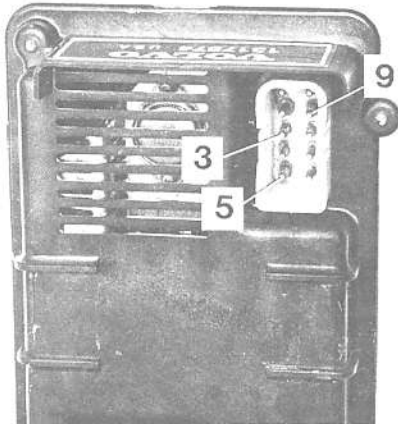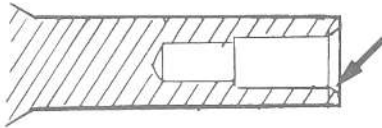

136 490

K3

Carefully clean connector on distributor and control unit

Withdraw connector from distributor. Scrape off PVC and oxide deposits from all three pins.

Use tool 9549.

Apply grease to pin.

Clean female connector with a tapered file.


Withdraw connector from control unit. Scrape off oxide from around pins 3, 5 and 9.

K4


Place guide sleeve in tool 5268

Pack (A) with grease. Repeat for each sleeve.

Insert sleeve in tool.

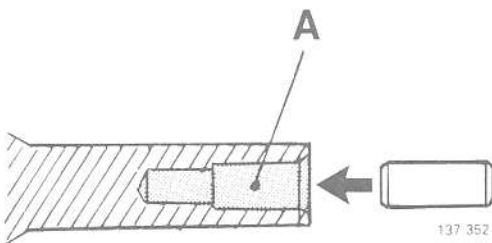

137 352

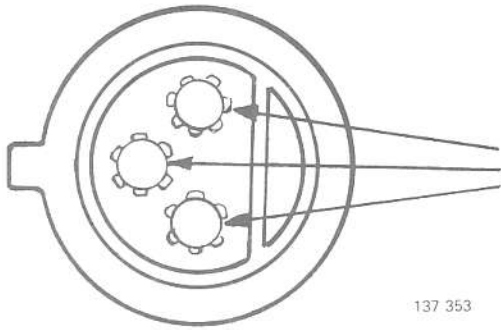


Install guide sleeves on connectors

Distributor:

On all pins.


K5

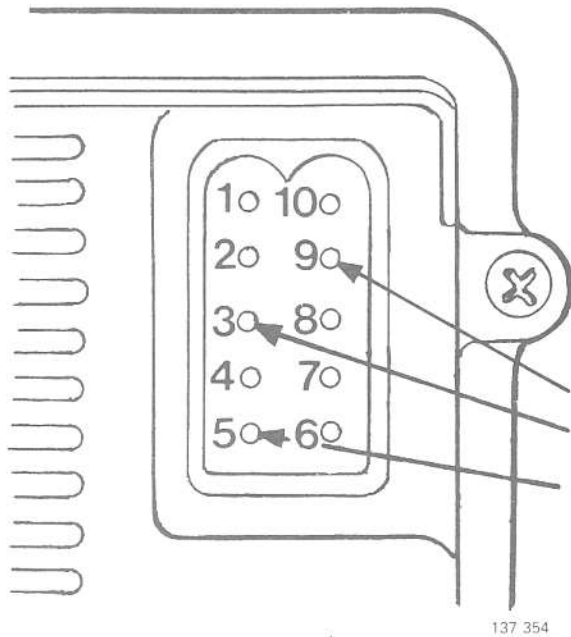

Control unit

On pins 3, 5 and 9.

K6

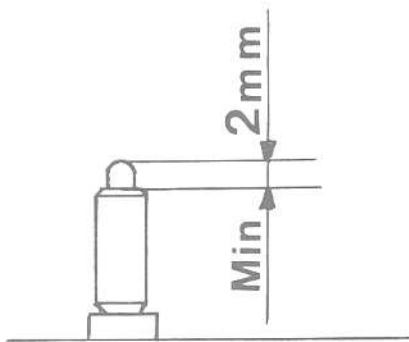


Check

Press on guide sleeves so that at least 2 mm (0.08 in) of pin is visible above sleeves.

Reconnect terminals and check function.

K7

Replacing sleeve insulators

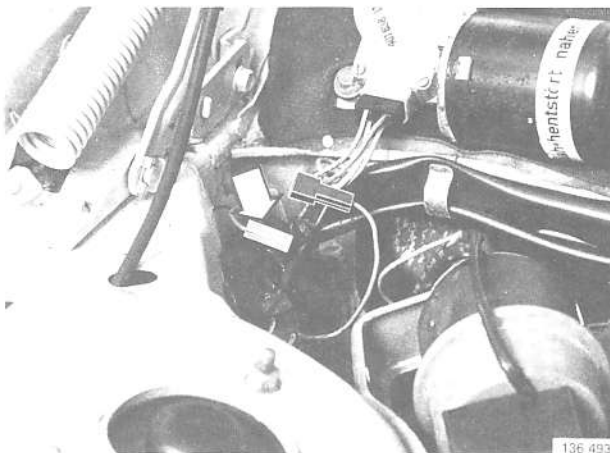

Withdraw connector


Detach rubber cover and remove insulator.

Fit new insulator P/N 949597-9.

Reconnect connector.

K8


L. Ignition coil and HT leads

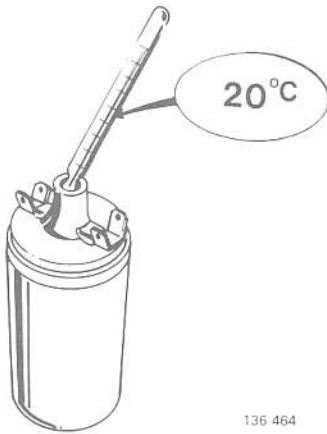

L1

Test conditions:


- Ignition coil and leads should be at a temperature of about 20°C (68°F).
- All leads must be disconnected from components when taking measurements.

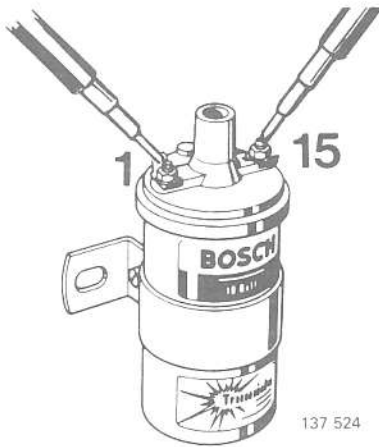

L2


Checking ignition coil

- check outer casing for cracks etc
- measure resistance across terminals 1(-) and 15(+). Resistance = 1.1–1.3 Ω.

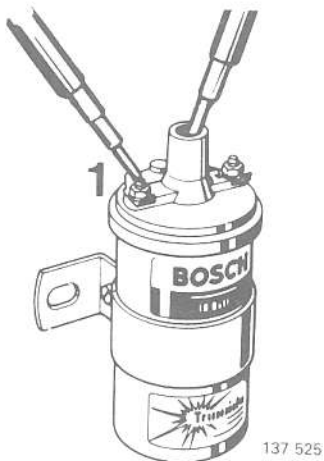

L3

- measure resistance across terminal 1(-) and the high tension terminal. Resistance = 9.6–11.6 kΩ.



L4

Checking HT leads


Resistance of HT lead between distributor and ignition coil should be 2–3.5 kohms which is equivalent to 5.6 kohms per metre.

Spark plugs suppressor resistance = 5 kohms.

Resistance of cable connector on distributor cap = 1 kohm (each lead).

M. Distributor, general

M1

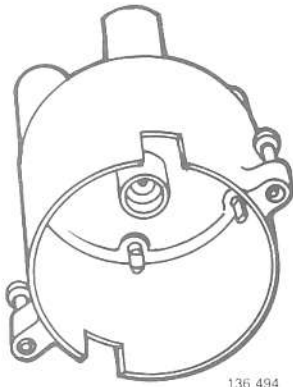


Checking distributor cap

Check for:


- dirt, cracks
- tracking, burnt terminals.

Note: Centre terminal is not spring loaded.

M2

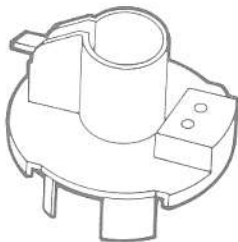

Early type

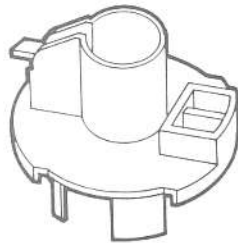


Late type

136 496

Checking rotor

Two types of rotor are in use. Use only new type for replacement.

M3

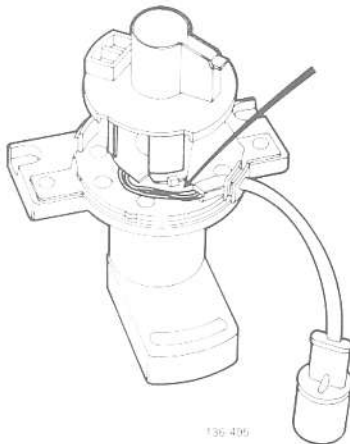

136 406

Checking Hall pick-up wire


Make sure that the wires cannot be damaged by the rotor.

M4


Checking/adjusting basic ignition setting

Before checking ignition setting check function of microswitch.

Note: See page 65 for correct adjustment procedure.

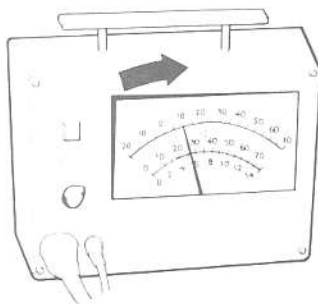

M5

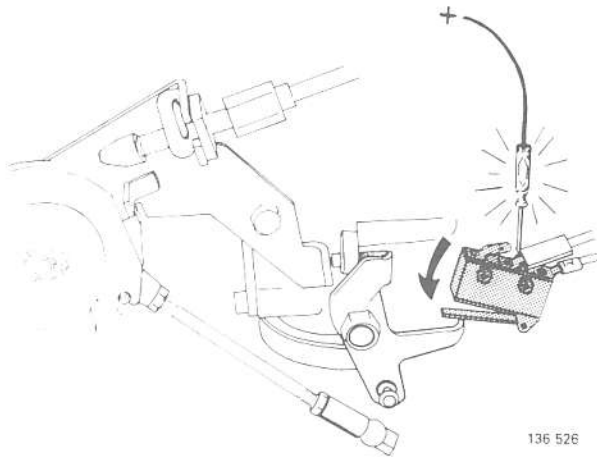

136 526


Checking microswitch on B21 F—MPG 1981 and B21 F—CI 1982

Connect a test lamp between battery (+) and terminal 2 (yellow wire) on microswitch.

Lamp should be off when engine is idling. If lamp is on, adjust microswitch as described below.

Turn throttle pulley and check that lamp lights.

M6

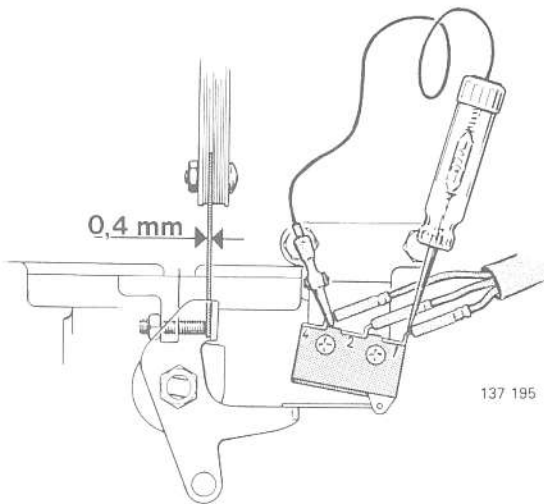

137 195

Adjusting microswitch

Place a 0.4 mm feeler gauge between adjustment screw and lever.

Unscrew microswitch retaining screws and turn switch until lamp lights.

Retighten screws.

Checking


Place a 0,2 mm feeler gauge between adjustment screw and lever.

Lamp should light.

Remove feeler gauge and insert a 0.4 mm feeler gauge.

Lamp should be off.

M7

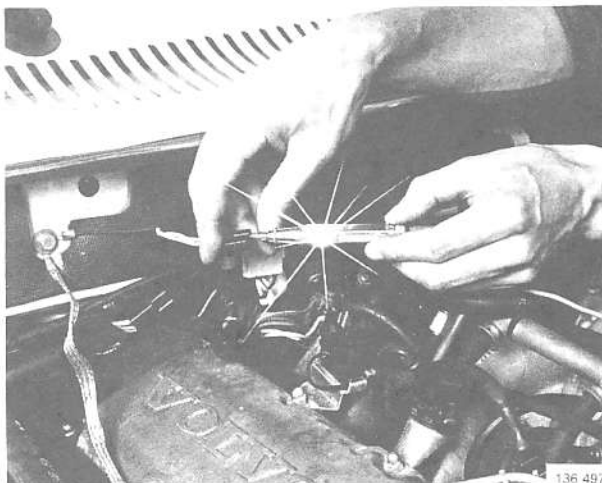

136 497

Checking microswitch on B21 F—LH 1982

Disconnect connector from vacuum switch. Connect a test lamp between battery (+) and orange wire on switch.


Start engine.

Test lamp should light with engine idling.

Increase engine rpm and check that light goes out.


If not, check hose to vacuum switch. If intact, replace vacuum switch.

M8

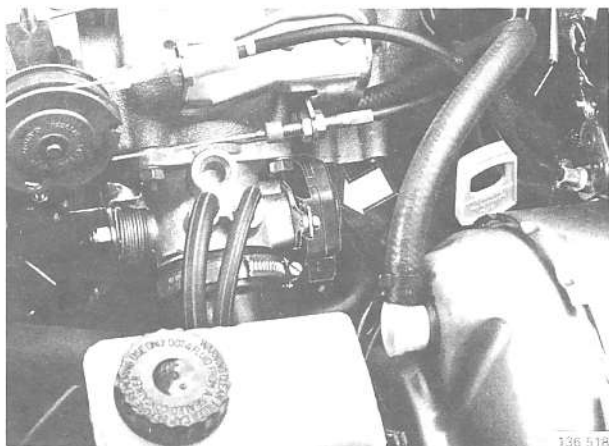

Checking microswitch on B 23F-LH 1983-1984; B 230 F-LH 1985-

With engine off, turn throttle pulley slowly and listen to microswitch. A click should be heard when throttle valve moves.

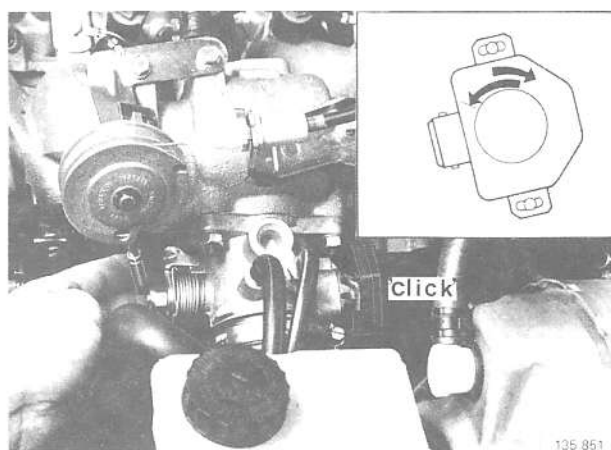

M9

Adjusting microswitch

Unscrew retaining screws.

Turn switch clockwise slightly. Then turn switch back until it contacts stop, but no further as throttle valve will start to open.

Tighten retaining screws.

Check function.

M10

Check that basic ignition setting is $12^\circ \pm 2^\circ$ at 12.5 r/s (750 r/min)

Warm engine.


Air conditioning disconnected as applicable.

Adjust ignition setting by turning distributor.

Increase engine speed to 2000 rpm for 5 seconds.

Let the engine idle and check idle quality.

Make sure the idle is stable and within specifications as variations could affect the timing.

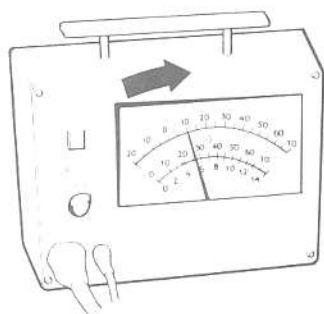


M11

Check centrifugal advance

Disconnect vacuum hose from distributor.


Run engine at 42 r/s (2 500 r/min) and check that ignition advance is $16-24^\circ$ before T.D.C. for B 23 F, B 230 F and $22-30^\circ$ before T.D.C. for other models.

If incorrect, replace control unit.

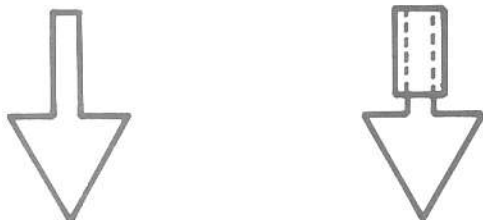

136 472

M12

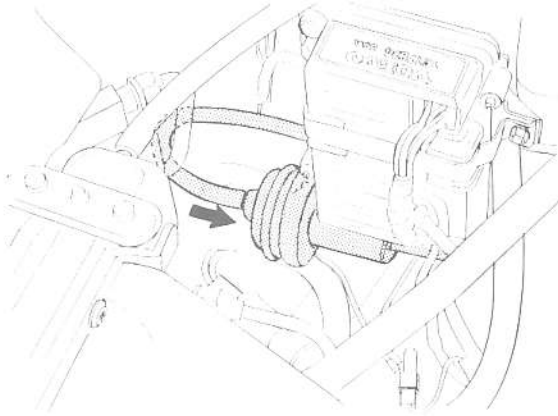

136 498


Check vacuum advance

Run engine at 25 r/s (1 500 r/min).

Disconnect vacuum hose. Record ignition advance. Reconnect hose and check that advance alters.

If not, check for vacuum at control unit (check suction at hose).

If vacuum, but no advance, replace control unit.

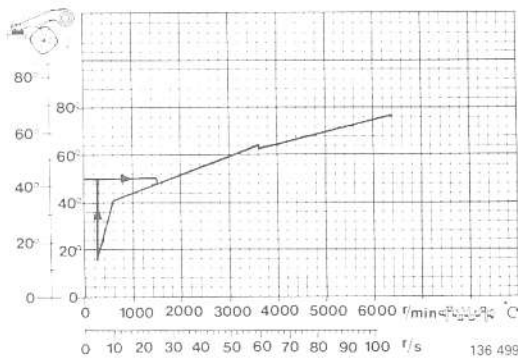

136 499

M13

Check dwell angle

Read off dwell angle at idle.

Dwell angle = 36–38°.

Increase engine rpm and check that dwell angle increases. If no increase is recorded, replace control unit.



136 500

B 23 F


M14

Checking knock sensor

Connect a Volvo Monotester or equivalent test meter. Start engine (AC disconnected).

Increase engine speed and maintain at set level by e.g. placing screwdriver across throttle pulley.




M15

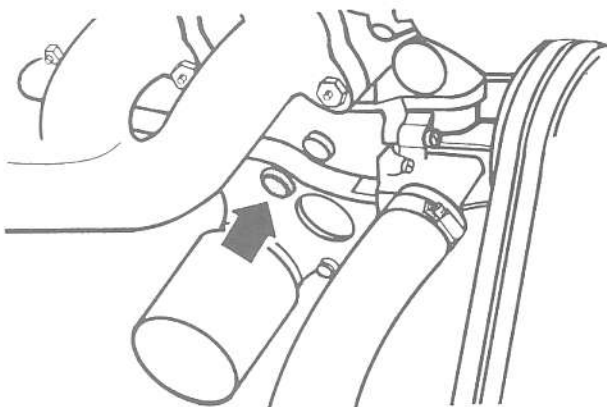

136 527

Tap plug on right side on cylinder block with a hammer. Ignition should retard by max 6° and return automatically to normal.

N. Distributor (Chrysler), reconditioning Type 1 (P/N 1306059)

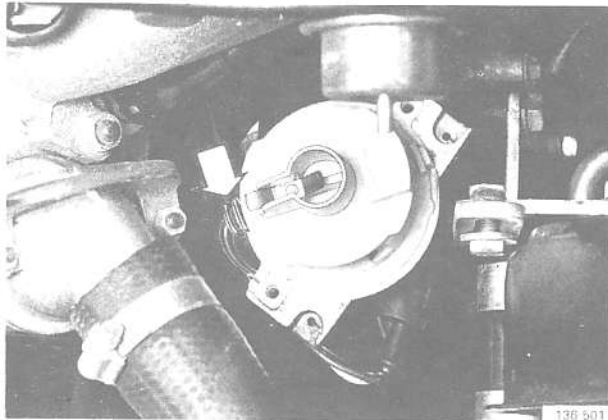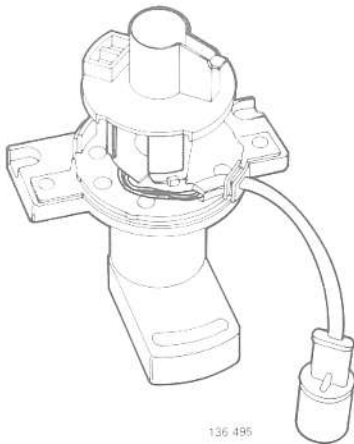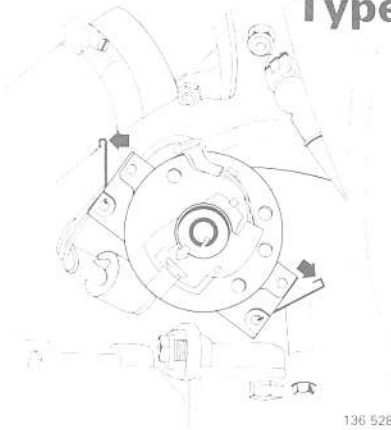

N1

Replacing Hall pick-up

Remove:

- distributor cap
- rotor arm/rotor
- springs retaining Hall pick-up
- disconnect connector
- remove Hall pick-up.

N2

Install:

- Hall pick-up
- springs
- rotor arm/rotor.

Check that wires cannot be damaged by rotor.

Refit distributor cap and reconnect connector.

See pages 60-61 for installing guide sleeves on connectors.

N3

Replacing distributor

Remove:

- HT leads from distributor cap
- distributor cap.

Turn crankshaft until rotor points towards rubber grommet.

Disconnect connector.

Remove distributor.

N4

Install distributor

Tubular pin protrudes more on one side than the other. Turn shaft until pin is opposite groove in distributor body.

Fit distributor.

Fit:

- rotor
- distributor cap and reconnect HT leads.

Reconnect connector.

Check/adjust basic ignition timing. See operation M4.

See pages 60-61 for installing guide sleeves on connectors.

Distributor (Bosch), reconditioning Type 2 (P/N 1332684, 1336737, 1332587)




N5

Replacing distributor

Remove/disconnect

- HT leads from cap
- distributor cap
- dust cover.

Refit rotor.

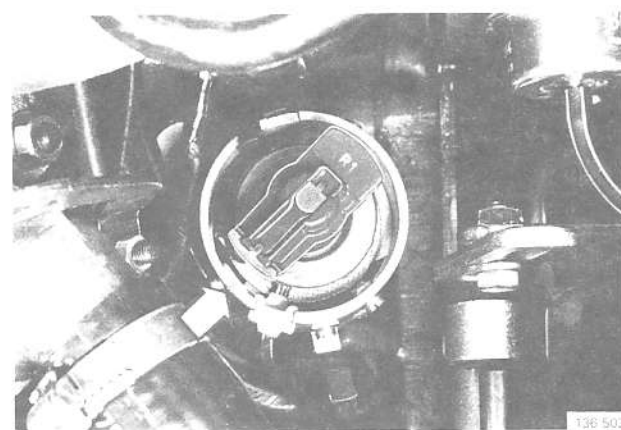


N6

Set cyl 1 to T.D.C.

Turn crankshaft until rotor points towards mark in distributor body.

Disconnect connector.

Remove distributor.

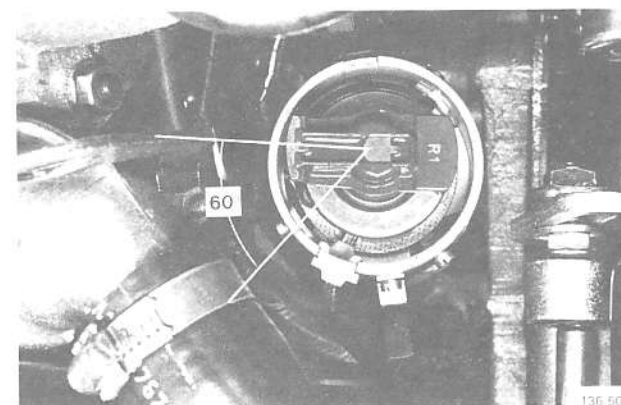

N7

Install distributor

Check that cyl 1 is at T.D.C.

Turn rotor approx. 60° clockwise from mark in distributor body.

Refit distributor.

Rotor should now point towards mark in distributor body.



N8

Fit/connect:


- dust cover
- rotor
- distributor cap
- HT leads.

Check/adjust basic ignition timing. See M4.

See pages 60–61 for installing guide sleeves on connectors.

Replacing Hall pick-up

N9

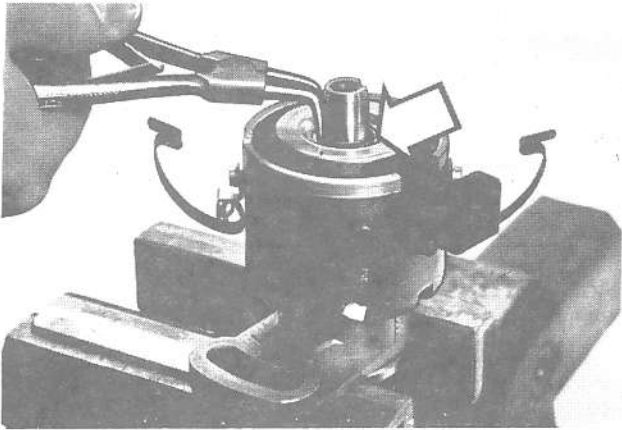

Note: The Hall Switch should not be replaced on distributors within the first year of warranty. The complete distributor must be replaced.

Remove distributor according to operations N5-N6.

Mount distributor in a vise (NOT SOFT VICE JAWS TO PREVENT DAMAGE).


Release circlip retaining trigger wheel.

N10

Pry off trigger wheel with two screwdrivers (use round-shaft screwdrivers, 5mm diameter).

Place tips of screwdrivers on steel hub, as shown.


Take care not to damage trigger wheel.

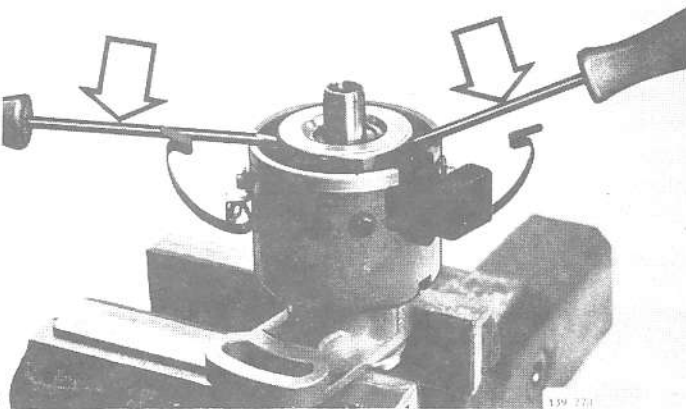

N11

Note: If trigger wheel is bent during removal, it must be replaced.



Take care not to lose lock pin.

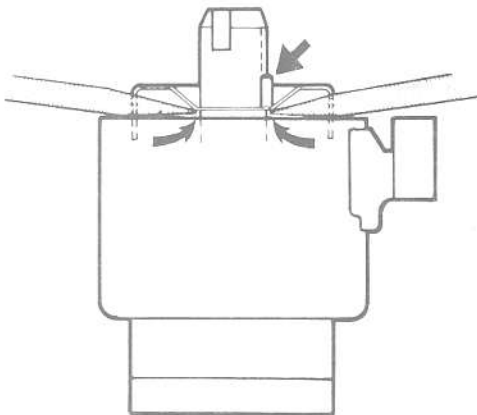

N12


Remove

- circlip
- Hall pick-up retaining screws
- plastic pin (A) for connector

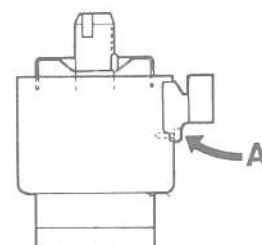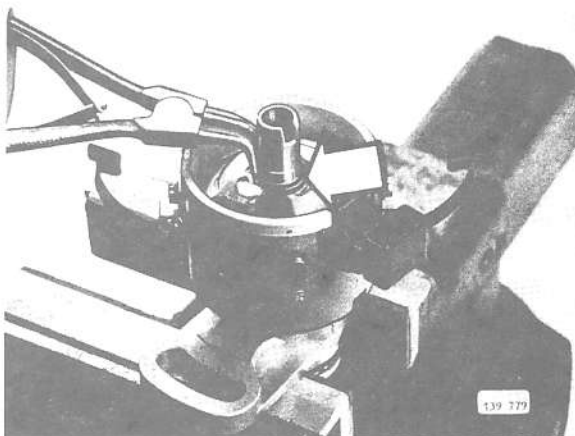

N13

Remove Hall switch and connector.

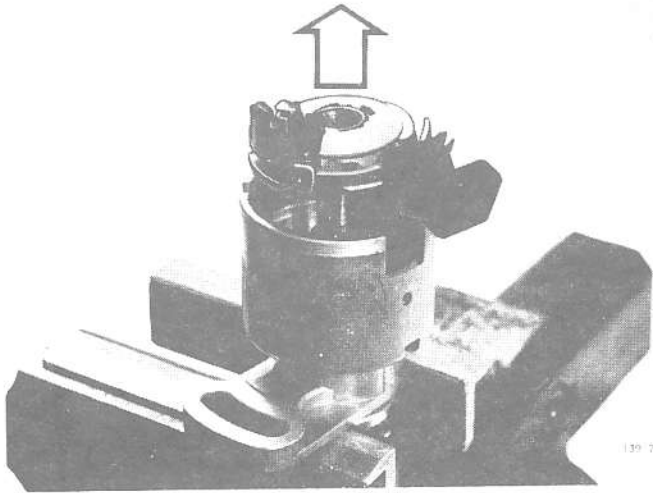


139 775

N14

Install:

- New Hall switch and connector
- circlip
- retaining screws and plastic pin (1)

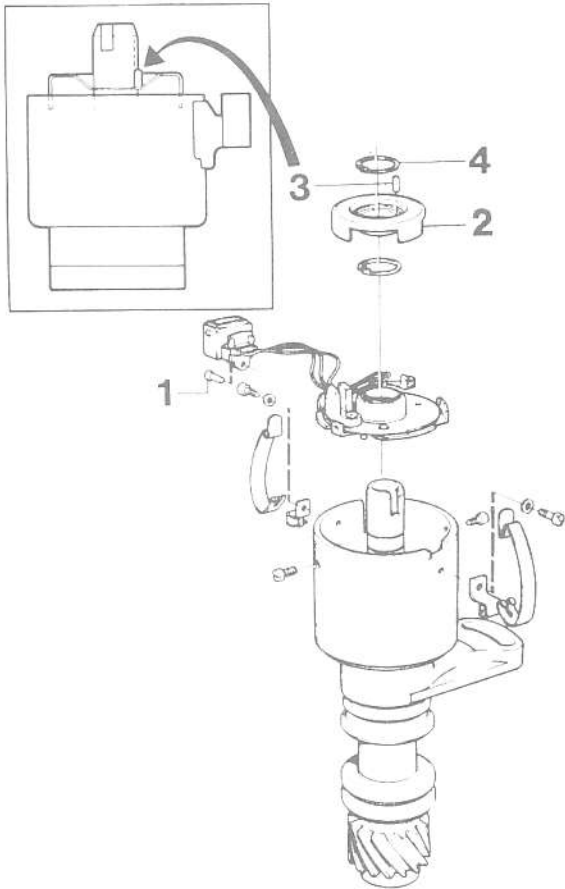

Install:

- trigger wheel (2)
- lockpin (3)
- circlip (4)
- condensation trap
- rotor arm

Install distributor according to operations N7-N8.


Control unit

N15

Replacing control unit


Check centrifugal and vacuum advance according to operations M11-M13 after installing control unit.

See pages 60-61 for installing guide sleeves on connectors.

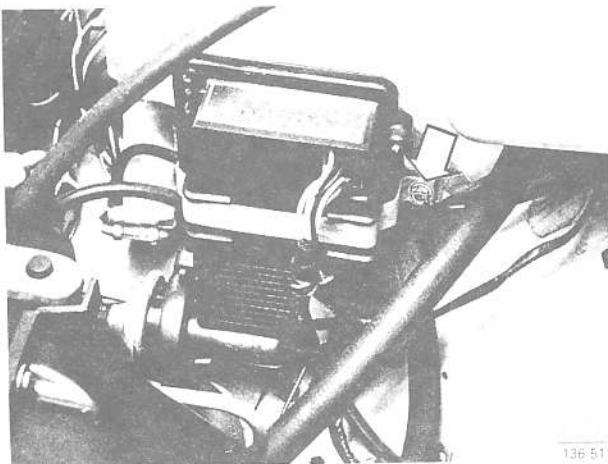

136 511

Wiring diagram, computerized ignition systems
B 21 F-LH, B 23 F-LH

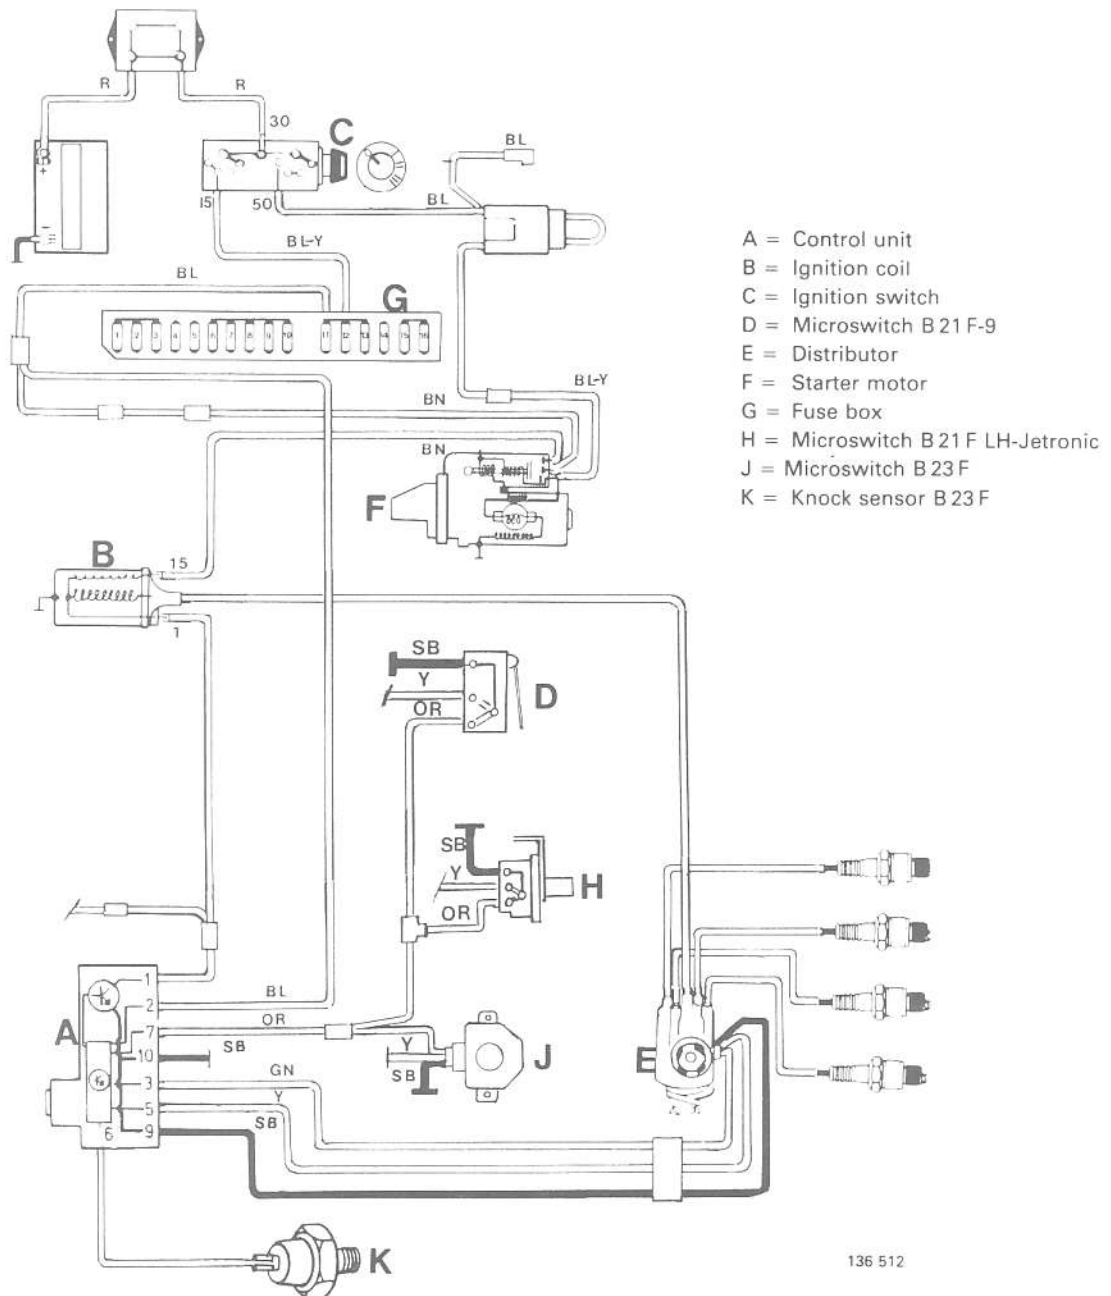


136 512

Colour code

- BL = blue
- GN = green
- BN = brown
- SB = black
- OR = orange
- R = red
- Y = yellow
- W = white

**Wiring diagram, computerized ignition system
B 230 F-LH, 1985-**

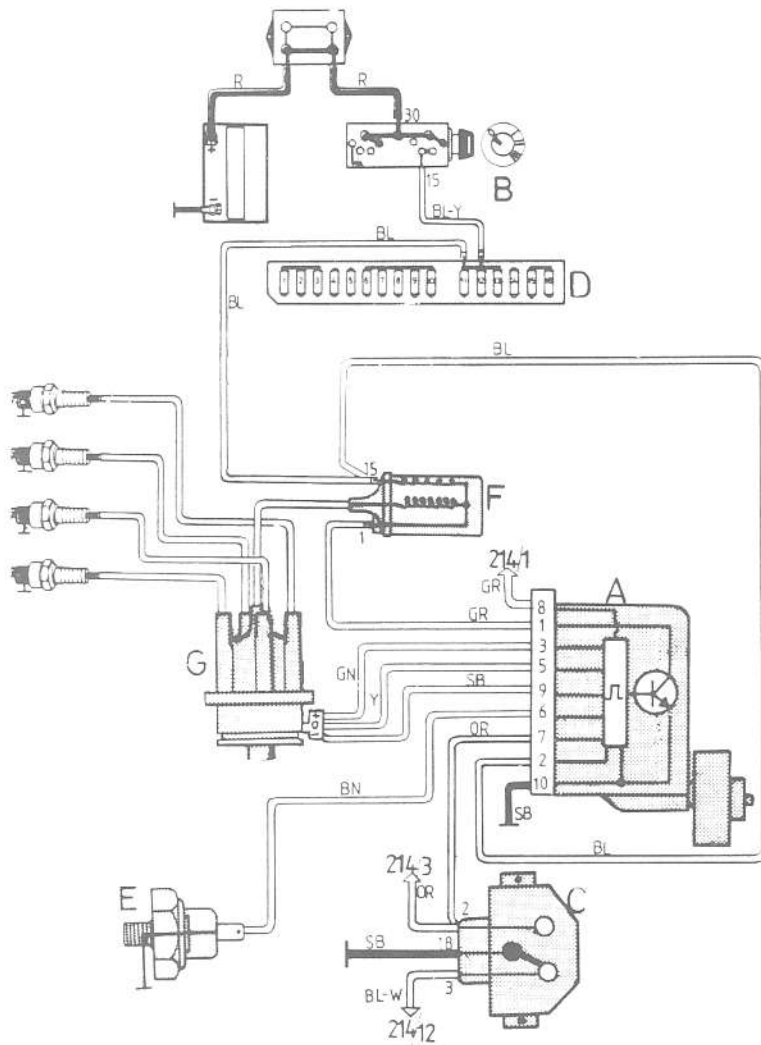

- A Control unit
- B Ignition switch
- C Breaker unit
- D Fusebox
- E Knock sensor
- F Ignition coil
- G Distributor
- 214 Control Unit
- LH Jetronic


Fuse No. 11

Heated rear window
Overdrive

Colour code


- BL = blue
- GN = green
- BN = brown
- SB = black
- OR = orange
- R = red
- Y = yellow
- W = white

NOTES

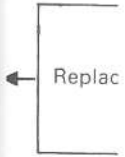

← Replac

Fault tracing chart
B 21 F-MPG/LH B 23 F-LH

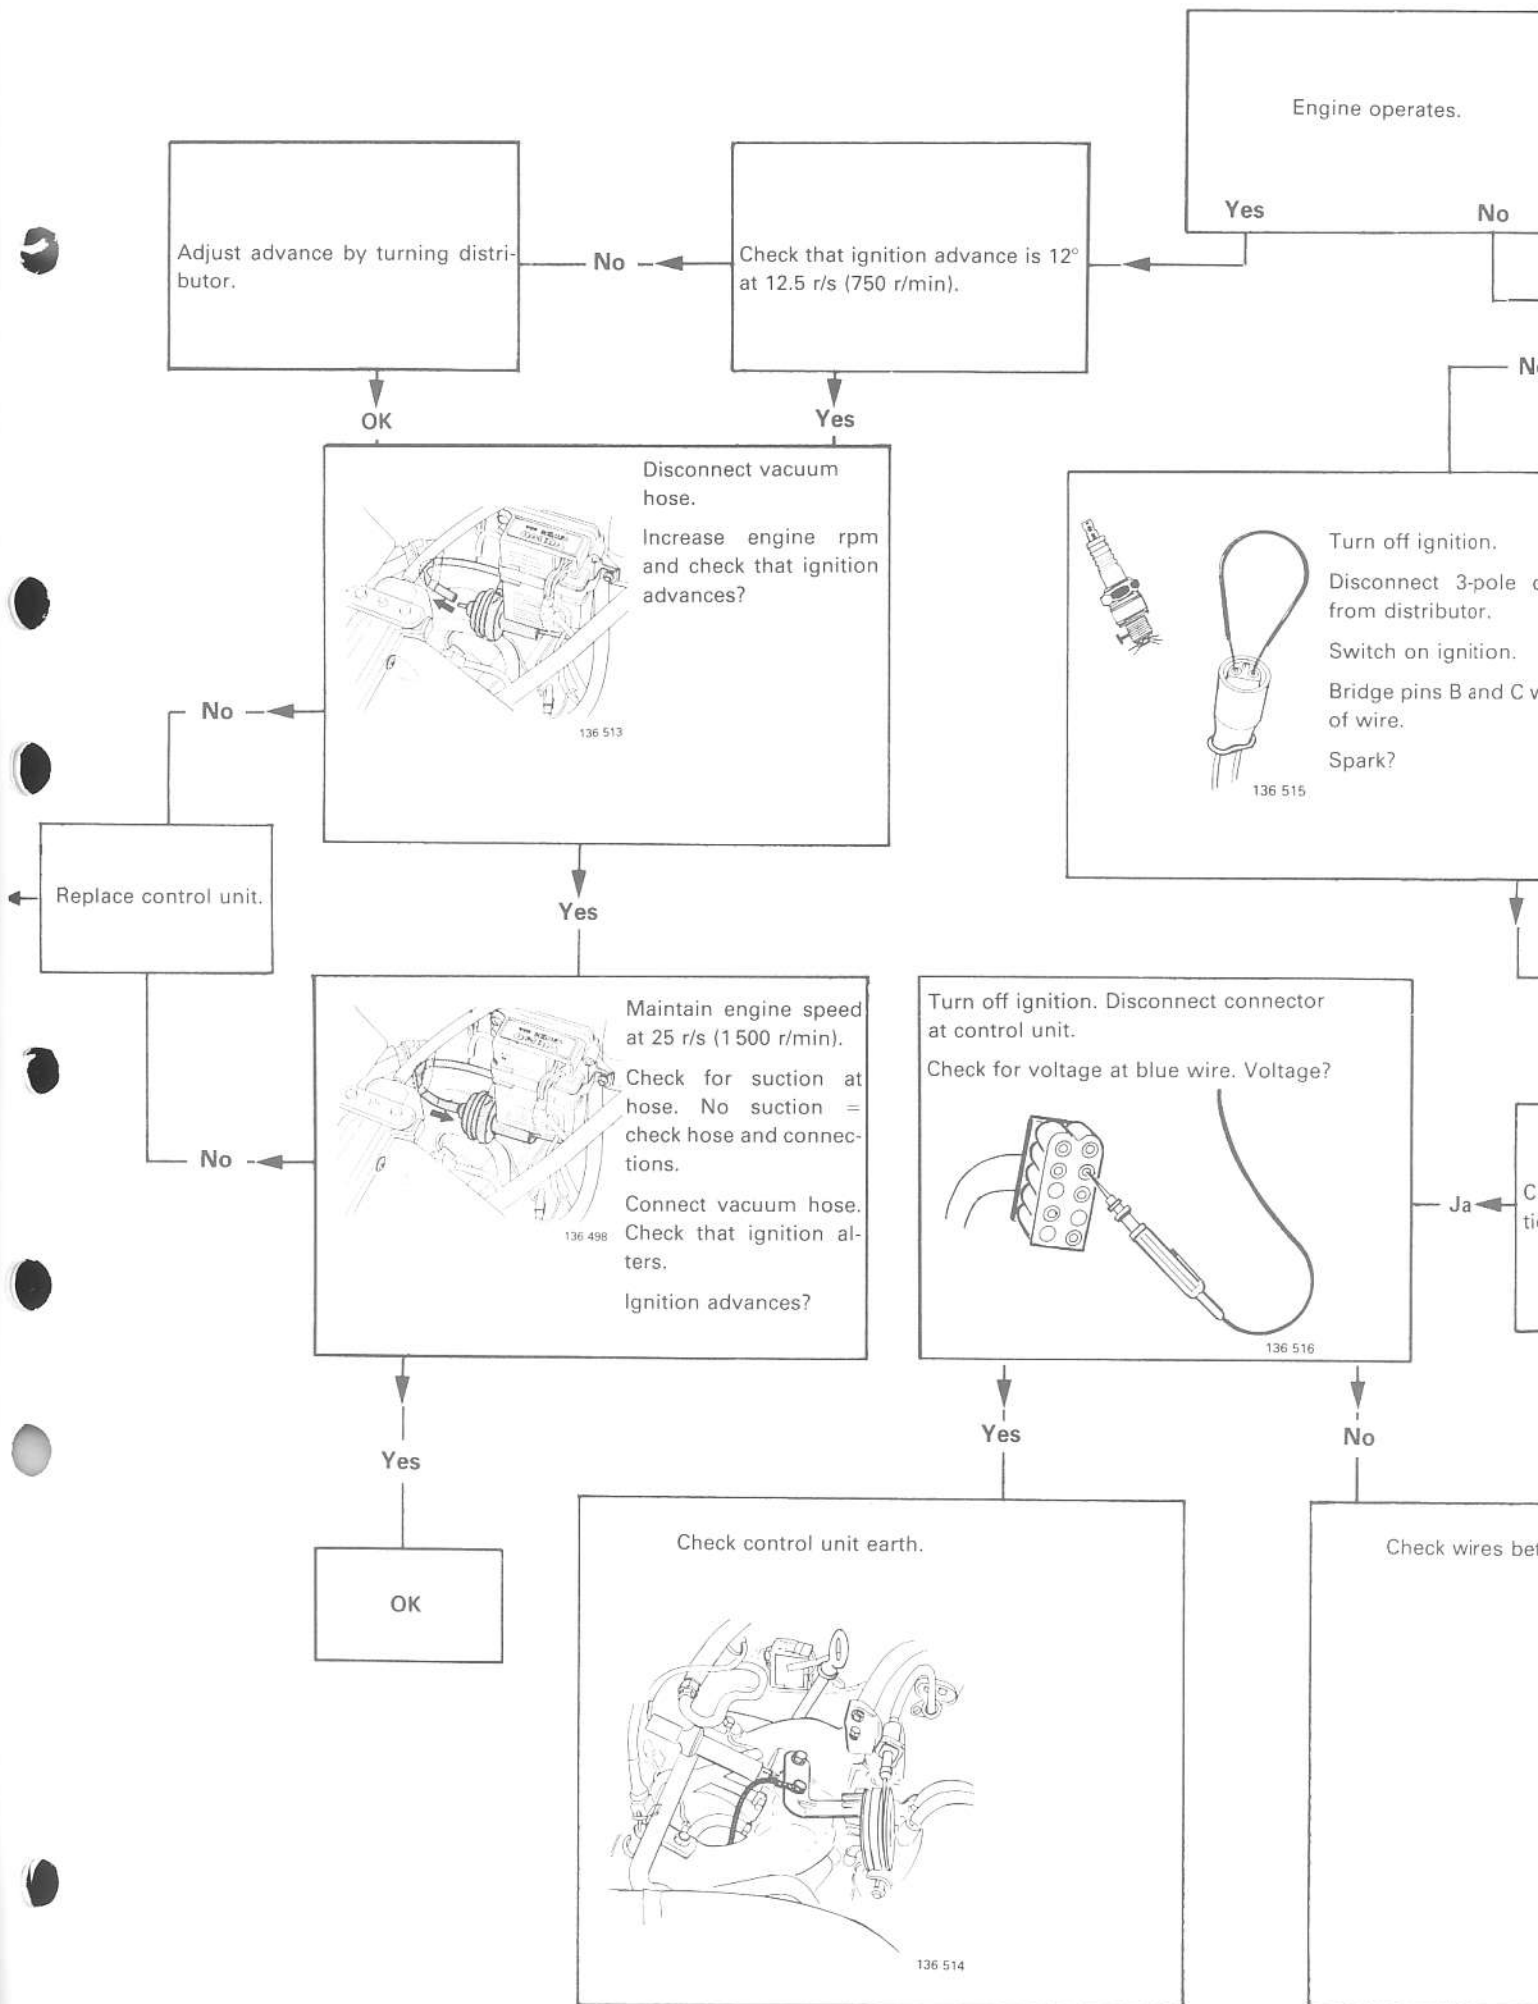

Adjust advance by turning distributor.

OK

Check that ignition advance is 12° at 12.5 r/s (750 r/min).


Yes

Engine operates.

Yes

No

Disconnect vacuum hose. Increase engine rpm and check that ignition advances?

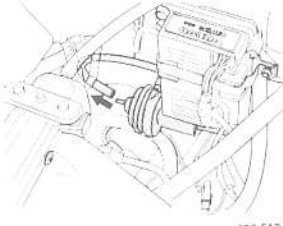


136 513

No

Yes


Replace control unit.

Turn off ignition. Disconnect 3-pole connector from distributor. Switch on ignition. Bridge pins B and C with wire. Spark?

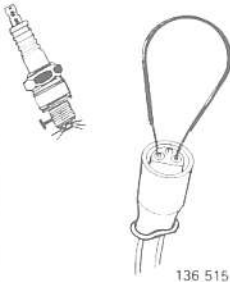

136 515

Maintain engine speed at 25 r/s (1500 r/min). Check for suction at hose. No suction = check hose and connections. Connect vacuum hose. Check that ignition alters. Ignition advances?

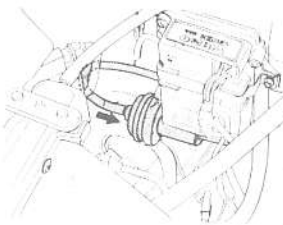


136 498

No

Yes

OK

Turn off ignition. Disconnect connector at control unit. Check for voltage at blue wire. Voltage?

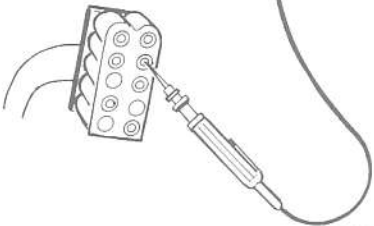


136 516

Ja

Yes








Check control unit earth.

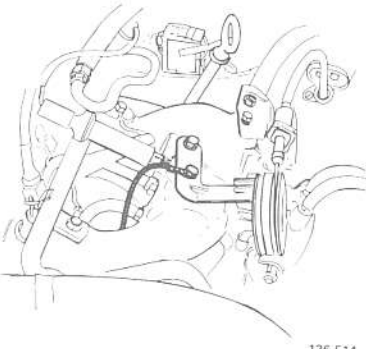

136 514

No


Check wires between...

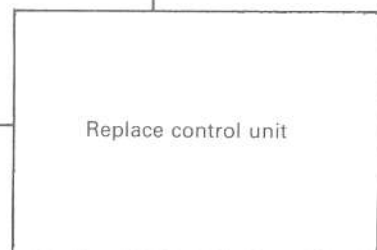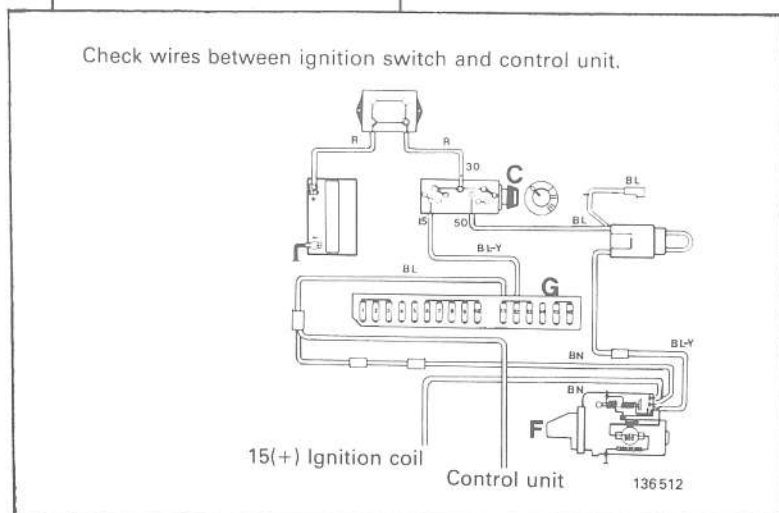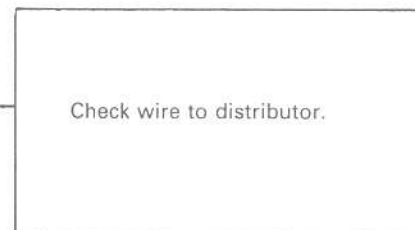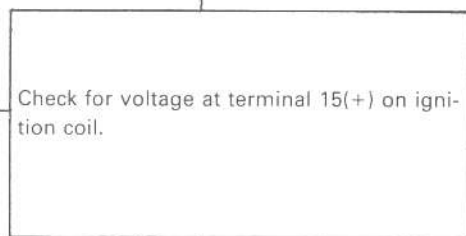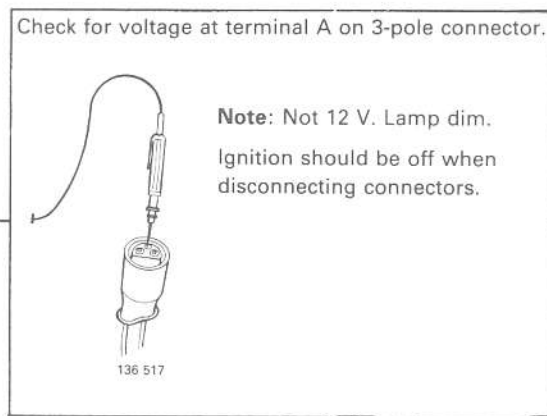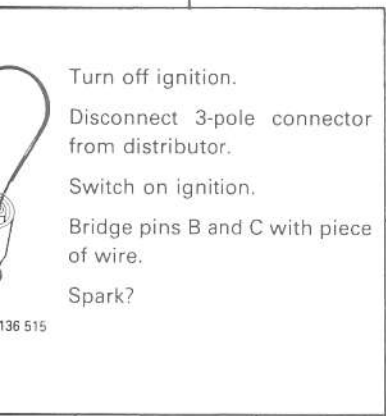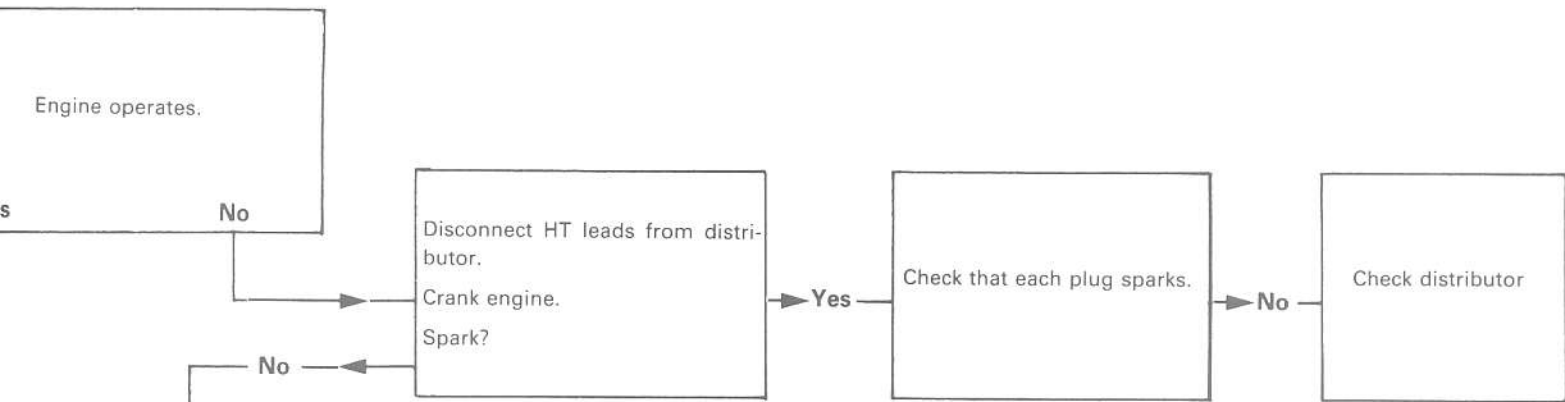

OK

OK





← Repla

Fault tracing chart
B 230 F-LH

Adjust ignition advance by turning distributor

No

Check that ignition advance is 12° at 12.5 r/s (750 rpm). Refer to SB 34:105 for setting instructions.

Yes


Engine starts and runs

Yes

No

OK

Disconnect vacuum hose. Increase engine RPM and check that ignition advances. Advance?

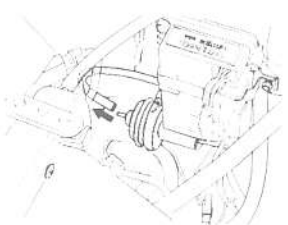


136 513

No

Replace control unit.

Yes


Turn off ignition. Disconnect 3-pole from distributor. **Note:** Check type of distributor. Bosch (1), Chrysler (2). Switch ignition. Connect a bridge wire between B and C. Spark?

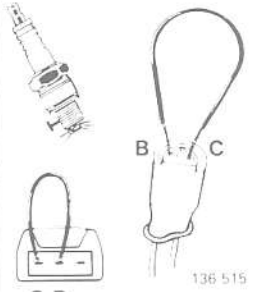

1 2

136 515


Maintain engine speed at 25 r/s (1500 rpm). Check for suction at hose. No suction = check hose and connection. Connect vacuum hose. Check that ignition changes. Ignition changes?

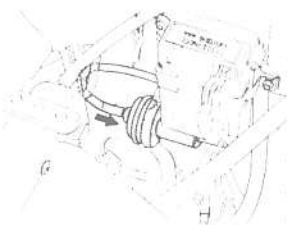

136 498

No

Push test lamp probe through blue wire cover on control unit. Check for voltage. Voltage? **Note:** Do not disconnect connector from control unit.

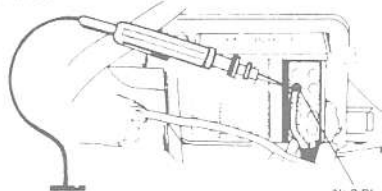

№ 2 BL


Yes

Yes

OK

Yes










Check control unit ground connection.

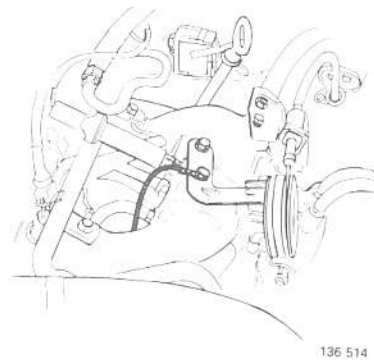

136 514

No

Check wires connection.

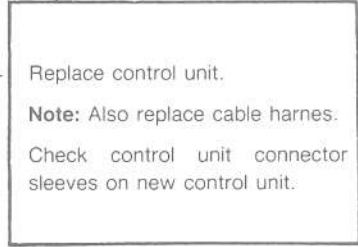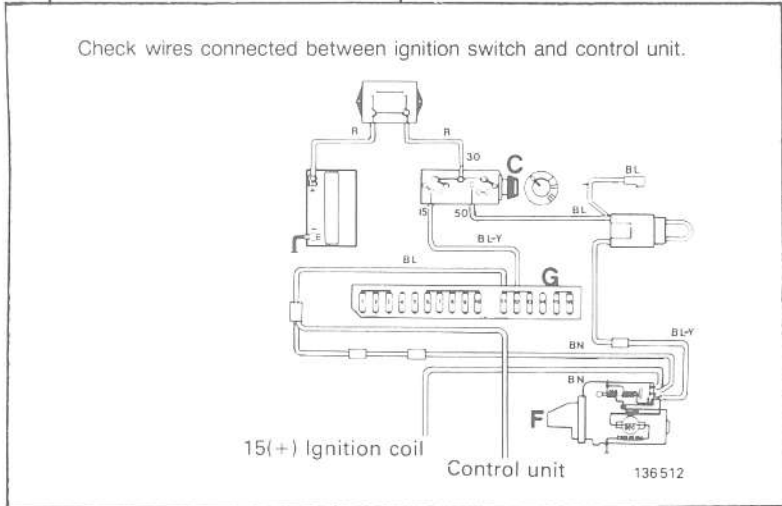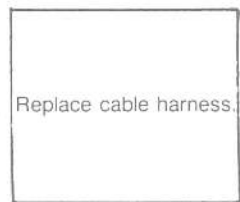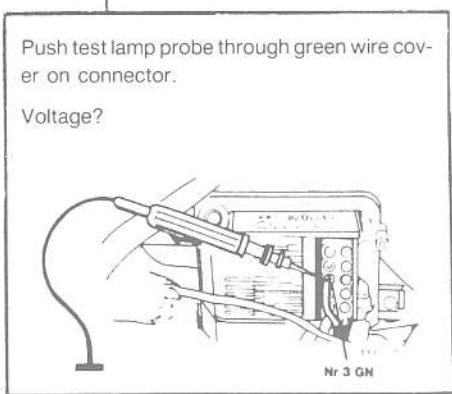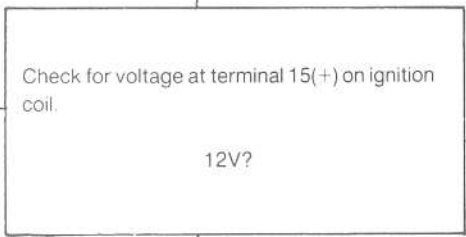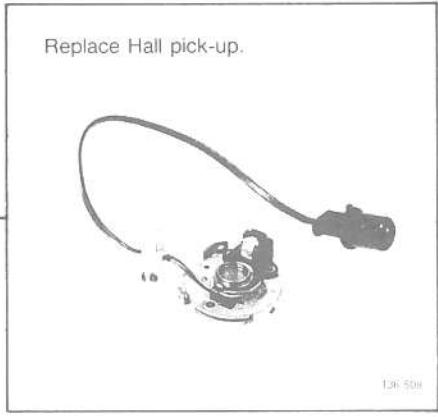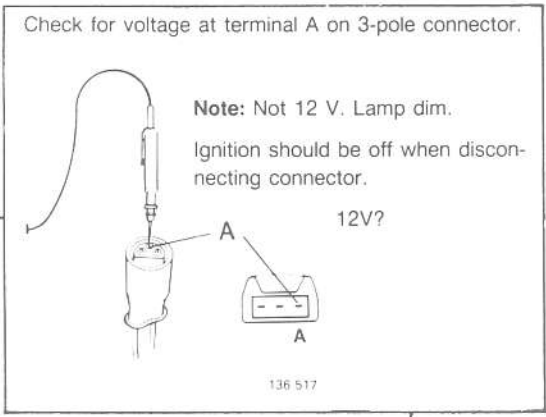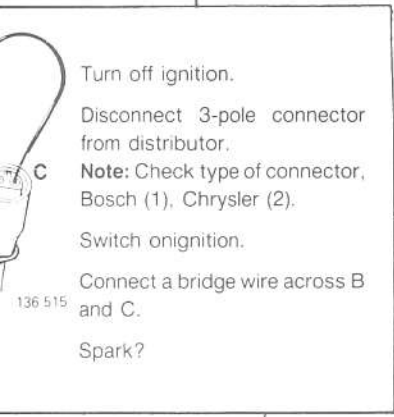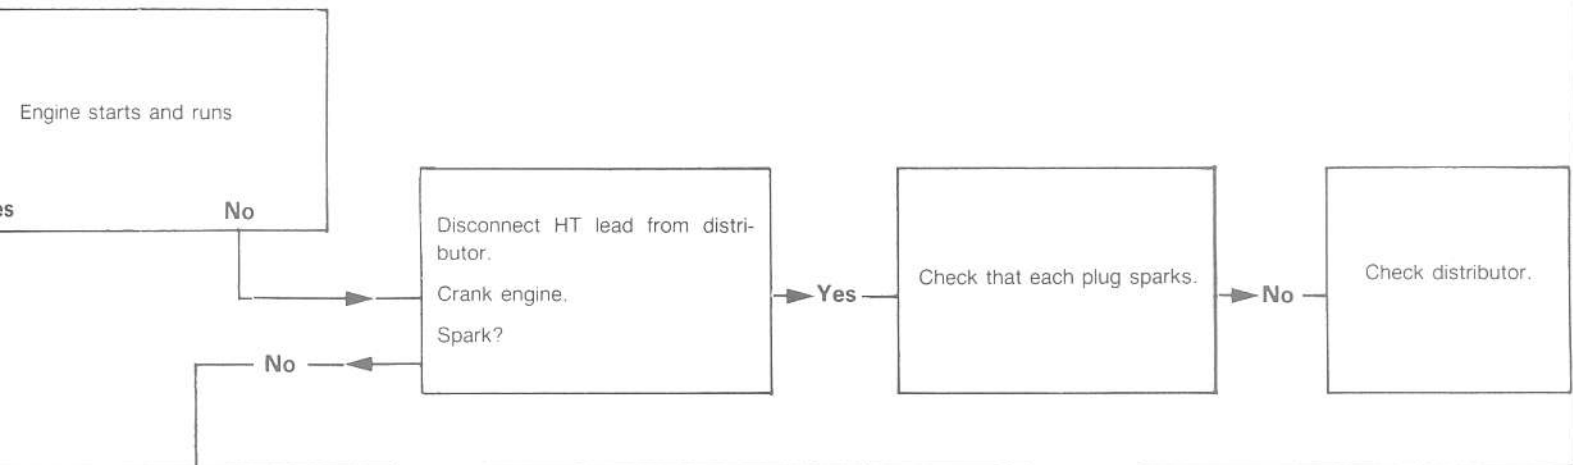



Index

	Operation	Page		
Dwell angle			Earth points	59
Setting	B3-B4	28	Engine speed control	
Checking, A engines (4 cyl)	B4-B5	28	B 21 F-MPG, B 21 F-LH, B 23 F-LH,	
Checking B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	M13	66	B 230 F-LH	M11 65
Ballast resistor			Fault tracing	
A-engines (4 cyl)	A2	26	E/F engines	56
E/F-engines, A-engines (6 cyl)	E2	38	B 21 F-MPG/LH 23 F-LH	75
			B 230 F-LH	77
Centrifugal advance			Firing order	11
B 17A-B 23 A, B 19 K	B7	29	Ground points	59
B 19 E-B 23 E	F6	40	Ignition coils	
B 27A-B 28 F	F6	40	B 17 A-B 23 A	A1-A3 26
B 21-MPG-B 23 F-LH, B 230 F-LH	M8	65	B 19 E-B 23 E, B 27 A-B 28 F	E1-E4 38
			B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	L1-L4 62
Connectors			Ignition retard	
B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	J1-J3	59	B 19/21 E and F-Turbo	F11 43
Contact breaker			Knock sensor	M14-M15 66
Replacement	B3	28	Lubrication, distributor	
Checking dwell angle	B4	28	B 17 A-B 23 A	C6 33
			B 19 E-B 23 E, B 27 A-B 27 F	G29 52
Control unit			Microswitch	
B 19-B 23 E, B 27A-B 28 F	G30	52	B 21 F-MPG, B 21 F-CI 1982	M5-M6 64
B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	N16	70	B 21 F-LH 1982	M7 64
			B 23 F-LH 1983-1985, B 230F-LH	M8-M9 65
Delay valve	B9	30	Sleeve insulators	K7 61
Distributor (B 17 A-B 23 A)			Vacuum advance	
Removing-installing	C3-C4	32	B 17 A-B 23 A	B8-B14 30
Side play	C5	33	B 19 E-B 23 E, B 27 A-B 28 F	F7-F10 42
Testing on test bench	D1-D4	34	B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	M9 65
Lubrication	C6	33	Wiring diagram	
Distributor (B 19 E-B 23 E)			B 21 F-MPG, B 21 F-LH, B 23 F-LH, B 230 F-LH	71
Removing-installing	G3-G4	44	B 230 F-LH	72
Replacement of impulse sender	G5-G11	44	Other E/F engines	55
Side play	G28	51		
Testing on test bench	G31-G34	53		
Distributor (B 21 F-MPG-B 23 F-LH, B 230 F-LH)				
Removing-installing	N3-N4	67		
Replacement of Hall sender, type 1	N1-N2	67		
Replacement of Hall sender, type 2	N9-N14	69		
Distributor (B 27A-B 28 F)				
Removing-installing	G12-G21	47		
Replacement of impulse sender	G22-G27	49		
Side play	G28	51		
Testing on test bench	G31-G34	53		

VOLVO

TP 30432/2

2000.10.85
Printed in U.S.A.